



## CONTROL by WEB X-410CW Web Enabled Programmable Controller User Guide

[Home](#) » [CONTROL by WEB](#) » CONTROL by WEB X-410CW Web Enabled Programmable Controller User Guide



### CONTROL by WEB X-410CW Web Enabled Programmable Controller



## Contents

- 1 Cloud Setup & Cell Activation
- 2 LAN Setup Steps (Recommended for Initial Setup)
- 3 Factory Default Settings
- 4 CUSTOMER SUPPORT
- 5 Documents / Resources
  - 5.1 References
- 6 Related Posts


## Cloud Setup & Cell Activation

(For faster setup, we recommend doing this step first)

1. Register or login to your account at: [www.ControlByWeb.cloud](http://www.ControlByWeb.cloud)
2. Choose 'Devices' from the left navigation bar and click 'New Device'.
3. On the New Device page, select the 'Cell Device' tab.
4. Enter a device name, the last 6 digits of serial number, and the Cell ID (located on the side of the device) and click 'Submit'.
5. You'll be redirected to the Device Edit page. \*Click 'Activate SIM Card'.

**\*Note:** If data plan was purchased separately, first enter Data Plan Code (sent via email) & click 'Apply Data Plan'.

Activation may take 15 minutes. Click 'Check SIM Status' to verify activation.

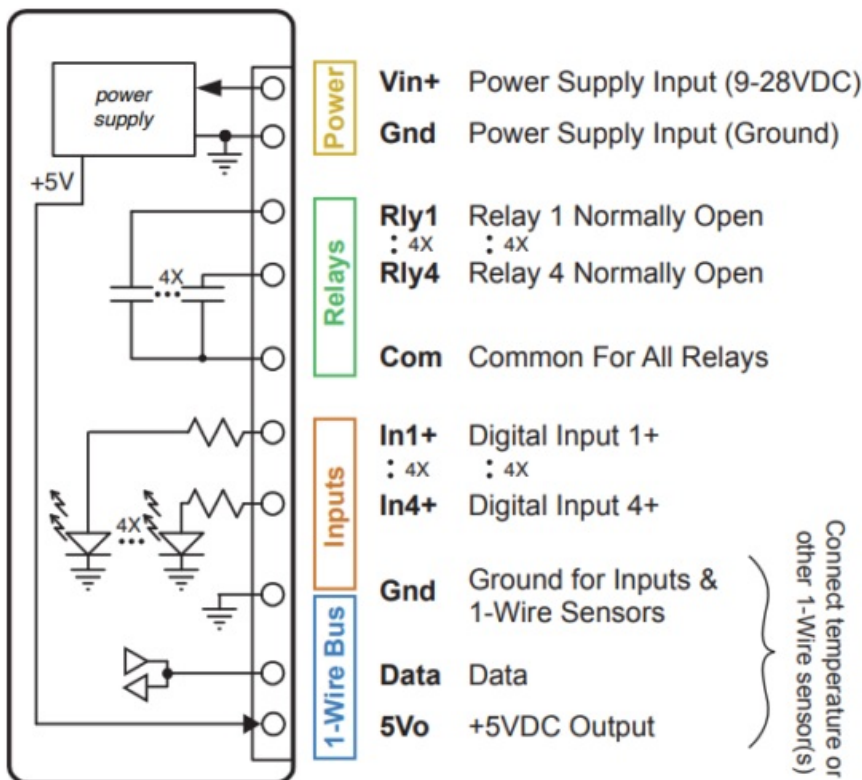

6. Once activated, power up the X-410CW.

May take up to 5 minutes to connect.

## LAN Setup Steps (Recommended for Initial Setup)

1. Power the module and connect to network.
2. Set IP address on computer to be on the same network as the module. (Example: Set computer to 192.168.1.50)
3. To configure the module, open a web browser and enter: <http://192.168.1.2/setup.html>
4. Assign permanent IP address to module, then restart module.
5. Restore computer's IP address, if necessary, and access the module at its new IP address to finish setup.

## Factory Default Settings

**IP Address:** 192.168.1.2

**Subnet Mask:** 255.255.255.0

**Control Page Web Address:** <http://192.168.1.2>

**Control Password:** (no password set)

**Setup Page Web Address:** <http://192.168.1.2/setup.html>

**Setup Username:** admin

**Setup Password:** we relay (all lower case)

## CUSTOMER SUPPORT

1681 West 2960 South, Nibley, UT 84321, USA

[www.ControlByWeb.com](http://www.ControlByWeb.com)

See users manual for setup instructions:

[www.ControlByWeb.com/support/](http://www.ControlByWeb.com/support/)



## Documents / Resources

A thumbnail image of the X-410CW Quick Start Guide. It shows a document with a title "X-410CW Quick Start Guide" and a list of steps for setup. The steps include: 1. Power the module and connect to network. 2. Set IP address on computer to be on the same network as the module. 3. To configure the module, open a web browser and enter: http://192.168.1.2/setup.html. 4. Assign permanent IP address to module, then restart module. 5. Restore computer's IP address, if necessary, and access the module at its new IP address to finish setup.	<p><a href="#">CONTROL by WEB X-410CW Web Enabled Programmable Controller</a> [pdf] User Guide X-410CW Web Enabled Programmable Controller, X-410CW, Web Enabled Programmable Controller, Enabled Programmable Controller, Programmable Controller, Controller</p>
--	--

## References

- [Support - Get Help With Your ControlByWeb Device](#)
- [User Manual](#)

[Manuals](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.