



CONTROL by WEB
X-410W Web Enabled
Programmable Controller



CONTROL by WEB X-410W Web Enabled Programmable Controller User Guide


[Home](#) » [CONTROL by WEB](#) » CONTROL by WEB X-410W Web Enabled Programmable Controller User Guide 

Contents

- [1 CONTROL by WEB X-410W Web Enabled Programmable Controller](#)
- [2 Basic Setup Steps](#)
- [3 Factory Default Settings](#)
- [4 Pinout Diagram](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)



CONTROL by WEB X-410W Web Enabled Programmable Controller

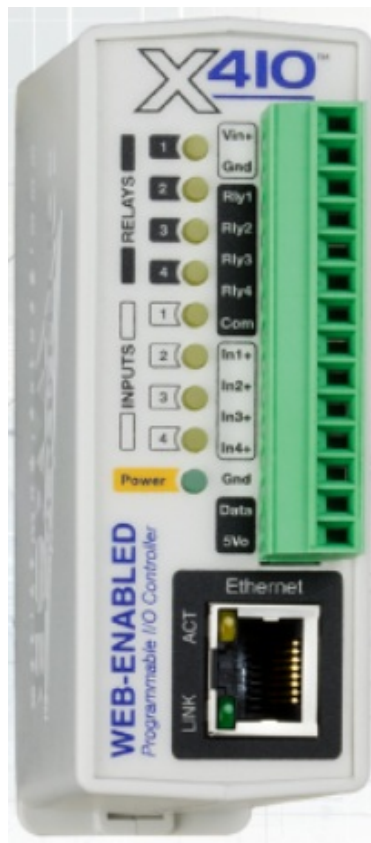


Basic Setup Steps

1. Power the module and connect via ethernet to a computer.
2. Set IP address on computer to the same network as module.
(Ex: 192.168.1.50) **Note:** restore computer settings after setup.
3. To configure module, open web browser and enter: <http://192.168.1.2/setup.html>
4. In General Settings under WiFi, enter the WiFi settings.
5. Assign the module a permanent IP address or enable DHCP.
6. Restart the module for the settings to take effect.

Factory Default Settings

- **IP Address:** 192.168.1.2
- **Subnet Mask:** 255.255.255.0
- **Control Page Web Address:** <http://192.168.1.2>
- **Control Password:** (no password set)
- **Setup Page Web Address:** <http://192.168.1.2/setup.html>
- **Setup Username:** admin
- **Setup Password:** web relay (all lower case)

Pinout Diagram

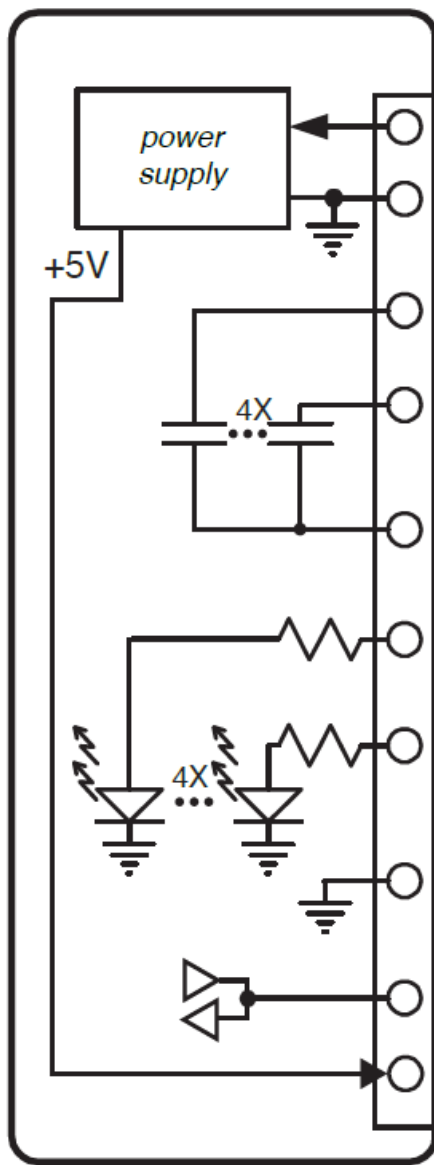

Power

Vin+ Power Supply Input (9-28VDC)
Gnd Power Supply Input (Ground)

Relays

Rly1 Relay 1 Normally Open
 : 4X : 4X
Rly4 Relay 4 Normally Open
Com Common For All Relays

Inputs

In1+ Digital Input 1+
 : 4X : 4X
In4+ Digital Input 4+

1-Wire Bus

Gnd Ground for Inputs & 1-Wire Sensors
Data Data
5Vo +5VDC Output

Connect temperature or other 1-Wire sensor(s)

www.ControlByWeb.com

1681 West 2960 South, Nibley, UT 84321, USA

Documents / Resources

X-410W Quick Start Guide Basic Setup Steps 1. Power the module and connect it to a computer. 2. Set IP address to 192.168.1.1 on the module. 3. To configure module, open web browser and enter: http://192.168.1.1 (or http://192.168.1.1:8080). 4. In General Setup, under IP, enter the IP settings. 5. Assign the module a password (IP address or enable 1-Wire). 6. Reconnect module to the settings to take effect. Flashing Default Settings IP Address: 192.168.1.1 Subnet Mask: 255.255.255.0 Control Page Web Address: http://192.168.1.1 Control Password: (password not set) Setup Page Web Address: http://192.168.1.1:8080/Setup.html Setup Username: admin Setup Password: (password not set) See user manual for setup instructions. www.ControlByWeb.com/Support/	CONTROL by WEB X-410W Web Enabled Programmable Controller [pdf] User Guide X-410W Web Enabled Programmable Controller, X-410W, Web Enabled Programmable Controller, Enabled Programmable Controller, Programmable Controller, Controller
--	---

References

- [Support - Get Help With Your ControlByWeb Device](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.