



Control4 App on Apple Watch User Guide

[Home](#) » [Control4](#) » Control4 App on Apple Watch User Guide 



APPLE WATCH INSTALL GUIDE
FOR THE CONTROL4 APP



Contents

- [1 Control4 App on Apple Watch](#)
- [2 IF THE CONTROL4 APP DOES NOT APPEAR ON YOUR APPLE WATCH](#)
- [3 IF THE CONTROL4 APP IS BLANK](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

Control4 App on Apple Watch

Apple Watch now supports the Control4 App with this new update! Your selected Favorites will now appear on the Apple Watch for easy access to the media and devices you use the most. Accessible, one-touch controls on your

wrist make your home more convenient and easier to use than ever before.

Ensure your iPhone, Apple Watch, and the Control4 App for iOS are all updated to the latest version to begin.

Press the Digital Crown to the Home Screen and look for the Control4 App!

What if you don't see it? Follow the steps below or watch our quick video to learn how to install the Control4 App on your Apple Watch, add your favorites, and see it in action! Check out our "How Do I" video [here](#).

IF THE CONTROL4 APP DOES NOT APPEAR ON YOUR APPLE WATCH

1. Using your iPhone, open the Watch App
2. Scroll down to UNINSTALLED APPS
3. Find the Control4 App and tap INSTALL
4. Once installed, using your iPhone, open the Control4 App
5. On the Apple Watch, press the Digital Crown
6. Find the Control4 App and tap to open

IF THE CONTROL4 APP IS BLANK


1. Using your iPhone, open the Control4 App
2. On the Apple Watch, press the Digital Crown
3. Find the Control4 App and Tap to open
4. The app on the Apple Watch will sync your project from the Control4 App on your iPhone

IF THE CONTROL4 APP SAYS 'NO ROOMS FAVORITED'

1. Because of the size of the screen, the Apple Watch cannot display the pages that you see in the Control4 App for iPhone. The Control4 App on the Apple Watch will only show:
 - Rooms that you have Favorited ()
 - Devices that have been Favorited
 - Media that has been Favorited
2. However, Favorited Media must execute an audio stream to display on the Apple Watch. For example, if you favorite an Album, a Track, or a Playlist, those buttons will appear on the Apple Watch. Favorites that take you to a page will not appear on the Apple Watch. For example, if you Favorited the Playlist Page or an Album Page, they will not appear on the Apple Watch. To learn about Favoriting devices and media, [watch our video](#).

An active subscription to 4Sight is required to enjoy the Control4 App on the Apple Watch when you are away from home. 4Sight is Control4's subscription for cloud services; you can learn more about it [here](#).



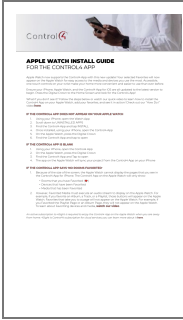

[Control4 Control4 App on Apple Watch](#) [pdf] User Guide
Control4 App on Apple Watch, App on Apple Watch, Apple Watch, Watch