

coocaa play1 Computer Speaker User Manual

Home » coocaa » coocaa play1 Computer Speaker User Manual 🖺



 
Contents

- 1 coocaa play1 Computer Speaker User Manual
- 2 1. Packing List
- 3 2. Specification
- 4 3. Function Description
- **5 4. Operating Instructions**
- 6 5. After-sales Services and Warranty
- **7 6. The Toxic and Hazardous Substances or**


Elements

- 8 7. FCC Caution
- 9 Documents / Resources
- **10 Related Posts**

coocaa play1 Computer Speaker User Manual



 1. Packing List



Speaker







USB power cord




User manual

2. Specification


| Model | Play1 | | | |
|-------------------------|---------------------------------------|--|--|--|
| Bluetooth | V5.0 | | | |
| Frequency | 100Hz-20KHz | | | |
| S/N Ratio | >70dB | | | |
| Speakers | Full-Range Driver: 2-inch*2 | | | |
| Low Frequency Radiation | Runway Radiator | | | |
| Power | 3W*2 | | | |
| Interface | Bluetooth, 3.5mm AUX cable, 3.5mm MIC | | | |
| Output | 3.5mm earphone | | | |
| Dimension | L420*W61*H64.5mm | | | |

3. Function Description

a.Function display (front)

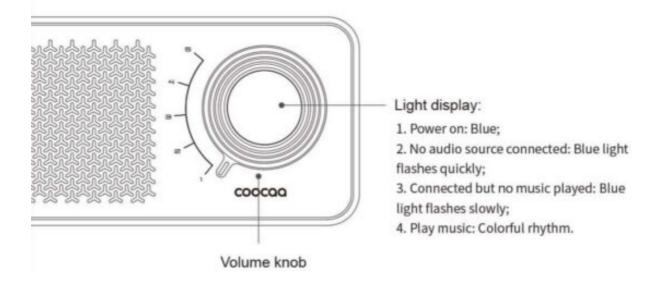

b.Interface (back)

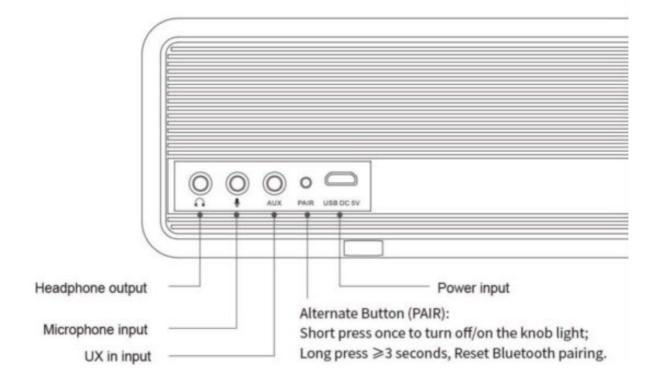

4. Operating Instructions

a. Turn on

Take out the USB power cord from the package accessories, plug it into the DC 5V jack on the back of the speaker, and then plug the USB interface end in a 5V USB charger (the charger can be used with mobile phone chargers, etc.), or a computer's USB port, speakers will starts automatically.

b. Wired/wireless mode switching:

1. It default Bluetooth mode when starting up (voice prompt: Bluetooth mode);

2. When the AUX audio cable is inserted, it will automatically switch to AUX mode (voice prompt: AUX mode); unplug the AUX audio cable, automatically switch to Bluetooth mode.

c. Bluetooth wireless connection:

- 1. After turning on the speaker, making sure that the AUX audio cable is not plugged in, and search for "Coocaa playl" on your Bluetooth device, then pair to the speaker. You can use Bluetooth to play music when successfully connected;
- In the Bluetooth mode, If you want to connect to another device, you need to disconnect the previously connected one, and then use another device to repeat the previous Bluetooth connection steps.

d. AUX in wired connection:

- 1. Take out the 3.5mm AUX audio cable, plug one end into the AUX interface on the back of the speaker (voice prompt: AUX mode), and connect the other end to the audio source device to play music;
- 2. When you need to switch from AUX wired to Bluetooth wireless mode, please unplug AUX wired and the product will automatically switch to Bluetooth wireless mode.

e. 3.5mm MIC interface:

In any mode, insert the 3.5mm connector microphone into the MIC input port on the back to enter the microphone call.

f. Play operation of external earphone:

In any mode, plug the earphone into the earphone output port on the back, you can enter the earphone to listen to music through the speaker.

Note:

- 1. Please charge the speaker with a 5V 2A charger, so as to avoid insufficient power supply, broken sound, or other noise;
- 2. It is strongly recommended to choose a high-quality 3.5mm connector microphone to avoid howling during using MIC interface;
- 3. When using a computer USB port for power supply, due to insufficient power supply for some computer USB ports, slight distortion or sound interruption may occur during playback at maximum volume. At this time, please adjust the volume or change the power supply method;
- 4. The speaker supports Win7 and above systems, Mac systems.

5. After-sales Services and Warranty

- 1. 30-Day Return of Any Reason. You may return your undamaged product and packaging within 30 days, please return the unit in its original carton.
- 2. 12-Month Warranty for Quality-Related Issues. If it is not quality related, the customer must pay the return shipping costs and repair costs.

- 3. In the following circumstances, we will not be able to provide you with free services:
 - (1) Exceeding the warranty period;
 - (2) All damage caused by human factors, including damage caused by improper use or storage, such as liquid entry, external force squeezing, and falling damage etc.;
 - (3) Damage caused by unauthorized disassembly or repair,
 - (4) Damage caused by other force majeure factors. (such as floods, fires, etc.)
- 4. If you have any questions or comments, please contact us at support@coocaa.com. We will reply to you within 12 hours.

| Name | Email | |
|----------------------|----------|--|
| Address | | |
| Date of Purchase | Order ID | |
| Fault description | | |

6. The Toxic and Hazardous Substances or Elements

| Part Name | Toxic or harmful substances or elements | | | | | | |
|---------------|---|-----------------|-----------------|------------------------------------|--------------------------------------|--|--|
| | Lead (Pb) | Mercury (Hg) | Cadmium (Cd) | Hexavalent Chromium (Cr(VI)) | Polybrominated biphenyls (PBB) | Polybrominated Diphenyl Ether (PBDE) | |
| PCB part | X | 0 | 0 | 0 | 0 | 0 | |
| Plastic part | 0 | 0 | 0 | 0 | 0 | 0 | |
| Metal part | × | 0 | 0 | 0 | 0 | 0 | |
| Speaker | 0 | 0 | 0 | 0 | 0 | 0 | |
| Power adapter | X | 0 | 0 | 0 | 0 | 0 | |

This form was prepared in accordance with the provisions of SJ/T 11364.

O:Indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirement specified in accordance with the GB/T 26572.



 
X:Indicates that the content of the hazardous substance in all homogeneous materials of the part is exceeding the limit requirement specified in accordance with the GB/I 26572. There is no mature alternative solution that meets the requirements of RoHS.



The numbers in this mark indicate that the environmental protection use period of the product under normal use is 10 years. Some components may also have an environmental protection use period indication, and the environmental protection use period is subject to the figures in the indication. Due to different product models, the product may not include all the above parts except the host, please refer to the product packaging.



Only suitable for areas below altitude of 2 000 m



7. FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Mobile device:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

The speaker reaches full acoustic performance after it has played music for about 7 days at 2/3 volume

Read More About This Manual & Download PDF:

Documents / Resources



coocaa play1 Computer Speaker [pdf] User Manual PAY1, 2AXCLPAY1, play1 Computer Speaker, Computer Speaker

Manuals+,