


# coocaa Play2S Wired Speaker User Manual

Home » coocaa » coocaa Play2S Wired Speaker User Manual




**Packing List** 


• Speaker X2

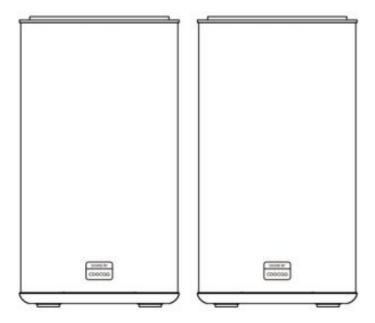

• USB power cord X1

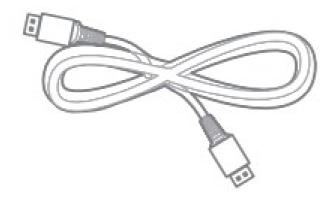

• AUX audio cable X

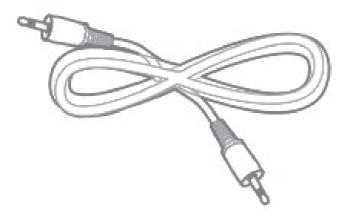

Manual X1



#### **Contents**


- **1 Product Parameters**
- **2 Function Description**
- **3 Operating Instructions**
- **4 The Toxic and Hazardous Substances or Elements**
- **5 FCC Caution**
- **6 Documents / Resources**
- **7 Related Posts**

# **Product Parameters**


Model	Play2S
Bluetooth	V5.0
Frequency	100Hz-20KHz
S/N Ratio	70dB
Distortion Rate	≤1%
Speakers	4Ω 5W
Connection Line	AUX audio cable, USB power cable (data cable)
Operating Temperature	-5 – 40°C
Product Size	93×93×173mm

# **Function Description**

• Audio input

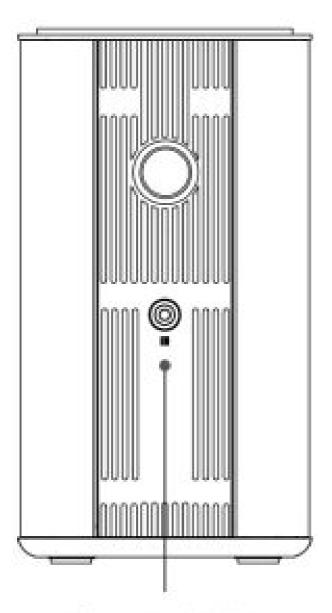

# Connection line

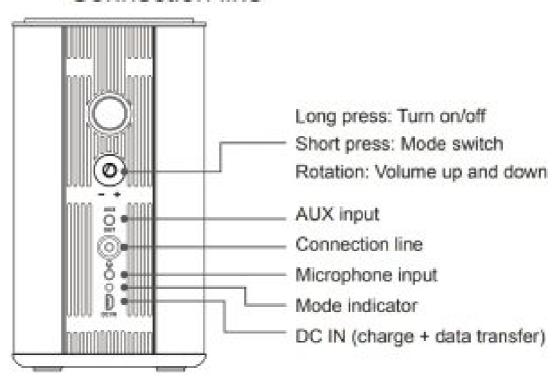

Long press: Turn on/off Short press: Mode switch Rotation: Volume up and down

**AUX** input

Connection line

Microphone input

Mode indicator

DC IN (charge + data transfer)

#### The three modes correspond to the indicator status

	Input mode	Blue	Red	Red / blue
USB mode			Long brigh	
AUX mode				Long bright
Bluetooth Mo de	Bluetooth waiting for pairing Bluetooth paired	Flashing		
		Long bri		

# **Operating Instructions**

#### Power on

- 1. Insert one end of the supplied USB power cable (data cable) into the DC IN jack of the R speaker (main unit), and then insert a 5V USB charger (the charger can be used with mobile phone chargers, etc.) at the USB interface, or a computer's USB port. The speaker turns on automatically.
- 2. In any mode, press and hold the "volume button" for 3 seconds, the speaker will turn off and the indicator light will go out; in the shutdown state, press the "volume button" to turn it on.

## • USB sound card decoding and playback

- 1. Use the USB cable to connect the R speaker and the computer, (The computer will automatically install the audio driver for the first time), the audio will automatically turn on and the red indicator light will be on;
- 2. Note: Please remember turn on the speaker first, then open the music file on the computer.

#### AUX in mode

Insert the 3.5 audio cable into the AUX in interface of the R speaker, short press the "volume button" to switch the mode to AUX mode, the indicator light of the R speaker turns into alternating red and blue, then you can play the music on the source device .

#### · Bluetooth wireless mode

1. Short press the "volume button" to switch to Bluetooth mode, the blue indicator light flashes, then open the Bluetooth device search "CoocaaPlay2S" and connect, after the connection is successful, you can play music on the speaker via Bluetooth;

2. If you want to switch the Bluetooth device connection, you need to disconnect the previously connected Bluetooth device, and then use another Bluetooth device to search for connection and play.

#### • 3.5mm interface MIC microphone

In any mode, insert the 3.5mm connector MIC microphone into the MIC input port to use the microphone function.

#### · Powered by charger

Insert the USB cable connected to the R speaker into the 5V DC power adapter (the adapter is not included, please purchase separately, it is recommended to use an adapter with current  $\geq$  1A), and the speaker will automatically turn on.

#### Note

- 1. Please charge the speaker with a 5V 2A charger, so as to avoid insufficient power supply, broken sound, or other noise;
- 2. It is strongly recommended to choose a high-quality 3.5mm connector microphone to avoid howling during using MIC interface;
- 3. When using a computer USB port for power supply, due to insufficient power supply for some computer USB ports, slight distortion or sound interruption may occur during playback at maximum volume. At this time, please adjust the volume or change the power supply method;
- 4. The speaker supports Win7 and above systems, Mac systems.

Name	Email	
Address		
Date of Purch ase	Order ID	
Fault Description		

### The Toxic and Hazardous Substances or Elements

	Toxic or harmful substances or elements						
Part Name	Lead	Mercury	Cadmium	Hexavalent C hromium	Polybrominate d biphenyls	Polybrominated Diphenyl Ether	
PCB part	Х	0	0	0	0	0	
Plastic part	0	0	0	0	0	0	
Metal part	х	0	0	0	0	0	
Speaker	0	0	0	0	0	0	
Power adapter	Х	0	0	0	0	0	

**O:** Indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirement specified in accordance with the GB/T 26572.

**X:** Indicates that the content of the hazardous substance in all homogeneous materials of the part is exceeding the limit requirement specified in accordance with the GB/I 26572. There is no mature alternative solution that meets the requirements of RoHS.

The numbers in this mark indicate that the environmental protection use period of the product under normal use is 10 years. Some components may also have an environmental protection use period indication, and the environmental protection use period is subject to the figures in the indication. Due to different product models, the product may not include all the above parts except the host, please refer to the product packaging.



Only suitable for areas below altitude of 2 000 m.



Only for use in non-tropical climates.

#### **FCC Caution**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for aClass B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

\*RF warning for Mobile device:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body



## **Documents / Resources**



coocaa Play2S Wired Speaker [pdf] User Manual
PLAY2S, 2AXCL-PLAY2S, 2AXCLPLAY2S, Play2S Wired Speaker, Wired Speaker, Speaker

Manuals+,