

COOL CENTER MC58-UM Electronic Temperature Controller



COOL CENTER MC58-UM Electronic Temperature Controller User Manual

[Home](#) » [COOL CENTER](#) » COOL CENTER MC58-UM Electronic Temperature Controller User Manual 

Contents

- [1 COOL CENTER MC58-UM Electronic Temperature Controller](#)
- [2 Connecting the Power](#)
- [3 Temperature Control](#)
- [4 Snowflake/Defrost Function](#)
- [5 Power Switch](#)
- [6 Temperature can be changed in the following way](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)



COOL CENTER MC58-UM Electronic Temperature Controller



Connecting the Power

To turn on the device, locate the light switch at the back of the unit and toggle it to the 'On' position.

Temperature Control

Use the SET button to adjust the temperature settings. Press the SET button and then use the up/down buttons to set your desired temperature.

Snowflake/Defrost Function

If your unit has a snowflake/defrost button, press it to activate the special function for cooling or defrosting.

Power Switch

Toggle the power switch to turn the unit on or off.

Temperature can be changed in the following way




Kuva 5 / Picture 5

1. Press the "SET" button until "°C" starts to blink.
2. Choose the desired temperature by pressing the up or down -button.
3. The new temperature is saved automatically.

4. The display returns automatically showing a cooler inner temperature.
 5. It takes some time to reach the desired temperature. A new temperature appears on the panel when it is reached.
 6. During the automatic defrost, a snowflake icon appears on the screen. This is a fully automatic operation and does not require any action from the user.
-

Documents / Resources

	<p>COOL CENTER MC58-UM Electronic Temperature Controller [pdf] User Manual MC58-UM Electronic Temperature Controller, MC58-UM, Electronic Temperature Controller, Temperature Controller, Controller</p>
---	---

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.