



Coolblue 941834 Ergonomic Mouse User Guide

Home » coolblue » Coolblue 941834 Ergonomic Mouse User Guide 🖫

Contents

- 1 Coolblue 941834 Ergonomic Mouse
- **2 CONNECT YOUR MOUSE USB**
- **3 CONNECT YOUR MOUSE BLUETOOTH**
- **4 CHARGE YOUR MOUSE**
- **5 ADJUST THE DPI**
- 6 CONNECT YOUR MOUSE TO YOUR DEVICE
- **7 NAVIGATE WITH YOUR MOUSE**
- **8 SCROLL WITH YOUR MOUSE**
- **9 EXTRA THUMB BUTTON**
- **10 DECLARATION OF CONFORMITY**
- 11 Specifications
- 12 Frequently Asked Questions (FAQ)
- 13 Documents / Resources
 - 13.1 References
- **14 Related Posts**




Coolblue 941834 Ergonomic Mouse




CONNECT YOUR MOUSE USB

Remove the foil and turn the mouse on. Take the USB receiver out of the mouse and stick it into the USB-A port of your laptop or desktop. The connection should be established within a couple of seconds.

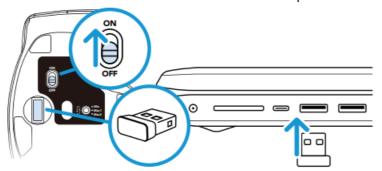

CONNECT YOUR MOUSE BLUETOOTH


Press the connection button and set it to the desired Bluetooth channel. Next, press and hold the button until the light starts flashing. Open the Bluetooth settings on your laptop or desktop and select the mouse. The connection should establish within a couple of seconds. Use your mouse on multiple devices? Repeat this step. You can easily switch between the channels with this connection button.

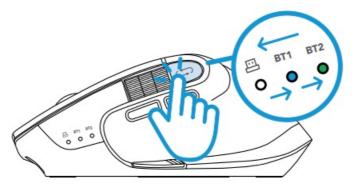

CHARGE YOUR MOUSE


If the light on the side of your mouse is flashing, the battery is empty. Charge the mouse with the included USB-C to USB-C cable. You can connect this to the USB-C port of your device. Don't use fast chargers. The mouse

doesn't support this and it shortens the lifespan.

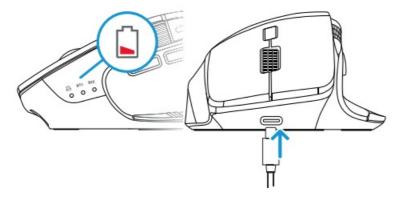


ADJUST THE DPI

Adjust the speed of your mouse by adjusting the DPI. Briefly press the button on top of the mouse. You can choose from 4 speeds: 1000DPI (slow), 1600DPI (medium), 2400DPI (fast), and 3200DPI (very fast).

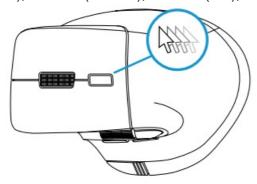


CONNECT YOUR MOUSE TO YOUR DEVICE

Connect your mouse to the right device and use all functions without any issues. Briefly press the red button at the bottom of the mouse to choose between Windows, Mac1 OS, and Mac2 OS. The flashing light indicates the setting. Press the button for 5 seconds to return it to factory settings.

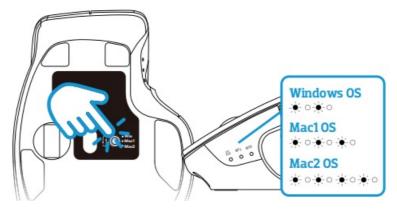


NAVIGATE WITH YOUR MOUSE

In addition to the left and right mouse button, you can find 2 extra buttons on the left side of the mouse: the 'forward' and 'backward' buttons. With these, you can navigate between different pages in your browser with your thumb.

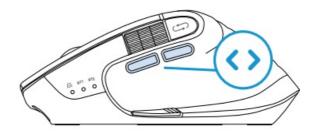


SCROLL WITH YOUR MOUSE

This mouse has 2 scroll wheels. There's a 'smart flying' scroll wheel on the front. Scroll at a high speed by quickly spinning the wheel forwards or backward. With the scroll wheel on the side, you can horizontally scroll through your files.

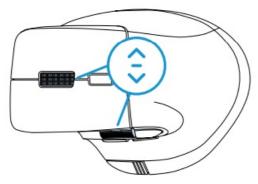

EXTRA THUMB BUTTON

When you work on a Mac, you can quickly switch between 'full screen' and 'exit full screen'. Working with Windows? Go back to the 'home screen' with 1 click.

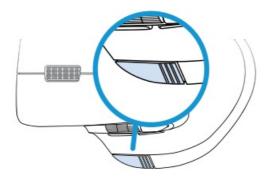

DECLARATION OF CONFORMITY

SAFETY INSTRUCTIONS

- 1. Always follow these instructions and note the warnings, save this document for future use as long as you own or use the device, and give it to the next users of the device.
- 2. Make sure you read and understand the entire manual before you use the device.
- 3. Use the device only in the application for which it is intended, namely as a pointing device that is connected to a laptop or computer to control the cursor on the screen with a hand movement.
- 4. Before you connect a device, check if the output power of the charger provides enough power for the connected device.
- 5. Don't expose the device to extreme heat, like sunlight or fire. Avoid sudden temperature shifts.
- 6. Don't use or use the device in moist or wet conditions.

- 7. Don't use the device close to explosive gasses or flammable materials.
- 8. Don't burn the device.
- Avoid contact with the chemicals of the battery. When the chemicals of the battery come into contact with skin or the eyes, stop using the device right away, use plenty of water to rinse off the chemicals, and contact a doctor.
- 10. Don't throw, shake, vibrate, drop, or mechanically misuse the device, and don't expose it to impacts.
- 11. Don't cover the device with objects that affect the heat dispersal.
- 12. Only use the device with the included cables or with cables that came with the device. Don't use the device when the included cables are damaged or have gotten damaged over time.
- 13. Disconnect the device when it's not in use. Don't charge or discharge the device unsupervised.
- 14. Keep the device away from children.
- 15. Don't disassemble, open, or repair the device.
- 16. Only clean the device with a damp cloth with water. Don't use (aggressive) cleaning agents.
- 17. This device can be used by people with reduced physical, sensory, or mental capacity, or by people without experience and knowledge, given that they're supervised or have gotten instructions about safe use of the product and understand any dangers.

WARRANTY AND LIABILITY

This device comes with a warranty period of five (5) years after the date of purchase. For more information about the warranty terms and conditions, go to https://www.coolblue.nl/en/customer-service. Coolblue B.V. can in no way be held liable for material and immaterial damage suffered by you, others, the device, other property, or the property of others due to non-compliance with the instructions in this manual.

 Hereby, Coolblue B.V. declares that this product is in compliance with RoHS Directive 2011/65/EU and Radio Equipment Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at www.coolblue.nl/en/product/941834.



This symbol on the product indicates that it can't be treated as regular waste, but that it's supposed to be collected separately. Hand the product in at a collection point for the recycling of electronic devices if you live in the EU or in a different European country that has a separate collection system for electronic devices. If you correctly dispose of the product, you help to avoid risks for the environment and public health which might arise by the mishandling of disposed devices. Recycling materials contributes to the maintenance of our natural resources.

Specifications

- Input in Volt and Ampere 5V 250mA
- Output in Volt and Ampere 3.7V 10mA
- Battery capacity 500mAh
- Frequency 2.4GHz
- Weight 120g
- Dimensions 122.6 x 85.05 x 50.34mm
- Operating temperature 0°C ~ 45°C
- Storage temperature -20°C ~ 60°C

· Electrical class I, II, or III III

• Product Name: Maximus Pro Ergonomic Mouse

• Model Number: 941834 - BBMAXP24

• Version: V1.0

• Connectivity: USB, Bluetooth

• DPI Settings: 1000DPI, 1600DPI, 2400DPI, 3200DPI

• Scroll Wheels: 2 (front and side)

• Additional Buttons: Forward, Backward, Thumb Button

Frequently Asked Questions (FAQ)

Q: Can I use this mouse with both Windows and Mac devices?

A: Yes, the mouse is compatible with Windows and Mac devices. You can easily switch between Windows, Mac1 OS, and Mac2 OS settings.

Q: How many DPI settings are available on this mouse?

A: The mouse offers 4 DPI settings – 1000DPI (slow), 1600DPI (medium), 2400DPI (fast), and 3200DPI (very fast).

BlueBuilt is a registered trademark of Coolbue B.V., Weena 664, 3012 CN Rotterdam, The Netherlands.

Documents / Resources



Coolblue 941834 Ergonomic Mouse [pdf] User Guide 941834 - BBMAXP24, 941834 Ergonomic Mouse, 941834, Ergonomic Mouse, Mouse

References

- Service client | Coolblue Tout pour un sourire
- Klantenservice | Coolblue Alles voor een glimlach
- Customer Service | Coolblue Anything for a smile
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.