



CoolGeek M1 Music Frame User Manual

[Home](#) » [CoolGeek](#) » CoolGeek M1 Music Frame User Manual 

Cool Geek M1 Music Frame User Manual



Contents

- [1 Precautions](#)
- [2 Enclosure](#)
- [3 Host overview](#)
- [4 Source](#)
- [5 Disc operation](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

Precautions

Safe

- Read these instructions.
- Heed all warnings.
- Follow all instructions.
- Make sure that the battery voltage matches the device voltage.
- Do not use the device near water.
- Do not install near any heat source, such as radiator, heat accumulator, stove or other heating device.
- Equipment (including power amplifier).
- Prevent the power cord from being cut off. Do not touch the connecting wire at will.
- Use only the accessories/fittings specified by the manufacturer.
- All maintenance shall be carried out by qualified maintenance personnel.
- Any damage to the equipment, such as damage to the circuit board, splashing of liquid, falling of objects, Maintenance is required in the equipment, when the equipment is exposed to rain or damp, or when it fails to operate normally or falls.
- Repair.
- Do not expose the equipment to water leaks or splashes. .
- Do not place any source of danger on this equipment (for example, An object with a liquid, a lighted candle).
- The battery (battery pack or combined battery) shall not be exposed to excessive heat such as sunlight, fire or the like.

In the environment.

- The battery (battery pack or combined battery) shall be charged with the original compatible charger.

Warning


- Do not lubricate any part of the machine. .
- Do not place the device on top of other electrical equipment.
- To prevent damage to the circuit board IC by static electricity, do not touch the circuit board with your hands.


This product contains a low-power laser device. To ensure safe use, do not disassemble any Cover, or attempt to disassemble the inside of the product. Refer to qualified personnel for repair.

Enclosure


- **Host : 1**
- **Remote control : 1**
- **18650 battery : 1**
- **Battery Charging : 1**
- **Case: 1**
- **Picture frame support bar : 2**
- **Operating Manual : 1**
- **Picture frame hook : 2**
- **Picture frame hook screws : 4**
- **Phillips screwdriver : 1**

Host overview

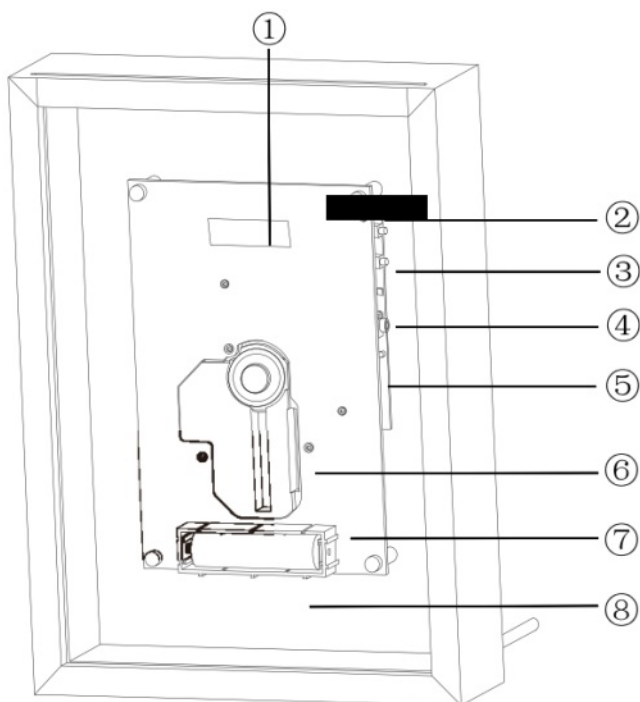

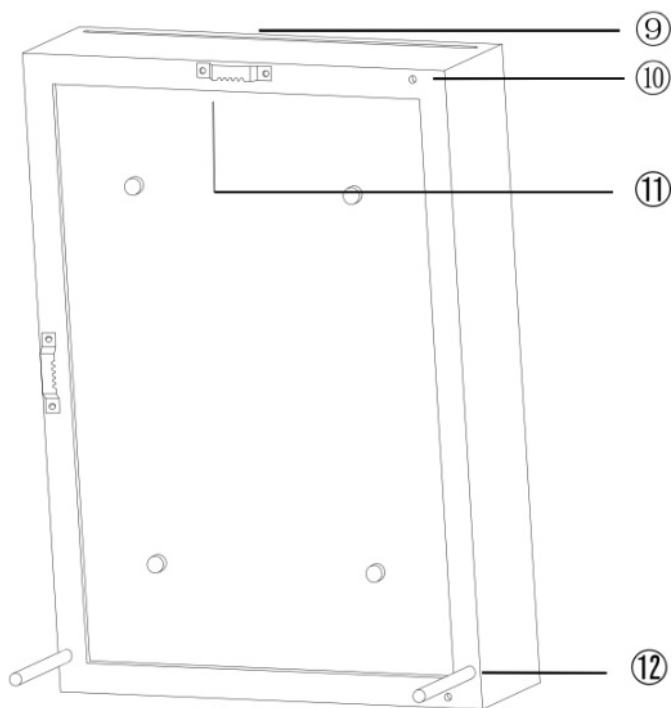

 1. Display screen
2. POWER – Switch button
3. PAIR – Bluetooth reset button
4. 3.5MM audio output interface
5. Remote control induction probe
6. CD movement
7. Battery compartment
8. Acrylic transparent baffle
9. Front bezel notch
10. Embedded nut of support rod of photo frame
11. Photo frame hook
12. Picture frame support rod

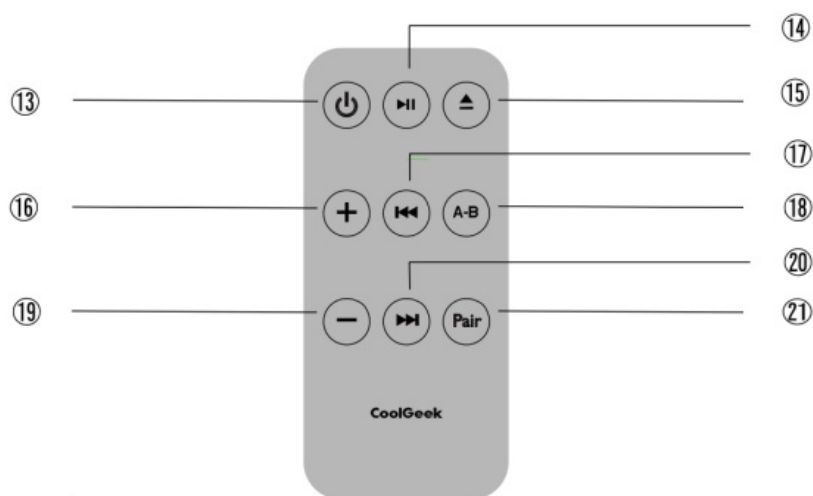

13. Power
14. Pause/Play
15. Out of stock to change disc
16. Volume
17. Part one-song

18. Bluetooth reset
19. Volume +
20. Next-song
21. Playback mode switch

Source

Removing battery

This machine has a removable rechargeable battery for operation.

- In the boot state, if the battery power is low, on the display screen
- Take the battery capacity grid as a reference.
- Charge with a special charging case,
- During charging, the charging box indicator light is on.
- Fully charged, the charging case indicator is green

Note: It is recommended to use the attached battery charging box to charge the local battery.

battery status

- **Full rate** : 75%-100%
- **3 case** : 50% -75% of foot state
- **2 grids** : 25%-50%
- **1 Grid** : represents below 25% (low electric state

The screen battery logo is blank (space: indicates serious low power state, shut down at any time)

Turn on / off

- Shutdown state, long press the POWER button on the local device for 3 seconds or click the power button on the remote control, boot the machine, the screen shows "OPEN" and the last selected sound source before shutdown first power up in CD Bluetooth mode
- press and hold the local POWER button for 3 seconds or click the remote POWER button again the machine will switch to the shut down state and the display is off.

Shut down the machine automatically.

In any mode, without any operation for 5 minutes,

Disc operation

Supported disc format is as follows:


- CD-DA/CD-R/CD-RW
- **MP3:** Maximum sampling rate 48 KHz, bit rate 320 kbps
- **WMA:** the highest sampling rate of 48 KHz, with a bit rate of 192 kbps

Play the disc

- Displacement (outbound setting)

Click the local POWER key or long press the stop key 3S of the remote control, the screen shows “OPEN”, the movement stops the disc, then the disc can be replaced.

Change the disc

- Click the local POWER key or long press the pause button for the remote control 
- There is a disc

After starting on, automatically start to enter the disc, the screen displays “CD–” means that the disc is being read, and the progress bar indicates the start of the disc;

- No disc

When reading the disc, the screen displays “NODISC”, you need to put the disc, and then click the local POWER key or the pause key of the remote control to start the reading disc;

- If the disc format is not supported, the machine stops turning the, disc after the disc is in compatible, and needs to change the disc

When reading the disc until the last song of the disc plays, if the normal cycle mode is set, the disc stops reading,

Pick a track


- last song.

Click the previous track button on the remote control  and each time you do so, the track is decremented by |

- next song.

Click the next track button on the remote control , and increment the track by | for each action

Play/Pause

- Click the pause button on the remote control to pause the playback  and the track progress bar on the screen will stop;

When playback is restarted, the progress bar starts running again.



Fast forward/rewind

- Press and hold the previous button on the remote control to rewind the play progress bar
- Press and hold the Next button on the remote control to fast forward the playback progress bar

Volume adjustment.


- **Volume +:** Click the + button on the remote control
- **Volume-:** Click the - button on the remote control

Playback mode selection

- Normal playback:
This machine defaults to this mode.
- Single loop:
Click the A-B button on the remote control to select the single loop mode, and the screen will display the single loop  Icon, the current song single is played in a loop.
- All Cycles:
Click the A-B button on the remote control to select the full cycle mode, and the screen will display the full cycle 



Documents / Resources

	<p>CoolGeek M1 Music Frame [pdf] User Manual M1, M1 Music Frame, Music Frame, Frame</p>
---	---

References

- [User Manual](#)

