

Coolmay GX Works2 Software Instruction Manual

[Home](#) » [Coolmay](#) » Coolmay GX Works2 Software Instruction Manual 



Instructions of Coolmay Software Installation

Contents

- [1 PLC software: GX Works2](#)
- [2 HMI software:
"CoolmayHMI"](#)
- [3 HMI software: "mView"](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

PLC software: GX Works2

1. PC system: Win 7/ Win 10
2. Installation video
<https://www.youtube.com/watch?v=eNZ3Q1uhWc8&t=30s>
3. Download link
<https://en.coolmay.com/Download.aspx?ColumnId=152&Language=36&Terminal=41>
4. Icon



5. FAQ

a) Mini type-B USB port can't be recognized, and the program can't be downloaded.

Solutions: Install USB programming port drive <https://en.coolmay.com/Download.aspx?ColumnId=208&Language=36&Terminal=41>



Coolmay 3G PLC, all-in-one USB programming port drive installation steps in WIN7/MNIN10

HMI software: “CoolmayHMI”

1. PC system: Win 7/ Win 10


2. Installation video

<https://www.youtube.com/watch?v=rSPMx4v3x7c&t=54s>

3. Download link

<https://en.coolmay.com/Download.aspx?ColumnId=159&Language=36&Terminal=41>

4. Icon

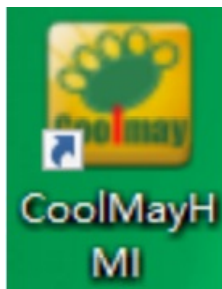

5. FAQ

a) Failure to install the software

Solutions: Turn off “Firewall” and all anti-virus software in your PC and then install the software.

b) When install the software, the program can't be downloaded successfully.

Solutions: The driver is not recognized by your PC. Please install the HMI driver by hand according to the instruction here:

<https://en.coolmay.com/Download.aspx?ColumnId=157&Language=36&Terminal=41>



HMI Driver Installation Steps in Win10.pdf

Or refer to this video: <https://youtu.be/1r68wwg5h0o>

HMI software: “mView”

1. PC system: WIN XP/ WIN7/ WIN10


2. Installation video

<https://youtu.be/d5bMUWJ2zeg>

3. Download link

<https://en.coolmay.com/Download.aspx?ColumnId=159&Language=36&Terminal=41>

4. Icon

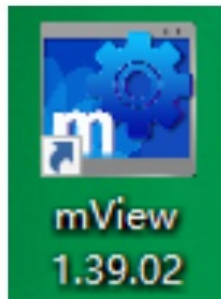

www.coolmayplc.com

Documents / Resources

	Coolmay GX Works2 Software [pdf] Instruction Manual GX Works2 Software, GX Works2, Software
---	--

References

- [Shenzhen Coolmay Technology Co., Ltd.](#)
- [Shenzhen Coolmay Technology Co., Ltd.](#)
- [Shenzhen Coolmay Technology Co., Ltd.](#)
- [Shenzhen Coolmay Technology Co., Ltd.](#)
- [Shenzhen Coolmay Technology Co., Ltd.](#)
- [Shenzhen Coolmay Technology Co., Ltd.](#)
- [Shenzhen Coolmay Technology Co., Ltd.](#)
- [Shenzhen Coolmay Technology Co., Ltd.](#)
- [Shenzhen Coolmay Technology Co., Ltd.](#)