





Cooluli BCF3.8 Curve Mini Fridge with Freezer Compartment **Instruction Manual**

Home » Cooluli » Cooluli BCF3.8 Curve Mini Fridge with Freezer Compartment Instruction Manual



Contents

- 1 Cooluli BCF3.8 Curve Mini Fridge with Freezer
- Compartment
- **2 Product Information**
- **3 Product Usage Instructions**
- 4 Frequently Asked Questions (FAQ)
- **5 TECHNICAL SPECS**
- **6 WARRANTY INFORMATION**
- 7 PRODUCT CHARACTERISTICS
- **8 APPLICATIONS**
- **9 GETTING STARTED**
- 10 TEMPERATURE CONTROL
- 11 REVERSING THE DOOR HINGE
- 12 LEVELLING FEET / GOING AWAY
 - 12.1 Going Away
- 13 OPTIMIZING PERFORMANCE
- 14 FREQUENTLY ASKED QUESTIONS
- 15 BASIC TROUBLESHOOTING
- **16 CUSTOMER SUPPORT**
- 17 PRODUCT PLACEMENT
- **18 PRODUCT FEATURES**
- 19 Documents / Resources
 - 19.1 References
- **20 Related Posts**





Product Information

Specifications

• Model Name: BCF3.8

• Power Consumption: AC 110-120V / 60 Hz 1.2A

• Outer Dimensions: 32.9 x 21.7 x 23 in or 835 x 550 x 583 mm

- Temperature Range:
 - Refrigerator
 - Freezer
- Composition & Weight: Galvanized steel sheet, ABS plastic, HIPS plastic, 68 lbs / 32 kgs
- Inner Dimensions:
 - **Refrigerator:** 20.4 x 17.5 x 12.9 in or 518 x 445 x 329 mm
 - Freezer: 5.79 x 15.39 x 10.35 in or 147 x 391 x 263 mm
- Storage Capacity: Refrigerator Space: 3.2 CuFt/92L, Freezer Space: 0.6 CuFt/15L, Holds over 66 12oz Cans
- Refrigerant: R600a / 29g

Product Usage Instructions

Getting Started

To get started with the Curve 3.8 Mini Fridge with Freezer Compartment, follow these steps:

- 1. Place the fridge on a flat and stable surface.
- 2. Plug the fridge into a suitable power outlet (AC110-120V).
- 3. Allow the fridge to stabilize for a few hours before usingit.

General Use

For general use of the mini fridge, keep the following points in mind:

- · Do not overload the fridge beyond its specified capacity.
- · Clean the interior and exterior regularly to maintainhygiene.
- Avoid blocking the air vents for proper air circulation.

Temperature Control

To adjust the temperature settings, locate the temperature control dial inside the fridge. Turning the dial clockwise will lower the temperature, while turning it counterclockwise will increase the temperature.

Reversing the Door Hinge

If you need to reverse the door hinge for better access, refer to page 10 of the instruction manual for detailed steps on how to do so safely.

Optimizing Performance

To optimize the performance of your mini fridge, ensure proper ventilation around the unit, maintain cleanliness, and avoid placing hot items directly inside the fridge.

Frequently Asked Questions (FAQ)

· How do I defrost the freezer compartment?

To defrost the freezer compartment, unplug the fridge, remove all items from the freezer, and allow it to thaw naturally. You can place towels inside to absorb excess water.

• Can I use this mini fridge in a car?

No, this mini fridge is designed for household use and should not be used in a car or any other mobile vehicle.

· What should I do if the fridge is making unusual noises?

If you notice any unusual noises coming from the fridge, check if it is properly leveled and ensure that nothing is obstructing the fan or motor at the back of the unit.

TECHNICAL SPECS

- Model Name BCF3.8
- Power Consumption AC 110-120V / 60 Hz 1.2A
- Outer Dimensions: (H x W x D) 32.9 x 21.7x 23 in or 835 x 550 x 583 mm
- Inner Dimensions: (H x W x D)
 - Refrigerator 20.4 x 17.5 x 12.9 in or 518 x 445 x 329 mm
 - Freezer 5.79 x 15.39 x 10.35 in or 147 x 391 x 263 mm
- Temperature Range:
 - Refrigerator 32° to 60° F or 0° to 16° C
 - Freezer 14° to -15° F or -10° to -26° C
- Composition & Weight: Galvanized steel sheet, ABS plastic, HIPS plastic, 68 lbs / 32 kgs
- Storage Capacity: Refrigerator Space: 3.2 CuFt/92L, Freezer Space: 0.6 CuFt/15L, Holds over 66 12oz Cans
- Refrigerant: R600a / 29g

WARRANTY INFORMATION

LIMITED WARRANTY - REGISTER AT: www.cooluli.com/register

Read all the instructions before attempting to use this product.

The Cooluli Curve 3.8 includes a 1-year limited warranty and a 2-year compressor warranty, covering repairs or replacements due to defects in materials or workmanship.

- This warranty only applies to personal, non-commercial use. This warranty is not applicable to any damage
 resulting from commercial, abusive, unreasonable use or supplemental damage. Defects that are the result of
 normal wear and tear will not be considered manufacturing defects under this warranty.
 COOLULI IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE. ANY
 IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS
 PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.
- 2. This warranty does not cover damage resulting from any unauthorized attempts to repair or from any use not in accordance with the instruction manual.
- 3. This warranty applies only to the original purchaser of this product from the original date of purchase. This warranty applies only if the unit is purchased new from an authorized retailer and is non-transferable from the original purchaser of the item. Any warranties accompanied with this product is only valid in the country of purchase.
- 4. Unit is manufactured according to North American voltage specifications. Warranty is void if unit is plugged into a 220-230 volt outlet.
- 5. Please read the Instruction Manual carefully before setting up or using this product. If you believe this product to be suffering from a manufacturing fault, or if you have inquiries about this product, please contact Customer Support:
 - COOLULI
 - ATTN: Customer Support1425 37th St Suite 213
 - Brooklyn, NY 11218
 Phone: 718-834-5312
 Email: info@cooluli.com
- 6. When contacting Customer Support, please have the information below along with the proof of purchase.
- 7. All warranty requests must be accompanied by proof of purchase, which is a copy of the original receipt/invoice.

| Model: |
|-------------------|
| Date of purchase: |
| Purchased from: |

PRODUCT CHARACTERISTICS

Your mini fridge is designed with premium materials and features for optimal cooling performance. Key characteristics include:

- Robust, premium build quality made with a durable one-piece metal cabinet
- Interior LED light with manual temperature control
- Adjustable wire shelf in frame and wire racks on door allows for customizable storage
- Reversible door hinge swings open a full 180 degrees
- Free-standing unit with adjustable feet for leveling on uneven surfaces

- · Sleek cabinet and door for a modern aesthetic
- · Compact size fits in small spaces like offices, dorms, bedrooms
- Quiet 39 dB operation suitable for home or office environments
- · Unique antibacterial coating eliminates any odor

APPLICATIONS

This appliance is intended to be used in household and similar applications such as:

- Keep the beverage cooler stocked with drinks in your home entertainment room so cold beverages are always within reach.
- Use it as a personal dorm fridge to store canned/bottled drinks for easy access during study breaks.
- Place in your office or workspace to have your meals, snacks, and beverages handy throughout the day.
- Keep at home for post-workout cold drinks without going to the kitchen each time.

GETTING STARTED

• Step 1: Unpacking

- Please eliminate any packaging materials both inside and outside of the beverage cooler. If possible, recycle them; otherwise, store them safely for future transportation requirements.
- Parts of your beverage cooler have been wrapped/sealed in plastic. This plastic poses a suffocation hazard for babies and young children. Please ensure that plastic wrapping materials have been stored/disposed of out of their reach.

Step 2: Installation

Before installing your mini fridge, be sure you are familiar with all the safety instructions and guidelines within this manual.

Important: Leave the appliance standing vertically for at least 8 hours before turning it on for the first time. This lets oil to flow back into the compressor and allows the unit to work properly while preventing potential damage.

WARNING: Your mini fridge requires air circulation for the motor and condenser to run properly. Allow approximately 4 inches (100mm) from the back of the mini fridge to any other objects and approximately 2 inches

- (50mm) between the sides of the mini fridge and any other objects.
- This mini fridge is not designed to be placed in a recessed or built-in area. Use your mini fridge only as a freestanding appliance.
- Avoid tilting more than 45° from upright when moving the fridge. This can affect the amount of oil in the compressor during operation.
- Place in an area of the room that is out of direct sunlight and avoid heat sources such as stoves, radiators, or baseboards.
- Make sure there is enough space at the front of your mini fridge for the door to open fully.
 TIP: Installing your mini fridge in the coolest area of a room will increase efficiency and prevent excessive energy consumption. This will lessen operating costs as well as wear on the compressor.
- Avoid areas that are subject to extreme cold, excessive moisture, and/or high humidity.
- Ensure that the floor is strong enough to support the weight of a fully loaded mini fridge.
- Your mini fridge should only be installed on a sturdy, level floor to ensure quieter operation. Use the

adjustable feet on the bottom of the mini-fridge to ensure that the mini-fridge is level and sitting on all four feet.

 If placing your mini fridge on a carpet, place wooden boards under the mini-fridge. Placing a mini fridge directly onto a carpet can cause discoloration and fading due to heat from the compressor.

• Step 3: General Use

- Your mini fridge requires 3 to 5 minutes to restart in the event that it is turned off, unplugged, or otherwise loses power. If you attempt to restart the mini fridge before this delay, it will fail to restart to prevent damage to the compressor.
- Never store hot food in your mini fridge. If you wish to store a previously heated meal, allow it to cool first before storing.
- Follow all manufacturer's instructions when storing pre-packaged food.

• Step 4: Maintenance

Internal Cleaning

- Do not pour water over your mini fridge or immerse it in any way.
- The refrigeration area can be cleaned with a soft cloth, mild soap, and lukewarm water.
- Do not use abrasive soaps or powders.
- Always ensure that any soap residue has been thoroughly rinsed from the refrigeration area after cleaning.
- The wire shelving is not dishwasher safe. These items are to be hand-washed only using lukewarm water and mild soap.
- Dry your mini fridge carefully and thoroughly after cleaning before resuming operation.
- Use dry hands when plugging your mini fridge back into an outlet.


External Cleaning

- To clean the exterior of your mini fridge, use only lukewarm water, mild soap, and a soft cloth.
- Take care when cleaning the underside of your mini fridge, as you may encounter sharp edges.
- The rear of the appliance and the compressor may be cleaned once or twice a year with a soft brush or vacuum cleaner to remove accumulated dust and debris that may affect the performance of your mini fridge and cause increased energy consumption.
- The plastic parts of your mini fridge can be damaged by ethereal oils, organic solvents, or cleansers that contain acetic acid.
- Never use abrasive scouring pads or other rough surfaces to clean your mini fridge.
- Do not use a steam cleaner to clean your mini fridge. Hot steam can damage plastic parts, and the moisture can lead to an increased risk of electric shock.
- The mini fridge must be completely dry before resuming operation after cleaning.

TEMPERATURE CONTROL

Using the Mechanical Controller

Your mini-fridge is equipped with a mechanical control for power, temperature, and lighting. The controller is located inside the mini-fridge on the right side at the topmost corner.

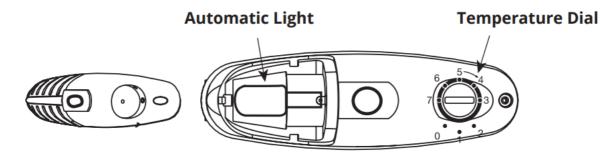

Power (On/Off)

- Your mini-fridge is equipped with a mechanical control for power, temperature, and lighting. The controller is located inside the mini-fridge on the right side at the topmost corner.
- The temperature of the refrigerator is controlled by adjusting the temperature dial.
- When the thermostat is set to 0 it cuts off all cooling to the refrigerator and freezer, even when power is still supplied.
 - Turn the control knob to any setting other than 0 to turn on the mini-fridge.
 - To turn the mini-fridge off, turn the control knob down to 0.

Automatic Light

The LED light will automatically turn on when the fridge door is opened.

Setting the Temperature

To start the refrigerator, turn the temperature control to the position corresponding to the desired cooling. The temperature of the refrigerator is controlled by adjusting/setting the thermostat control knob located at the top of the cabinet.

Temperature Modes


| | Mode | Refrigerator | Freezer |
|------|------|---|--|
| | 0 | OFF | OFF |
| Warm | 1 | 54° to 60°F or 12° to 16°C | 14° to 7°F or -10° to -14°C |
| | 2 | 50° to 57°F or 10° to 14°C | 10° to 3°F or -12° to -16°C |
| 1 | 3 | 46° to 54°F or 8° to 12°C | 7° to 0°F or -14° to -18°C |
| 1 | 4 | 43° to 50°F or 6° to 10°C | 3° to -4°F or -16° to -20°C |
| 1 | 5 | 39° to 46°F or 4° to 8°C | 0° to -8°F or -18 to -22°C |
| ı | 6 | 36° to 43°F or 2° to 6°C | -4° to -11°F or -20° to -24°C |
| Cold | 7 | 32° to 39°F or 0° to 4°C | -8° to -15°F or -22° to -26°C |

REVERSING THE DOOR HINGE

The mini-fridge door can be opened from left to right or right to left. To change the opening direction, follow the steps below. Remember to keep all removed parts in a safe place; you'll need them to reinstall the door in its original direction.

- 1. Support the door from the bottom.
- 2. Remove the six screws that fasten the hinges and two spacers to the mini-fridge frame.
- 3. Place the door flat on a padded or carpeted surface to prevent any damage.
- 4. Remove the six hinge screws that fasten the hinges to the door.
- 5. Remove the filler plugs from the opposite side and use them to cover the 6 newly exposed holes on the side the hinges were removed from.
- 6. Repeat this process for the hinges on the door, swapping the filler plugs and moving them to opposite sides.
- 7. Pick the door up, carefully aligning the hinges to the cabinet holes.
- 8. Screw the remaining six screws into both hinges and the two spacers into the frame to secure the door.


Warning: Once you bring the beverage cooler into its upright position, wait at least 3 hours before turning it on. Tilting the fridge can cause oil to shift out of the compressor into the cooling lines. Letting the oil flow back before use allows the compressor to work properly and prevents potential damage.

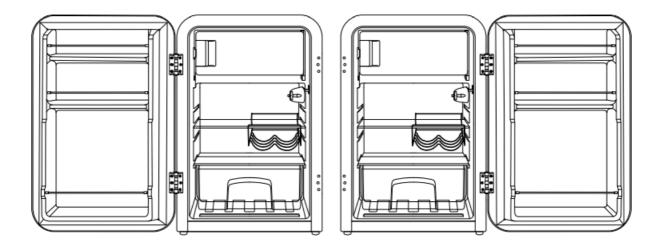

LEVELLING FEET / GOING AWAY

Levelling Feet

The appliance must be installed level in order to work properly. If the unit is not level, the doors and magnetic seal alignments will not be covered properly. To level the unit, adjust one or both leveling feet at the base of the unit.

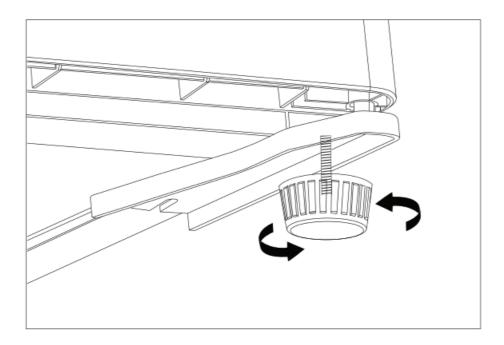

Going Away

Your mini fridge is built to provide years of trouble-free refrigeration. However, as with any appliance, extended unattended operation is not recommended.

Short Absences

For absences of less than a month, you can leave your mini fridge plugged in and operating as usual.

Extended Absences

For absences of a month or more, we recommend that all items be removed from the mini fridge and the appliance prepared for an extended period of non-use.

- Remove and properly store all food and items from the mini fridge and unplug the power cord.
- To avoid unpleasant surprises upon your return, like odor and mold/mildew growth, leave the door to the mini fridge open slightly, using a small item to prevent the door from closing if necessary.

• Restrict small children or animals from accessing the room that houses the mini-fridge as appropriate to prevent them from accidentally trapping themselves in the mini-fridge.

OPTIMIZING PERFORMANCE

Food Storage

This mini fridge is suitable for short-term storage of fresh food.

As with any refrigerator, the internal temperature depends on a number of factors, such as the amount of food/drinks stored, the ambient temperature of the surrounding air, and the frequency at which the door is opened/closed.

- Do not leave the door open for too long or too often.
- Do not overload the mini-fridge. Ensure that there is space for air to flow around items contained in the mini-fridge.
- Do not block any of the mini fridge's ventilation openings.
- Use only the runners on the mini fridge's walls to position the shelf.
- Keep fruit and vegetables fresh in the crisper drawer by ensuring they are properly packaged.
- Make sure the cover sits firmly on top of the crisper drawer.
- Two bottles can be stored conveniently in the shelf-hanging bottle rack.
- To remove the bottle rack pull out the shelf that holds the rack out of the fridge, then slide the wine rack off the side of the shelf.

Optimizing Performance

There are many things you can do to reduce your mini fridge's energy consumption. These tips will make the appliance more efficient and lessen the burden on the compressor and other mechanical parts.

- Place the fridge in the coolest area of the room, away from heat-producing appliances and out of direct sunlight.
- Let heated food and beverages cool to room temperature before placing them into the fridge.
- Do not overload the fridge, as it forces the compressor to run longer.
- Wrap foods properly and wipe containers dry before placing them in the fridge. This cuts down on frost build-up inside the fridge.
- Position food so that air can circulate freely around it.
- Do not leave the fridge door open for longer than required.
- Make sure no food touches the back of the compartment.
- Don't set the thermostat to exceedingly cold temperatures.

FREQUENTLY ASKED QUESTIONS

What temperature range can this mini fridge cool to?

This mini-fridge can cool to temperatures between 32°F to 60°F (0°C to 16°C) and freezes between -13°F to -5°F (-25°C to -15°C).

How much electricity does this mini fridge use?

This unit consumes 110-120V, 60Hz, 1.3A. Refer to the product specs and features section for full electrical details.

· Does this mini fridge need to be ventilated?

Yes, allow approximately 4 inches of clearance at the back and 2 inches on the sides for proper air circulation.

Do not block any ventilation openings.

· How often should I clean the mini-fridge?

The interior can be cleaned regularly with mild soap and water. Clean any spills immediately to avoid odors. Externally, the unit can be cleaned every few months with a soft cloth.

· Can I adjust the shelves and interior layout?

Yes, this unit comes with adjustable wire shelves that can be repositioned as needed. Ensure shelves are installed properly on the runners only.

What food is best for storage in this mini fridge?

This unit is best suited for drinks, fresh foods, and other items meant for short-term storage. Do not overload the fridge. Allow air flow between items.

· Does this mini fridge need to be cleaned before first use?

Yes, wipe out the interior with a soft cloth before first use. This is to remove any dust or residues from shipping.

· What happens if the fridge stops cooling properly?

First, ensure the temperature setting isn't too high. Check that the door is sealing properly. Try resetting the fridge and allow 3-5 minutes before restarting. If issues persist, contact customer support.

Can I plug this fridge into a 220-230V outlet?

No, this unit is only designed for 110-120V, 60Hz outlets. Plugging into 220-230V will void the warranty. Refer to the voltage label on the fridge.

· How quiet is this mini fridge?

This unit operates at about 39 dB, a low noise level suitable for bedrooms, offices, etc. Some compressor noise is normal during operation.

Should I unplug the fridge when not in use for an extended period?

Yes, for any extended absence of a month or more, unplug the fridge and clean it thoroughly. Leave the door ajar to avoid odors.

• How long is the warranty period for this product?

This beverage cooler comes with a 1-year limited warranty and a 2-year warranty on the compressor unit. Register your product at ww.cooluli.com/register for warranty service.

· Who do I contact for support or service issues?

Contact Cooluli Customer Support with any issues or for service. See the Customer Support section for full contact details.

BASIC TROUBLESHOOTING

| Concern | Possible Reasons | | |
|-----------------------------|---|--|--|
| | Check that all the food and drink that is in the fridge are up to date and cor rectly packaged. If it isn't, then it should be removed immediately or repackage d. | | |
| Smell/odor | Check for spillages on each shelf, rack, and drawer. | | |
| | You may need to remove the drawers to check that no spillages have settle d underneath them. Spillages that have not been cleaned and have been left c an cause smells and unwanted odors. | | |
| | Ensure that there are no obstructions preventing door closure. | | |
| The door does not close pro | Check that the door compartments and shelves are correctly in place. | | |
| perly | Check that the door seal is not warped or torn. | | |
| | Check that the appliance is level. | | |
| | Check that the appliance is on a flat, level surface and is stable. | | |
| | Check the spacing around the appliance and ensure it is not touching other items. | | |
| | Bubbling and gurgling sound: This noise is emitted as the coolant fluid flow s through the pipes within the system. This is normal. | | |
| Unusual noises | Water flowing sound: This is the normal sound of water flowing into the drain trough during the defrosting process. | | |
| | If the appliance is operating noisily (compressor noise): | | |
| | This is normal. This noise indicates that the compressor is operating normally. As the compressor is being energized, it might run a bit noisier for a short period of time. | | |
| | Contraction and expansion of the inside walls may cause popping and crac king noises. | | |
| Unusual noises | Check the spacing around the appliance and ensure it is not touching of items. Bubbling and gurgling sound: This noise is emitted as the coolant fluid fis through the pipes within the system. This is normal. Water flowing sound: This is the normal sound of water flowing into the national during the defrosting process. If the appliance is operating noisily (compressor noise): This is normal. This noise indicates that the compressor is operating not lly. As the compressor is being energized, it might run a bit noisier for a shoeriod of time. Contraction and expansion of the inside walls may cause popping and contraction. | | |

| The fridge door will not open | If the door has just been opened, leave it for a few minutes to allow the air pressure to equalize before trying again. | | |
|--|--|--|--|
| The compressor runs continuously | The temperature is set too cold: select a warmer setting. The door is open or something is obstructing proper door closure. The door gaskets are worn, dirty, or damaged. Large quantities of food have been added to the fridge. The room temperature is hotter than usual. | | |
| The external fridge surface i s warm | The exterior walls can be warmer than room temperature. This is normal w hile the compressor works to transfer heat from inside the fridge cabinet. | | |
| The fridge doesn't work | Check that the appliance is switched on. Check that there has not been a power cut. Check that the plug is not faulty. Check that the fuse has not blown. Check that the voltage is correct for the appliance. Are there any faults with the socket? For this purpose, try the plug of your a ppliance by connecting it to a socket that you are sure is working. | | |
| The outer surfaces of the ap pliance are wet | Condensation will form on the outside of the cooler if it operates in moist ar eas. Just wipe it dry. | | |

The temperature inside the a Increase the working temperature by adjusting the thermostat to a warmer ppliance is too cold setting. Check that there is not too much food in the appliance. Check that the thermostat is set to a suitable temperature. Check that the appliance is not placed in direct sunlight or too near to a heating source. Check that the ambient temperature is within the operating limits of the app liance. Are the doors of the appliance opened frequently? The temperature inside the a ppliance is not cold enough. Once the door is opened, the humidity found in the air in the room enters th e appliance, especially if the humidity levels in the room are very high. The mo re frequently the door is opened in humid conditions, the more chance there is of moisture build-up. The door is not closed completely. The door gasket does not seal properly. The cooler does not have the correct clearances at the sides/back. · Hot and humid weather increases the internal rate of frost build-up. This is normal. Moisture forms on the inside or outside walls of the fridge Open the door less often and make sure it is always properly closed.


CUSTOMER SUPPORT


For further assistance please contact Cooluli Support:

- COOLULI
- ATTN: Customer Support
- 1425 37th St Suite 213
- Brooklyn NY 11218
- Phone: <u>718-834-5312</u>
- Email: info@cooluli.com
- www.cooluli.com
- Distributed by Cooluli®
- New York, NY 11218
- · Made in PRC


- Cooluli™ is a trademark of
- LISSE USA LLC
- <u>718-834-5312</u>
- Copyright ©2018 all rights reserved

PRODUCT PLACEMENT

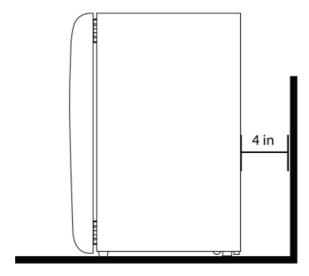

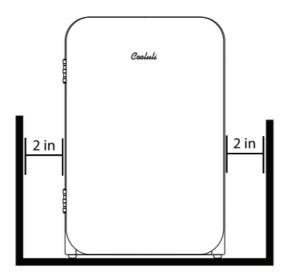

PRODUCT FEATURES

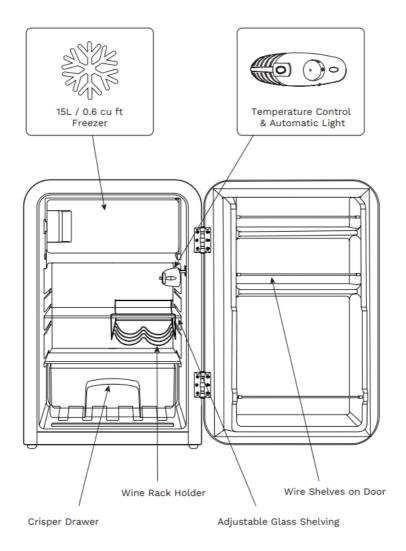

Documents / Resources



<u>Cooluli BCF3.8 Curve Mini Fridge with Freezer Compartment</u> [pdf] Instruction Manual BCF3.8 Curve Mini Fridge with Freezer Compartment, BCF3.8, Curve Mini Fridge with Freezer Compartment, Fridge with Freezer Compartment, Compartment

References

- ~ Portable Mini Fridges and Cooler Warmers by Cooluli USA
- Create Account Cooluli
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.