



Coopers J142 SS S/5 Titan Sharp Scissors Instructions

[Home](#) » [Coopers](#) » Coopers J142 SS S/5 Titan Sharp Scissors Instructions 

Contents

- [1 Coopers J142 SS S/5 Titan Sharp](#)
- [2 Multi-use scissor set that every household needs](#)
- [3 Dimensions](#)
- [4 IMPORTANT SAFETY INSTRUCTIONS](#)
- [5 CARE AND USE](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

Coopers

Coopers J142 SS S/5 Titan Sharp



Multi-use scissor set that every household needs

- Strong stainless steel blades with titanium coating

- Suitable for left and right-handed people
- For Domestic use only.
- Titanium scissor blades stay sharp even after long use.
- Hand washes only. Not suitable for dishwasher.

Dimensions

1. Craft– 14cm/32g
2. Small multipurpose – 19.8cm/58g
3. Medium multipurpose – 21.4cm/68g
4. Large multipurpose – 24.4cm/ 106g
5. Household (scissors with screw lid opener, bottle opener & can opener) – 21.5cm /104g

IMPORTANT SAFETY INSTRUCTIONS

- THESE TITANIUM-COATED SCISSORS ARE VERY SHARP CUTTING INSTRUMENTS AND SHOULD BE HANDLED WITH CARE.
- SHARP SCISSORS SHOULD ONLY BE USED AS A CUTTING TOOL.
- IMPROPER USE CAN CAUSE SERIOUS INJURY.
- CONTACT WITH THE BLADE MAY CAUSE INJURY. MAKE SURE TO KEEP THE BLADE AWAY FROM YOUR BODY AND FINGERS.
- NEVER USE FOR ICE PICKING, CHISELLING, PRYING OR ANYTHING OTHER THAN ITS INTENDED USE.
- ALWAYS STORE THE BLADE CLEAN AND DRY.
- NEVER EXPOSE YOUR SCISSORS TO EXTREME HEAT OR FIRE.
- NEVER CLEAN THE SCISSORS IN CORROSIVE SUBSTANCES.
- DISCONTINUE USE IMMEDIATELY IF THE BLADE IS DULL OR THE PRODUCT IS DAMAGED IN ANY WAY.
- DO NOT RUN WITH SCISSORS OR EVEN WALK ABOUT WHEN USING THEM.
- CUT WHEN SITTING AT A TABLE.
- STORE SCISSORS DOWNWARDS IN A SAFE PLACE.
- KEEP THESE SCISSORS AWAY FROM CHILDREN

CARE AND USE

PLEASE TAKE CARE WHEN REMOVING THE SCISSORS FROM THIS BOX.



Before first use, wash the scissors thoroughly by hand in hot soapy water, rinse and dry. Should any stains or rust spots appear after washing, rub the area gently with a mild non-abrasive stainless steel cleaner and wash product thoroughly in hot soapy water before use. Not suitable for dishwasher.

- When cleaning and drying scissors, always hand wash only and wipe dry away from the blade. Wash after each use. Not suitable for dishwasher use.
- Do not place unprotected scissors in drawers and it is recommended that you store your scissors in a scissor block or on a magnetic strip (not supplied).
- To maintain scissors' at their best, wash and dry thoroughly, removing all residue from the cutting blades.

- Do not run with scissors or even walk about when using them.
- Use when sitting at a table.
- Store scissors downwards in a safe place.

DISPOSAL


- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – Contains the following recyclable plastic.

Code & Symbol		
Type of Plastic	Polypropylene	TPR
Commonly used for	Microwaveable food containers, yoghurt pots, butter tubs, disposable plates and cups	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses

Note: Commonly recycled and collected from household recycling bins (packaging tape itself not recyclable but does not interfere with cardboard) Not often or widely recycled

- At the end of the product's lifespan please check with your local council authorized household waste recycling center for disposal.

Documents / Resources

	<p>Coopers J142 SS S/5 Titan Sharp Scissors [pdf] Instructions J142 SS S-5 Titan Sharp Scissors, Titan Sharp Scissors, J142</p>
---	---