



COREMORROW E53.C1K-K Piezo Motor Controller Software User Guide

[Home](#) » [COREMORROW](#) » COREMORROW E53.C1K-K Piezo Motor Controller Software User Guide 



Make Your Motion and Control More Accurate!

Contents

- [1 E53.C1K-K/E53.C4K Piezo Motor Controller Software](#)
- [2 User Guide](#)
 - [2.1 1.Select Control Mode >>](#)
 - [2.2 2.Display Interface >>](#)
 - [2.3 3.Exit System >>](#)
 - [2.4 7.Zero Calibration >>](#)
 - [2.5 8.Return Zero >>](#)
 - [2.6 9.Set >>](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)

E53.C1K-K/E53.C4K Piezo Motor Controller Software

User Guide

[1.Select Control Mode >>](#)

-
- (1) Select the corresponding serial port.
 - (2) Click "Set Serial Port".
 - (3) Click "Piezo Motor Control".

Piezo Motor Controller - CoreMorrow

Select Control: Serial Port Control

COM: COM11 Set Serial Port

Baud Rate: 115200

USB:

Scanning Device Enter

Succeeded to connect device initialization!!

Piezo Motor Control Exit

2.Display Interface >>

Piezo Motor Controller - CoreMorrow

☐ Control 1

Step Motion(steps)

0 Forward

0 Reverse

Forward/Reverse Control

Forward 1425 ms Start Stop

Reverse 2000 ms

Continuous Motion

Continuous Motion Continuous Forward Stop

Position info.(steps)

Acquire 0 Empty

Configuration

Add.

Set Save

High Resolution Low Resolution

Acquire Amplifier Info.

Waveform drive

▶ **Control**

Select channel No., there 4 channels could be selected, and it could be operated one channel at a time.

▶ **Step motion(steps)**

In the current position, relative forward motion or reverse motion could be chosen. In the moving cycle, the channel position information could be obtained. Click "Forward", the piezo linear actuator will move in one direction, and the reverse motion will move in a relatively positive direction. Adjust it according to the actual application.

▶ **High Resolution**

Used for tiny steps. Low resolution: used for quick movement. High resolution and low resolution, the two are relatively theory.

▶ **Continuous Motion**

Continuous forward means moving until the maximum position of piezo actuator positive, or click "Stop" button at a certain point of time to stop the movement.

Continuous reverse and continuous positive opposite directions, control and motion stop are similar.

▶ **Position Info.**

Click "Acquire", it will display the value of the current control channel recorded by the piezo controller.

Click "Empty" to clear the value of the current control channel by the controller.

▶ **Forward/Reverse Control**

Fill in the running time, then click "Start", the piezo actuator reciprocating motion for specified time. Click "Stop" to stop the movement.

▶ **Acquire Amplifier Info.**

Reading the piezo controller version information.

3.Exit System >>

Complete the operation and exit the system.

7.Zero Calibration >>


It indicates that piezo motor finds the absolute zero position of grating ruler, and returns to the absolute position before calibration after finding it.

8.Return Zero >>

It indicate that piezo motor returns to zero position, which is generally consistent with absolute zero position of grating ruler.

9.Set >>

Click “Set” button to pop up the device information window.

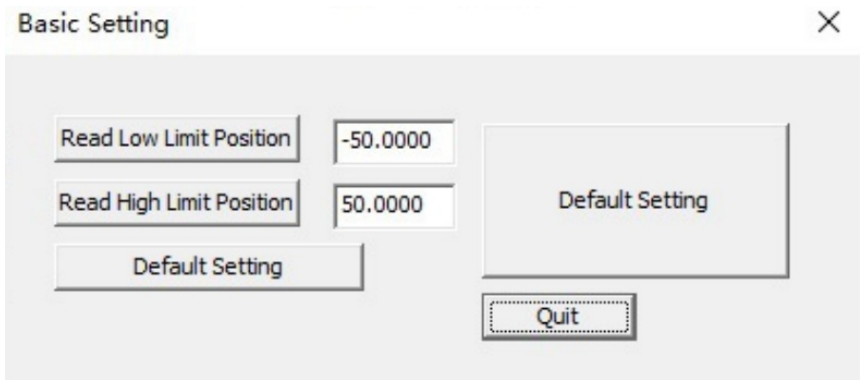

Harbin Core Tomorrow Science & Technology Co., Ltd.

Tel: +86-451-86268790

Fax: +86-451-86267847

Email: info@coremorrow.com

Web: www.coremorrow.com

Headquarters: Building I2, No.191 Xuefu Road, Nangang District, Harbin
Shanghai Office: Building 2, No.608 Shengxia Road, Pudong District, Shanghai

Documents / Resources

	<p>COREMORROW E53.C1K-K Piezo Motor Controller Software [pdf] User Guide E53.C1K-K, E53.C4K, Piezo Motor Controller Software, E53.C1K-K Piezo Motor Controller Software, Controller Software, Software</p>
	<p>COREMORROW E53.C1K-K Piezo Motor Controller [pdf] User Manual E53.C1K-K, Piezo Motor Controller, E53.C1K-K Piezo Motor Controller, Motor Controller, Controller</p>

References

