



Corsair Memory T16U (RGP0120) Keyboard User Manual

[Home](#) » [Corsair Memory](#) » Corsair Memory T16U (RGP0120) Keyboard User Manual 

Contents

- [1 Corsair Memory T16U \(RGP0120\) Keyboard](#)
- [2 OverView](#)
- [3 Federal Communication Commission Interference Statement](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

Corsair Memory

Corsair Memory T16U (RGP0120) Keyboard



OverView

1. T16U(RGP0120) Keyboard Components
 - Keyboard



- USB Cable USB Dongle




2. Keyboard Power On

- Slide power switch toward power logo



3. Keyboard Power Off

- Slide power switch away from power logo

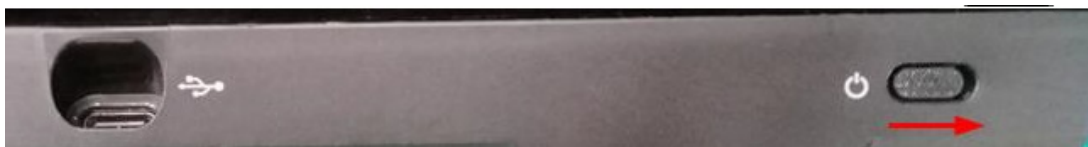

4. USB mode

1. Keyboard Power On
2. Remove USB dongle from the PC USB port
3. Connect keyboard and PC with USB cable
4. Mode indicator LED is yellow ON 2 seconds then OFF


Note. If you see other color LED, press FN+F9 sometimes

5. 4. 2.4G mode


1. Keyboard Power On
2. Disconnect keyboard and USB cable
3. Plug USB dongle to the PC USB port
4. Press FN + F9
5. Mode indicator LED is white breathing

5. Bluetooth mode


1. Keyboard Power On
 2. Disconnect keyboard and USB cable
 3. Press FN + F10
 4. If mode indicator LED is blue breath, the keyboard is connecting to host If mode indicator LED is blue flash, the keyboard is pairing
6. Bluetooth Pairing
1. Keyboard Power On
 2. Disconnect keyboard and USB cable
 3. Press FN + F10
 4. If mode indicator LED is blue flash, the keyboard is pairing If mode indicator LED is blue breath, Press and hold FN + F10 some seconds
 5. Go to Win 10 Settings -> Devices -> Bluetooth & other devices Check Bluetooth is ON, then click "Add Bluetooth or another device"

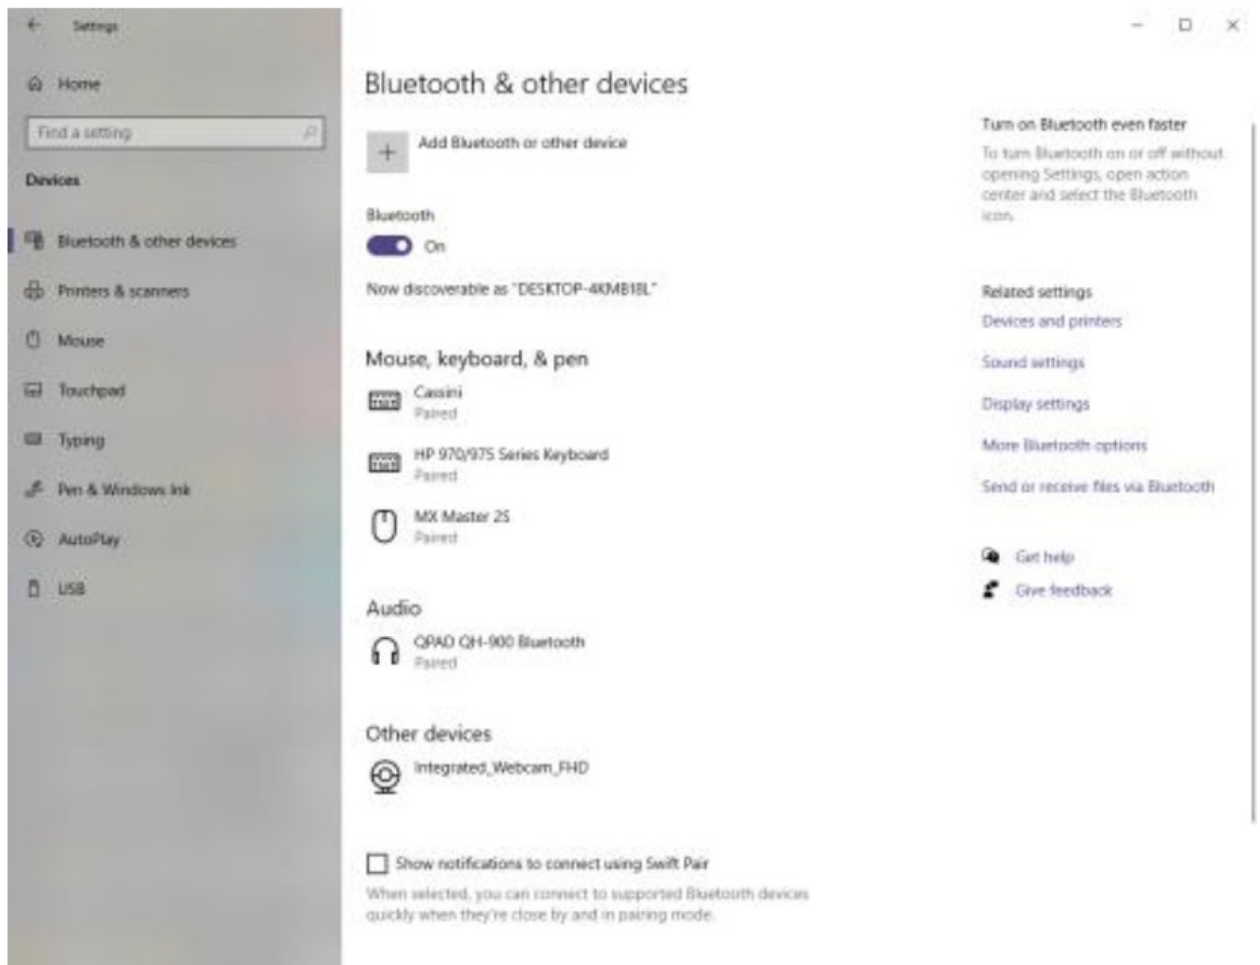


6. Click "Bluetooth"

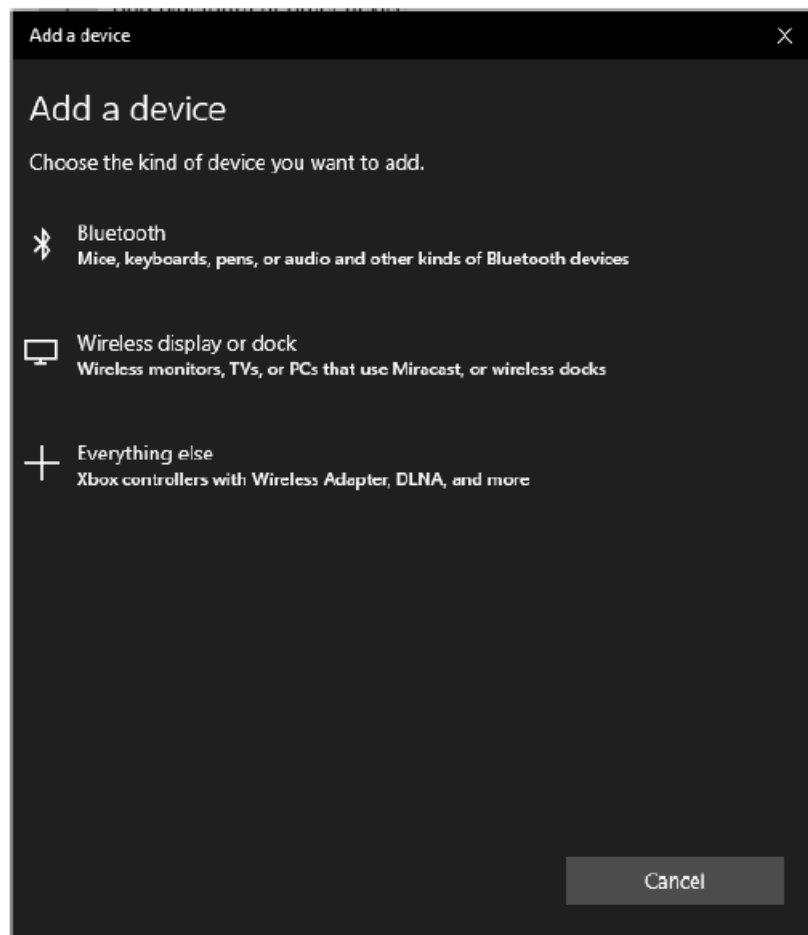


7. Search "CORSAIR RGB MINI WL" then click it

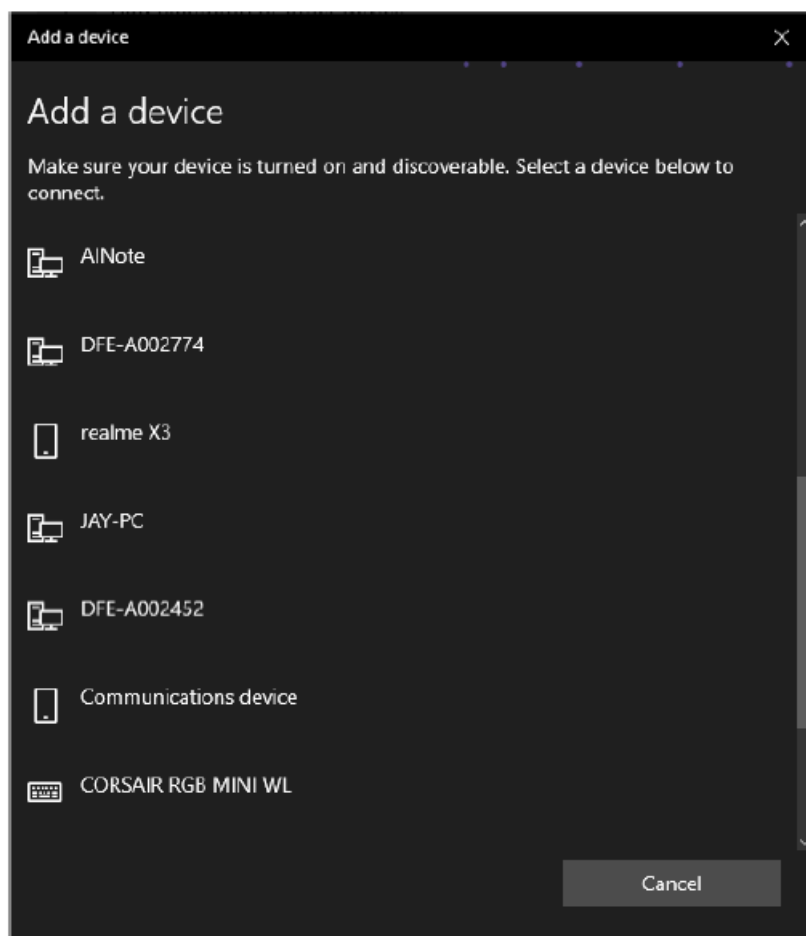


8. On the keyboard, the key in the PIN code is shown in the following red rectangle, then press ENTER key.

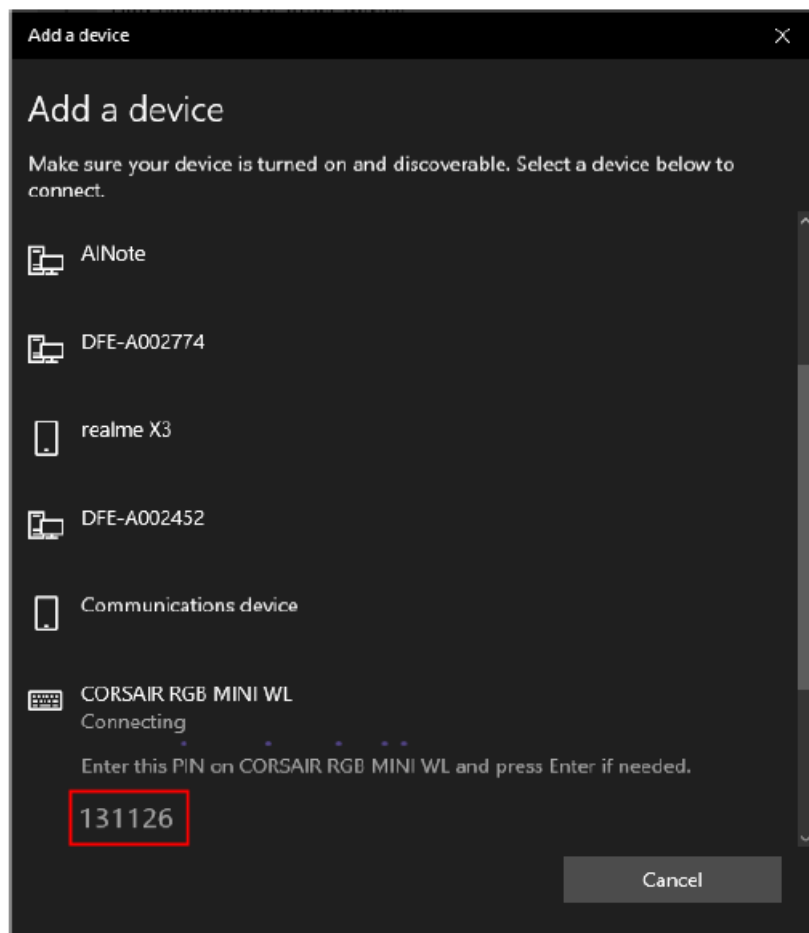

9. Click "Done"

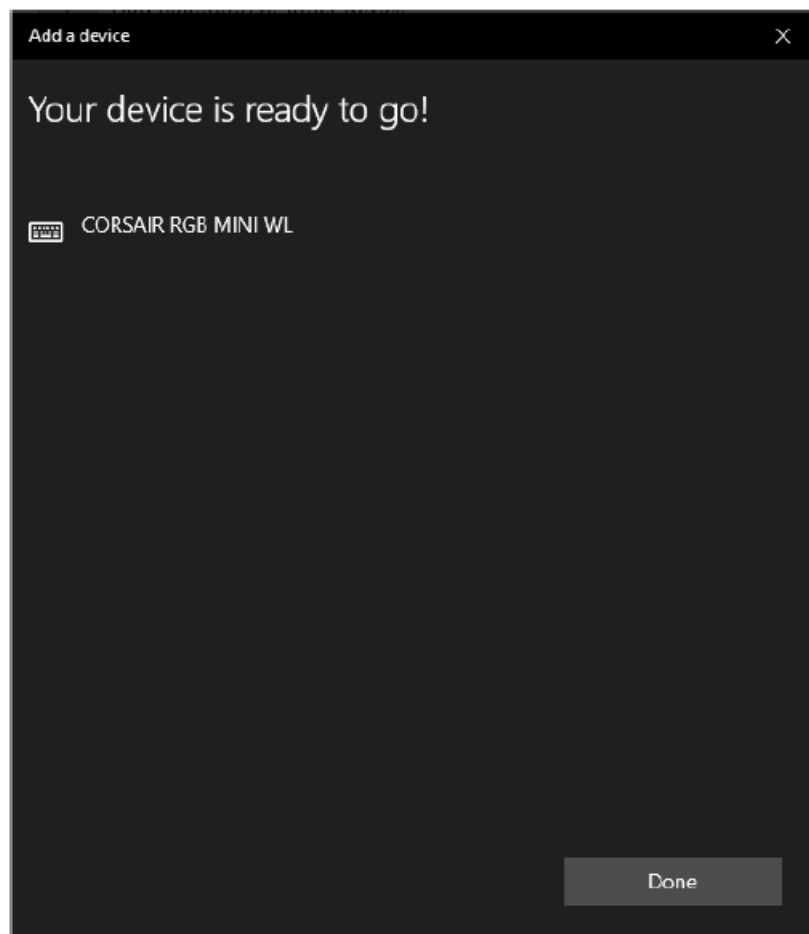

10. Bluetooth pairing success.

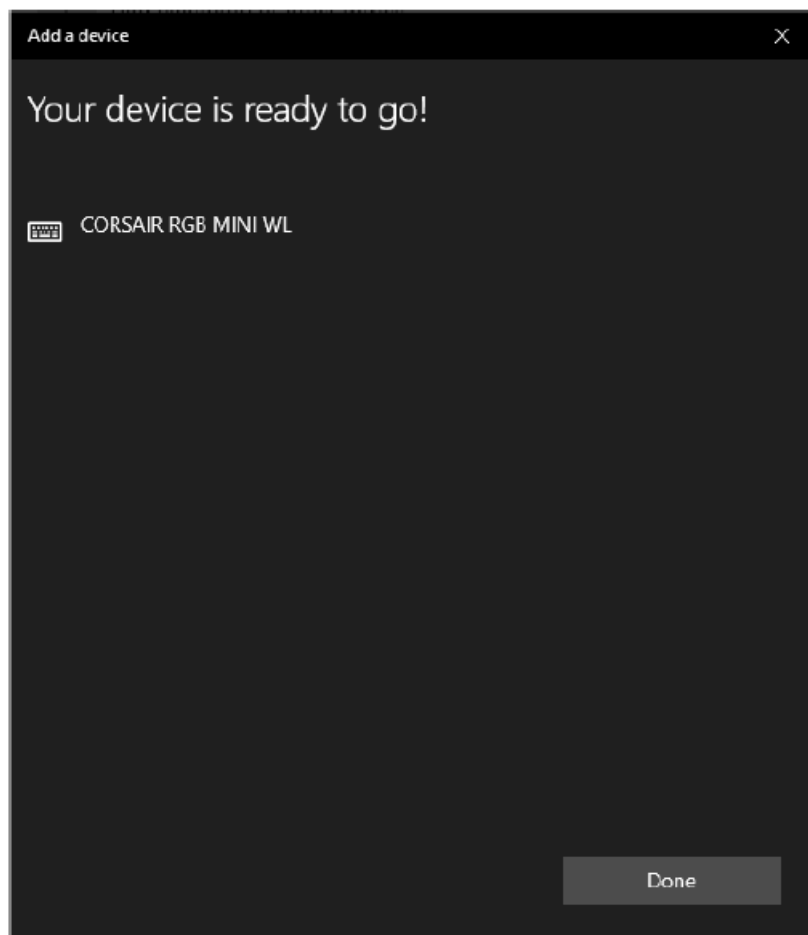

Federal Communication Commission Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Radiation Exposure Statement: The product complies with the FCC portable RF exposure limit set forth for an uncontrolled environment and is safe for intended operation as described in this manual. The further RF exposure

reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

Documents / Resources

	<p>Corsair Memory T16U (RGP0120) Keyboard [pdf] User Manual RGP0120, 2AAFMRGP0120, T16U RGP0120 Keyboard, RGP0120 Keyboard, Keyboard</p>
---	--