



CORSAIR VENGEANCE PRO RGB Memory Instruction Manual

[Home](#) » [Corsair](#) » CORSAIR VENGEANCE PRO RGB Memory Instruction Manual 



CORSAIR RGB MEMORY

Contents

1 INSTALLATION


2 DOWNLOAD CORSAIR iCUE

3 Documents / Resources

3.1 References

INSTALLATION

Notice: Turn your computer off prior to installing your memory modules and refer to motherboard/system owner's manual for correct slots for your configuration. For optimal performance, please refer to your motherboard/system owner's manual to enable XMP in the BIOS.

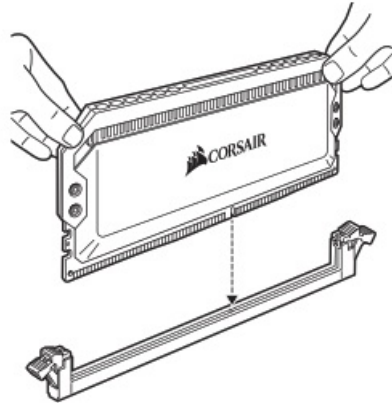

- Note the orientation of the memory module. Unlatch the retaining clip(s) at the end of memory socket.
- Place the memory module on the socket with the notch aligned correctly.
- As indicated in the picture on the left, place your fingers on the top edge of the memory, gently push down on the memory and insert it vertically into the memory socket until the latches lock.

SOFTWARE

CORSAIR iCUE software connects all your CORSAIR iCUE compatible products together in a single interface, giving you complete control of everything from RGB lighting and powerful macros to system monitoring and cooling control.

DOWNLOAD CORSAIR iCUE

For the full CORSAIR iCUE experience, please download our latest CORSAIR iCUE software at www.corsair.com/downloads.



* An internet connection is required for software download. CORSAIR iCUE is required for fan speed and RGB lighting control.

HOW-TO VIDEOS

Scan below code to view How-to videos



<https://www.youtube.com/watch?v=OtzofbV7cb0&list=PL8YayGMfPGnXelhMGvEoP-HqPvrAPebLi>

How to set up VENGEANCE RGB PRO in CORSAIR iCUE – <https://youtu.be/OtzofbV7cb0>

Setting up DOMINATOR PLATINUM RGB in CORSAIR iCUE – <https://youtu.be/doogzUZ7jq0>

How to enable full software control for RGB DRAM for full customization – <https://youtu.be/GoUqthopA3s>

How to setup ASUS motherboard integration in CORSAIR iCUE – <https://youtu.be/C9tz1-fdlKo>



WEB: corsair.com

PHONE: (888) 222-4346

SUPPORT: support.corsair.com

WARRANTY: corsair.com/warranty

BLOG: corsair.com/blog

FORUM: forum.corsair.com

YOUTUBE: youtube.com/corsairhowto

© 2020 CORSAIR MEMORY, Inc. All rights reserved. CORSAIR and the sails logo are registered trademarks in the United States and/or other countries. All other trademarks are the property of their respective owners. Product may vary slightly from those pictured.
49-002312 AA

Documents / Resources

	CORSAIR VENGEANCE PRO RGB Memory [pdf] Instruction Manual 32GB 2 x 16 GB, DDR4 3200MHz C16, VENGEANCE PRO RGB Memory, VENGEANCE PRO Memory, VENGEANCE PRO, RGB Memory, Memory
---	---

References

-  [PC Components | Gaming Gear | CORSAIR](#)
-  [Corsair Blog - Corsair Community](#)
-  [Home - Corsair Community](#)
-  [CORSAIR Downloads | CORSAIR iCUE Software](#)