



Cosmic Byte INTERSTELLAR Wired Controller User Manual

[Home](#) » [Cosmic Byte](#) » Cosmic Byte INTERSTELLAR Wired Controller User Manual 

Contents

 
- [1 Cosmic Byte INTERSTELLAR Wired Controller](#)
- [2 User Manual](#)
- [3 SPECIFICATIONS](#)
- [4 COMPATIBILITY](#)
- [5 TROUBLESHOOTING](#)
- [6 HOW TO CONNECT THE COSMIC BYTE CONTROLLER TO YOUR PC?](#)
- [7 SUPPORT DETAILS](#)
- [8 WARRANTY](#)
- [9 FAQ'S](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)



Cosmic Byte INTERSTELLAR Wired Controller



User Manual

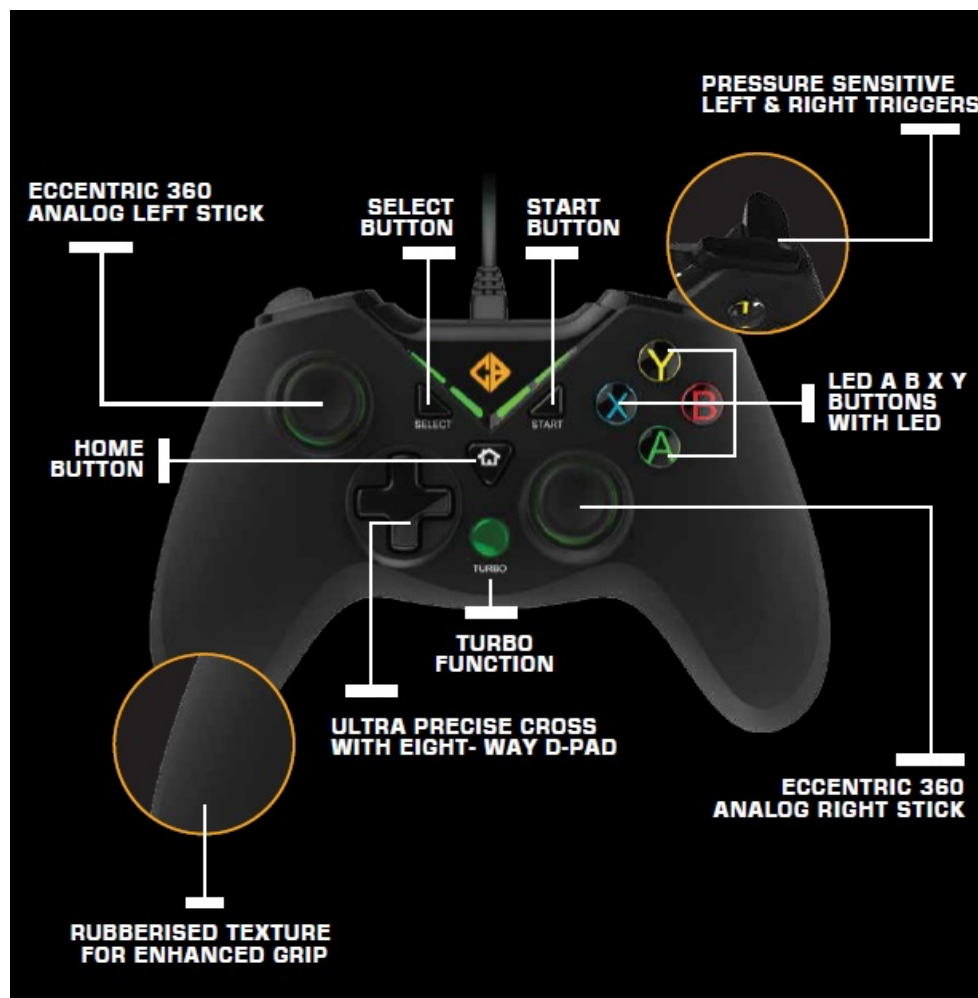



SPECIFICATIONS

- Integrated Dual Mode: X-input and Direct-input for greater compatibility
- Eccentric 360° analog sticks for more comfort
- Ultra-precise eight-way D Cross
- Double triggers and analog bumpers
- 12 numeric buttons, including [Home], [Start], [Select]...
- Backlit Action Button,[A], [B], [X] [Y]
- Special “Rapid Fire” with [Turbo] mode
- Dual vibration motors
- Compatibility: Windows PC
- LED indicators
- Comfortable rubber body
- Length of cable:1.8m
- Dimensions:158mm*103mm*69mm
- Weight: 223g± 10g

COMPATIBILITY

The controller is compatible with games running with Xinput or Dinput Mode.

TURBO MODE



TURBO MODE

HOW TO ACTIVATE THE TURBO MODE?

Turbo mode is often used for FPS! It allows you to auto-fire by pressing the selected button(A,B,X,Y,R1,L1,R 2,L2). Thus, you avoid repetitive pressure of the same key.Lorem ipsum

To activate the Turbo mode:

1. Hold the [TURBO] button

Then press the selected button(A,B,X,Y,R1,L1,R2,L2).

2. The Turbo function is enabled

To deactivate the Turbo mode:

1. Press and hold the button where the Turbo function is enabled
2. Then press the [TURBO]

Note: The Turbo mode does not support eight-way D Cross/Joysticks/[START] and [SELECT]

TROUBLESHOOTING



Why the gamepad does not work on my computer?

1. Make sure the USB port is functional
2. Try another USB port
3. User of Windows XP: install the driver from CD or downloading from CB website.
4. Use a USB port on the back of your computer

Why the gamepad does not work with my game?

1. Your game does not support gamepad
Configure/activate your gamepad directly in the game interface

No vibration! Why?

1. Your game does not support vibration
The vibration function is not activated in the settings of your game

CONNECTIVITY



HOW TO CONNECT THE COSMIC BYTE CONTROLLER TO YOUR PC?

Required configuration:

- Operating System: Windows® XP to Windows 10
- One USB port

1. Plug the USB cable to your computer

Warning: You must install the Cosmic Byte driver for your controller running Windows® XP To avoid malfunctions (loss of vibration, disconnection), please connect the USB cable to a USB port on the back of your PC and not using a USB port on the front if you face any connection issues.

 
2. Your controller is connected to your PC while the Second LED stays on
3. To operate vibration mode under Dinput mode, please install the Cosmic Byte driver

COSMIC BYTE DRIVER INSTALLATION:

Browse the CD and double click on “Setup” and follow the instructions to install the Cosmic Byte driver. To access the settings of your controller, click [START]>[Control Panel]>[Game Controllers]>[Settings] (the path may vary depending on your OS; the example is based on Windows XP)

Note: Driver installation is only required for older versions of Windows; for the latest Windows operating system, it's plug-and-play.

INSTALLATION

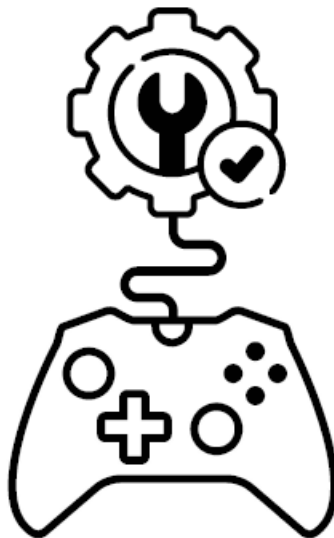

INSTALLATION AND USE

HOW TO SWITCH THE MODE TO D-INPUT OR X-INPUT MODE?

When your controller is connected to your PC with X-input mode, the Second LED light will lit up. You can switch Dinput mode by pressing [Home] button on your controller for 5 seconds: The First LED will lit up under D-input mode

To return Xinput mode, press the [Home] button again on your controller for 5 seconds.

WARNINGS



 
Warning and Safety Instructions:

Do not attempts to repair: Do not attempt to disassemble, open, repair or after the products, its accessories, or the power cable. You could electrocute yourself to other hazards. Any signs of attempts to open and/or after this device, including removing or tearing a sticker, will void the warranty.

Do Not use near liquid: To reduce any risks of fire or electric shock, do not use this device near liquid and do not expose it to rain or moisture. Do not attempt to dry the device with a hair-dryer or microwave over.

Risk of asphyxiation: this device may contain small parts, plastic bags or packaging that could represent a risk of asphyxiation for children. Keep all small parts, bags and packaging out of the reach of children.

CONTROLLER FUNCTIONS

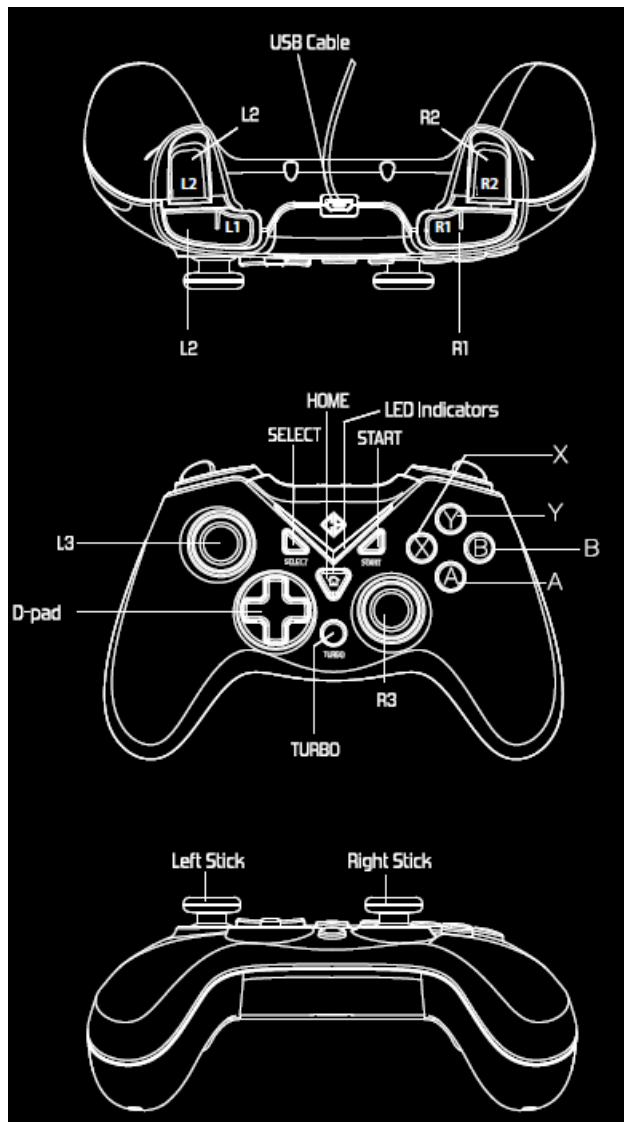

SUPPORT DETAILS

Contact no: 07969273222 (Mon-Sat 10am to 6PM)

Email: cc@thecosmicbyte.com

WARRANTY

The Gamepad carries 1 Year warranty against manufacturing defects only. Physical, Water damage and Tampered products are not covered under warranty. Regular wear and tear from battery usage is not covered under warranty.


Scan the QR code to know the Warranty Claim Procedure.



FAQ'S

support.thecosmicbyte.com

Documents / Resources

	<p>Cosmic Byte INTERSTELLAR Wired Controller [pdf] User Manual INTERSTELLAR Wired Controller, INTERSTELLAR, Wired Controller, Controller</p>
--	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.