



CosmicByte ARES Wireless Controller User Manual

[Home](#) » [CosmicByte](#) » CosmicByte ARES Wireless Controller User Manual 



ARES WIRELESS CONTROLLER User Manual

Contents

- 1 ARES Wireless Controller
- 2 SPECIFICATIONS
- 3 CONTROLLER DESIGN
- 4 MODE AND INDICATOR STATUS
- 5 PLATFORM & CONNECTION:
- 6 DEVICE CONNECTION
- 7 BATTERY:
- 8 TROUBLESHOOTING
- 9 PAIRING STEPS
- 10 WARRANTY
- 11 Documents / Resources
 - 11.1 References

ARES Wireless Controller






SPECIFICATIONS

Model:	ARES Wireless
Humidity:	20~80%
Temperature:	-10°C~+60°C
Working current:	<150mA
Product size :	156 X 105 X 55mm
Interface:	USB
Packing size :	180 X 75 X 150mm
Agreement:	USB 2.0/3.0
Work Voltage :	3.7-4.2v
Work Distance:	6-8 meter
Working Mode:	ANDROID/DirectInput/Xinput/PS3
Product Weight:	220g

CONTROLLER DESIGN

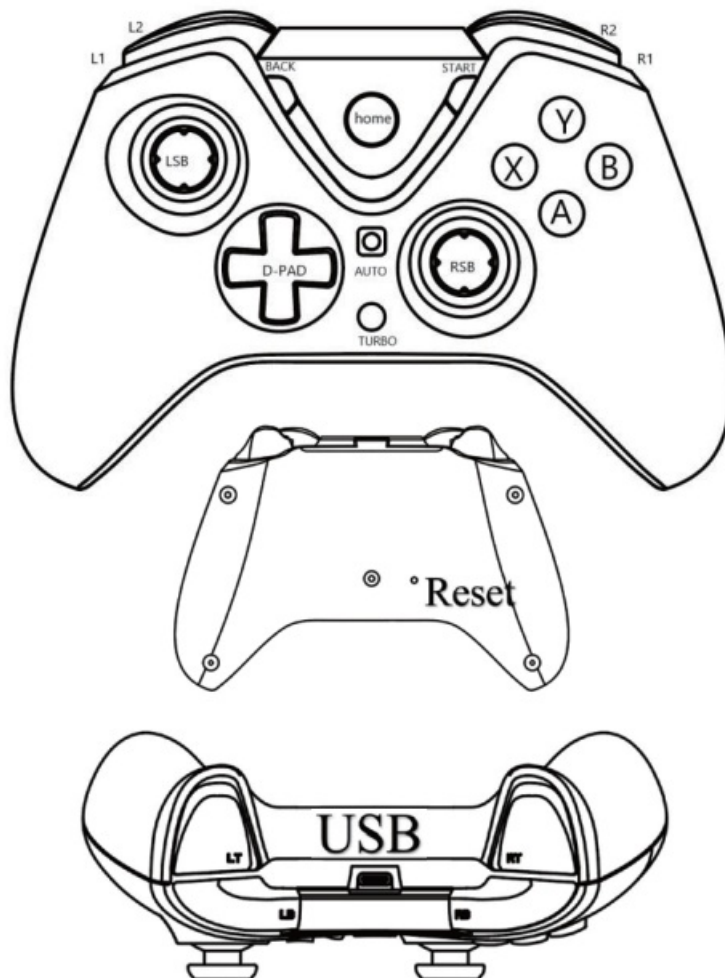

MODE AND INDICATOR STATUS

1. X INPUT: BLUE
2. DIRECT INPUT : RED
3. PC ANALOG: YELLOW
4. ANDROID: GREEN
5. PS3: AUTOMATIC

PLATFORM & CONNECTION:

PC: Windows

Plug and Play for Windows 8 and above

Android/PS3: No driver required

NOTE: Android: Android 4.0 above, Requires OTG function. Connect the gamepad to the phone using an OTG cable and wireless dongle.

Please contact android device manufacturer for android compatibility.
Android compatibility is not covered under warranty.

POWER OFF

Press B + Back Button for 5 seconds to turn on the controller

CHANGE MODE

Press the HOME key for more than 5 seconds: X-input and Direct input.

ABXY LED AND V LED SWITCH

1. Press X+ Back button to turn off the ABXY LED , and the press again to turn on LED.
2. Press A + Back button to turn off the V LED , and the press again to turn on LED.

LEFT JOYSTICK AND D-PAD SWITCH

Press L3+back change joystick and D-pad

DEVICE CONNECTION

Connect the gamepad with the PC using the wireless dongle. Make sure there is no obstruction between the gamepad and the dongle for the best connection. Use the USB Extension cable for best results.

NOTE:

1. You do not need to change the mode while connecting the gamepad to android and PS3.
2. Gamepad will connect to Windows as X-input automatically.
3. If any difficulty in connecting the gamepad to Windows, please reconnect the gamepad.

TURBO – A, B, X, Y, L1, L2, R1, R2

1. Set turbo: Press (A, B, X, Y, L1, L2, R1, R2) button where you want to set Turbo and then press turbo button.
2. Cancel turbo: Press (A, B, X, Y, L1, L2, R1, R2) button where you want to cancel Turbo and then press turbo button.

AUTO TURBO – A, B, X, Y, L 1, L2, R1, R2

1. Set AUTO turbo: Press (A, B, X, Y, L1, L2, R1, R2)) button where you want to set Turbo and then press AUTO button.
2. Cancel AUTO turbo: Press (A, B, X, Y, L1, L2, R1, R2) button where you want to cancel Turbo and then press AUTO button.

BATTERY:

1. When the battery is low, the LED will flash and gamepad will turn off the vibration to save battery.
2. When gamepad is being charged the LED will flash slowly.
3. When the charging is complete, the LED will turn off.

Note: Use only 5A/1V chargers or plug it to a PC USB port to charge the gamepad. Using Fast chargers can damaged the battery and compo- nents.

Warranty will be void with usage of fast charging.



TROUBLESHOOTING

HOW TO PAIR ARES CONTROLLER TO THE DONGLE

If the dongle and Controller Home button led light is continuously blinking it indicates that both are not paired to each other

PAIRING STEPS

1. Plug in the receiver to your PC
2. Press the Home button on the Controller
3. Now press the Home button twice when the lights start blinking
4. Both the LED on dongle and controller will stop blinking
5. The controller is now ready for use

SUPPORT DETAILS

Phone: 1800 31300 7700 (Mon-Fri 10am to 5PM)

Email: cc@thecosmicbyte.com

FAQ: support.thecosmicbyte.com

WARRANTY

The Controller carries 1 Year warranty against manufacturing defects only.
Physical, Water damage and Tampered products are not covered under warranty.
Regular wear and tear from battery usage is not covered under warranty.


Scan the QR code to know the Warranty Claim Procedure.



<https://www.youtube.com/watch?v=l2vxO17Sprs&i=2s>

FAQ'S support.thecosmicbyte.com

Documents / Resources

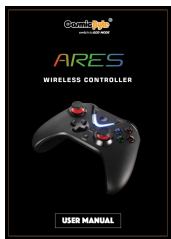

[CosmicByte ARES Wireless Controller](#) [pdf] User Manual
ARES Wireless Controller, ARES, Wireless Controller, Controller

References

- [User Manual](#)

Manuals+.