




Home » COSTWAY » COSTWAY HW72360 Wicker Sofa Set User Manual 🟗

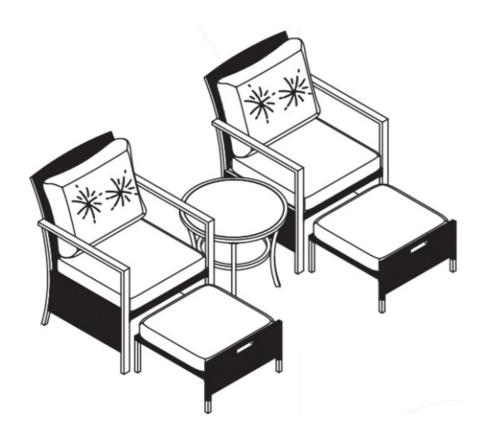

COSTWAY HW72360 Wicker Sofa Set



THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.


Contents [hide]

- 1 Before You Start
- 2 Armless Chair
- 3 Ottoman /Pouf x2
- 4 Table / Table x1
- 5 Parts
- 6 Tools
- 7 Armless Chair
- 8 Ottoman /Pouf x2
- 9 Return / Damage Claim Instructions
- 10 Customer Support
- 11 Documents / Resources
 - 11.1 References

⚠ Before You Start

- ⚠ Please read all instructions carefully.
- A Retain instructions for future reference.
- ⚠ Separate and count all parts and hardware.
- A Read through each step carefully and follow the proper order.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- Always place the product on a flat, steady and stable surface.
- ⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

Armless Chair

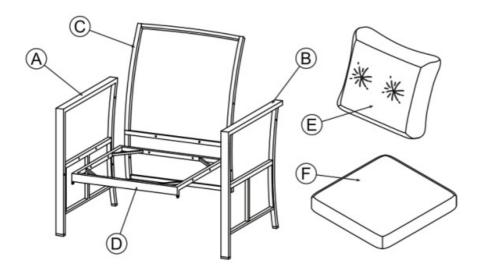

Ottoman /Pouf x2



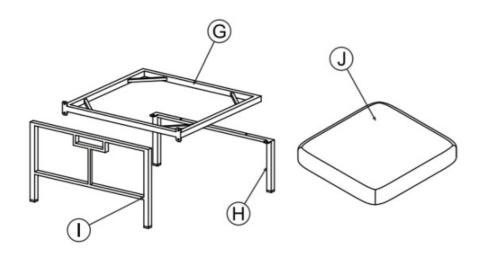


Table /Table x1

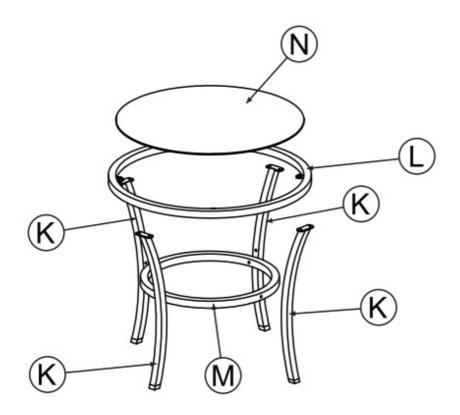


Parts


• Side frame (right of armless chair)

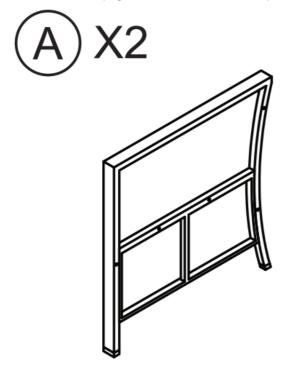

• Side frame (left of armless chair)

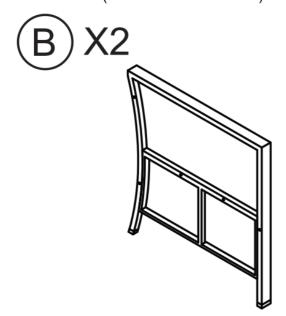


• Back frame of armless chair

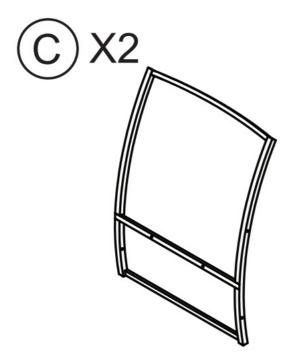


• Seat frame of armless chair




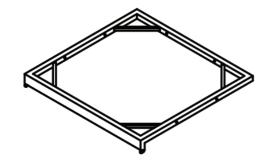


• Back cushion for armless chair

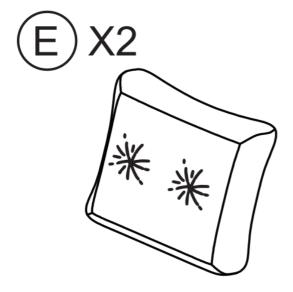


• Seat cushion for armless chair

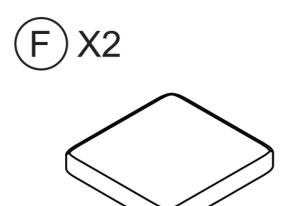


• Seat frame of ottoman

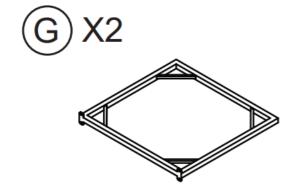


• Back frame of ottoman

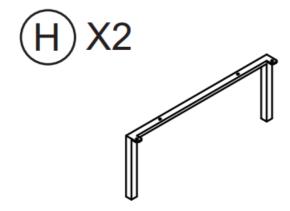


• Front frame of ottoman

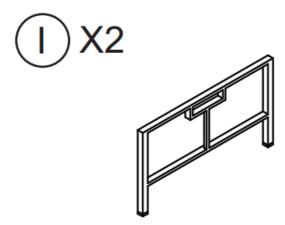


• Seat cushion for ottoman

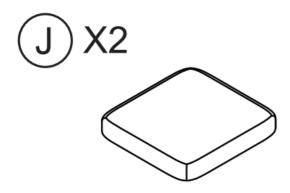


• Side frame of table

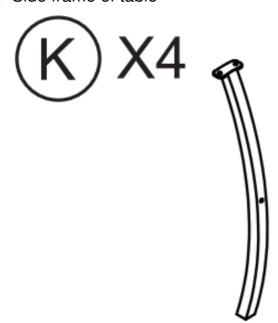


• Top frame of table

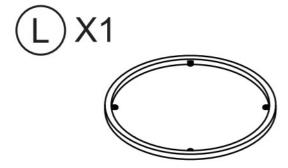



• Bottom frame of table

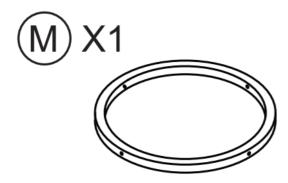


• Glass /Verre 500x5mm

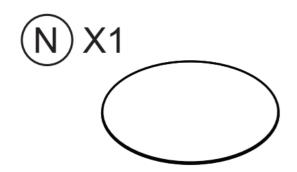


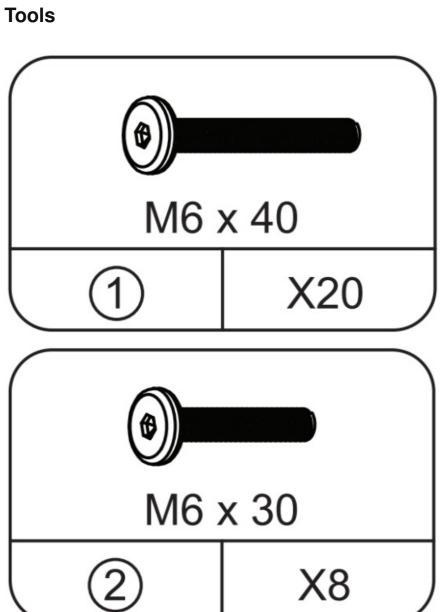


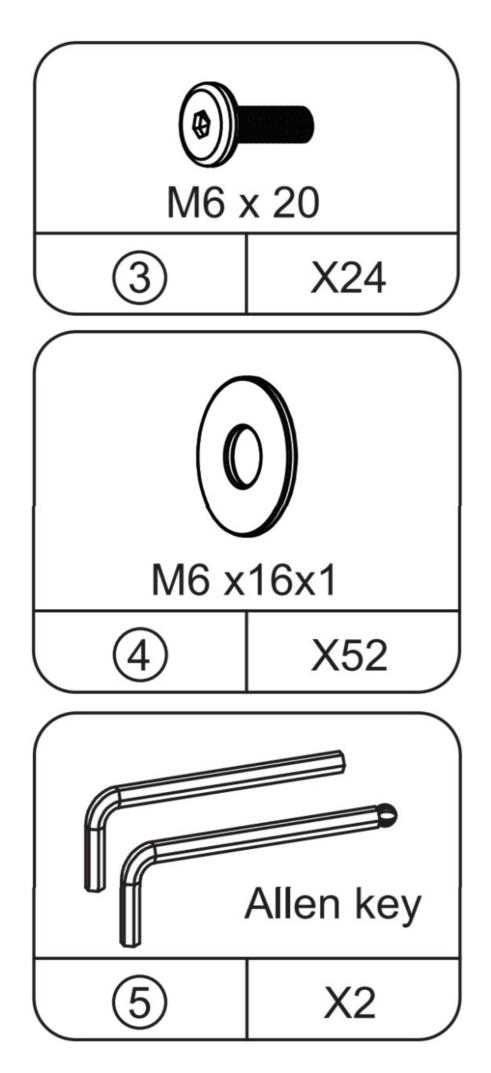


Armless Chair

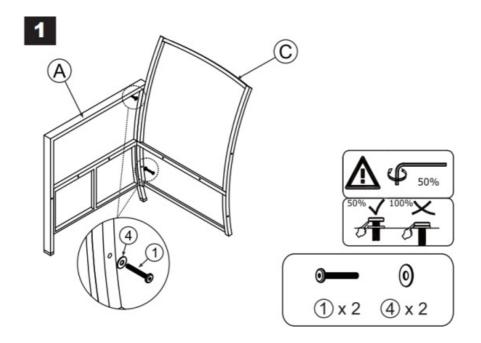

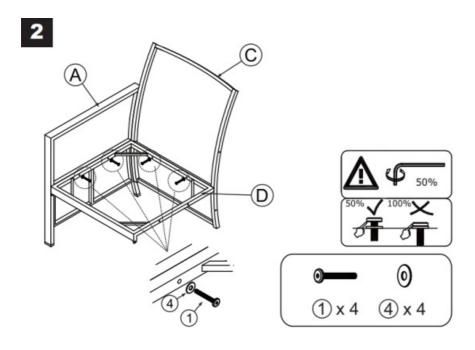


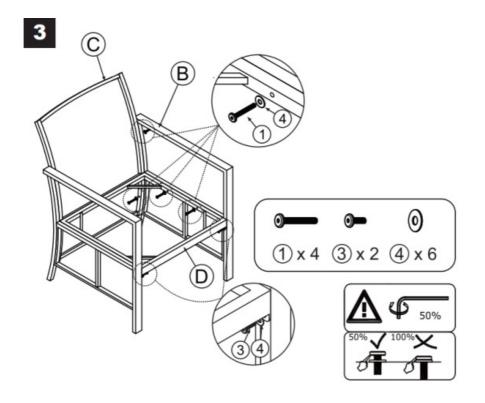


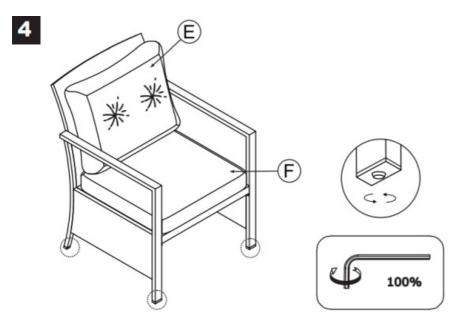

Ottoman /Pouf x2



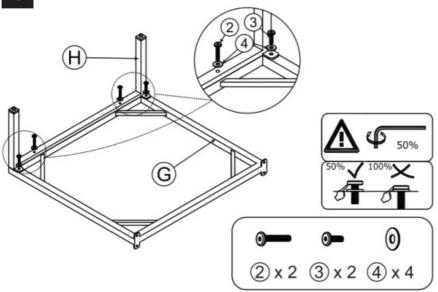

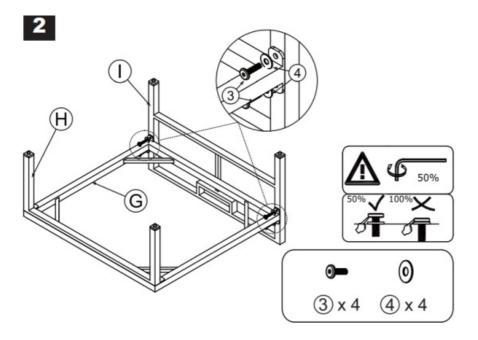





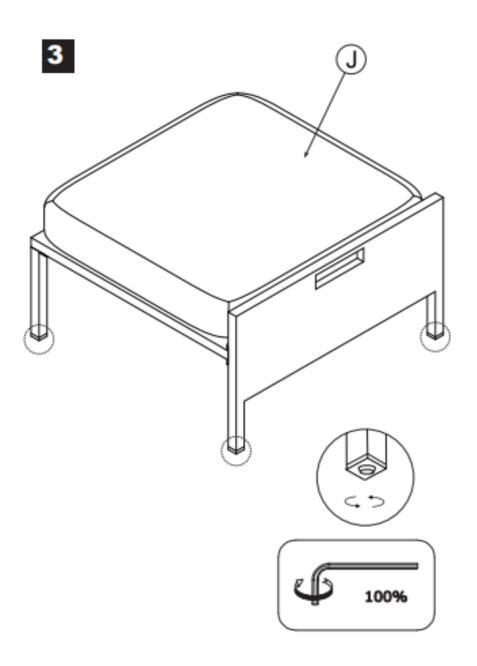


Table /Table x1

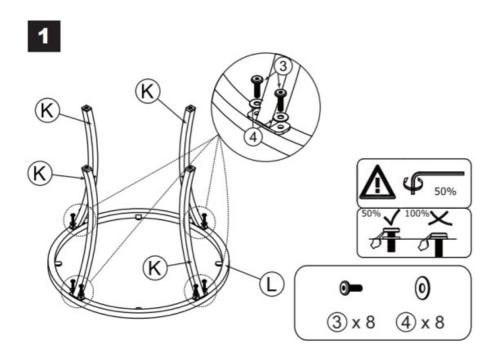

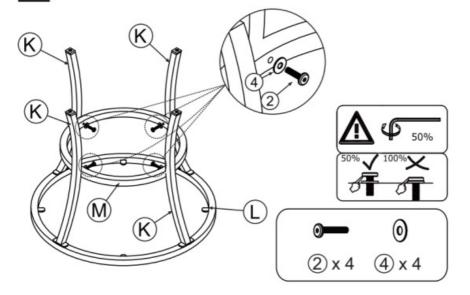

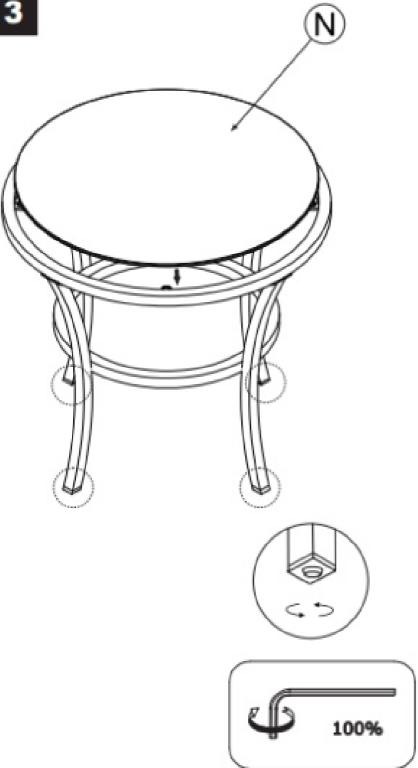

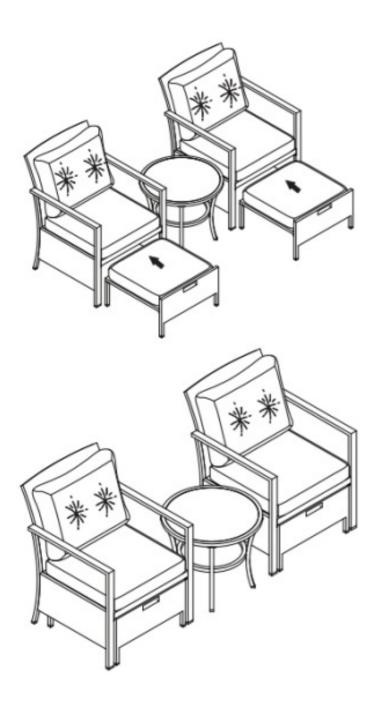

A Return / Damage Claim Instructions

⚠ DO NOT discard the box / original packaging.

In case a return is required, the item must be returned in original box. Without this your return will not be accepted.

⚠ Take a photo of the box markings.

A photo of the markings (text) on the side of the box is required in case a part is needed for replacement. This helps our staff identify your product number to ensure you receive the correct parts.

⚠ Take a photo of the damaged part (if applicable).

A photo of the damage is always required to file a claim and get your replacement or refund processed quickly. Please make sure you have the box even if it is damaged.

⚠ Send us an email with the images requested.

Email us directly from marketplace where your item was purchased with the attached images and a description of your claim.

Customer Support

USA office: Fontana

AUS office: Truganina

FRA office: Saint Vigor d'Ymonville

If you're having difficulty, our friendly customer team is always here to help.



USA: cs.us@costway.com

AUS: cs.au@costway.com

GBR: cs.uk@costway.com



Documents / Resources



COSTWAY HW72360 Wicker Sofa Set [pdf] User Manual HW72360 Wicker Sofa Set, HW72360, Wicker Sofa Set, Sofa Set

References

- Costway More Than Just Furniture
- User Manual

■ COSTWAY Set

—Previous Post

COSTWAY NP12022 Rocking Sun Lounger Instruction ManualNext Post—

COSTWAY PV10236 Cat Litter Box Enclosure User Manual

Leave a comment

Your email address will not be published. Required fields are marked*
Comment *
Name
Email
Website
☐ Save my name, email, and website in this browser for the next time I comment.
Post Comment
Search:

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

e.g. whirlpool wrf535swhz

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of

Search

these marks on this website does not imply any affiliation with or endorsement.			