Home » COSTWAY » COSTWAY NP11267 Folding Picnic Table Instruction Manual

COSTWAY NP11267 Folding Picnic Table Instruction Manual

Contents

- 1 Folding Picnic Table
- 2 NP11267
 - 2.1 Before You Start
 - 2.2 Return / Damage Claim

Instructions

- 3 Documents / Resources
 - 3.1 References
- **4 Related Posts**

Folding Picnic Table

NP11267

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.



Before You Start



Please read all instructions carefully.



Retain instructions for future reference.



Separate and count all parts and hardware.



 
A Read through each step carefully and follow the proper order.

We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.





Always place the product on a flat, steady and stable surface.

Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.






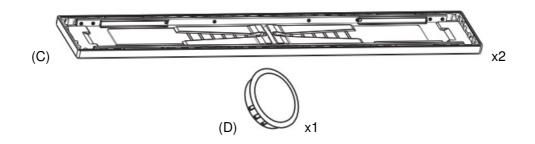

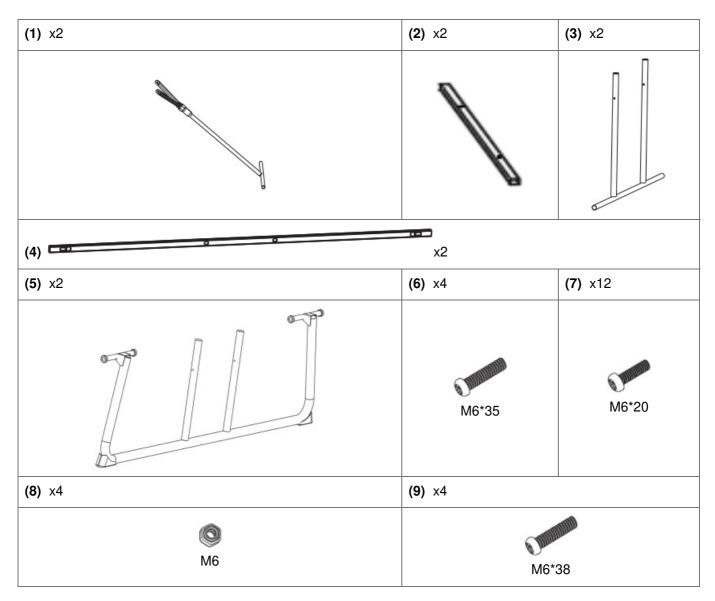


[1] (A) x2 (B) x1

Align the card slot first, then push to the left to tighten it

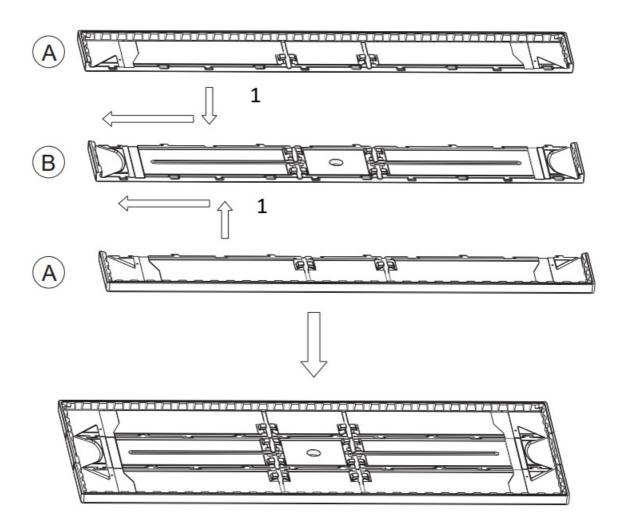


1. Align the card slot first, then push to the left to tighten it

[2] (1) x2 (2) x2 (3) x2 (4) x2

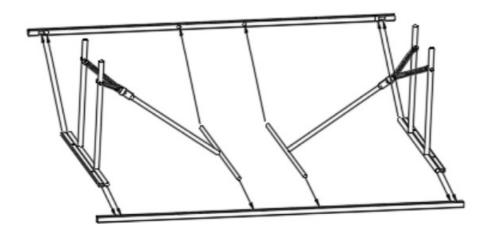


Align the slot and clamp it in

Don't tighten it until clamped into the feet tube (5)

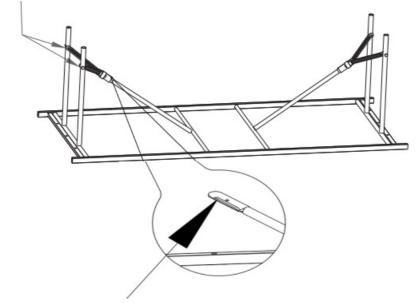



Note: This point is facing the direction of the panel frame while installing.

[3] (6) x4 (7) x4

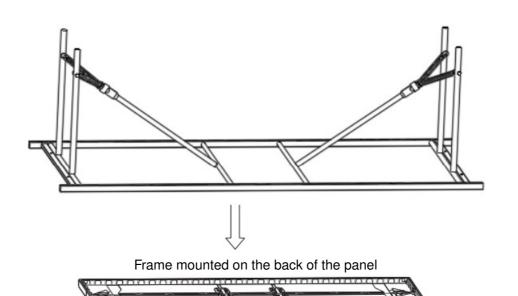



Don't tighten it until clamped into the feet tube (5)

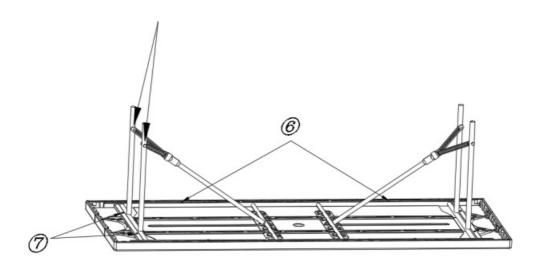

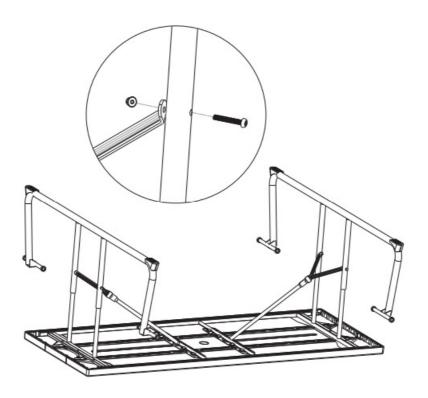


[5] (7) x8

 

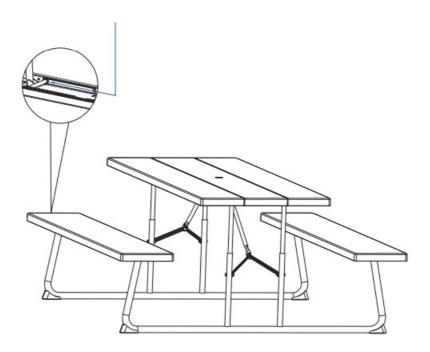

[6] (D) x1

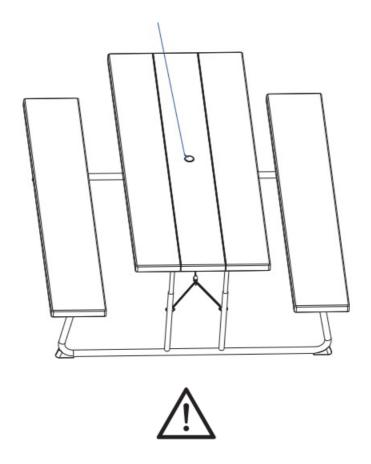

Return / Damage Claim Instructions



$\stackrel{\textstyle extstyle /}{ extstyle extsty$

In case a return is required, the item must be returned in original box. Without this your return will not be accepted.



Z!\ Take a photo of the box markings.

A photo of the markings (text) on the side of the box is required in case a part is needed for replacement. This helps our staff identify your product number to ensure you receive the correct parts.



Take a photo of the damaged part (if applicable).

A photo of the damage is always required to file a claim and get your replacement or refund processed quickly. Please make sure you have the box even if it is damaged.



Send us an email with the images requested.

Email us directly from marketplace where your item was purchased with the attached images and a description of your claim.

USA office: Fontana

GBR office: FDS Corporation Limited, Unit 4, Blackacre Road, Great Blakenham, Ipswich, Ip6 0FL, United

Kingdom

If you're having difficulty, our friendly customer team is always here to help.



USA:cs.us@costway.com AUS:cs.au@costway.com

GBR:cs.uk@costway.com
ITA:cs.it@costway.com
POL:sklep@costway.com
DEU:cs.de@costway.com
FRA:cs.fr@costway.com
ESP:cs.es@costway.com

Documents / Resources



COSTWAY NP11267 Folding Picnic Table [pdf] Instruction Manual NP11267, NP11267 Folding Picnic Table, Folding Picnic Table, Picnic Table, Table

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.