



COSWHEEL Speed Limit Setting Instructions

[Home](#) » [COSWHEEL](#) » COSWHEEL Speed Limit Setting Instructions 



COSWHEEL

Speed Limit Setting Instructions

For any updates and notices, please go to the site:

<https://coswheel-t20.com>

Contents

[1 Speed Limit Setting](#)

[2 Documents /
Resources](#)



[2.1 References](#)

[3 Related Posts](#)

Speed Limit Setting

1. Press the power button  to enter the boot interface



2. Press at the   same time to enter the setting interface



3. Press and hold the “-” and “i” key for more than 2 seconds at the same time to enter the wheel diameter setting interface.



4. Press the “i” key briefly to enter the speed limit setting interface.



5. speed which can be added/subtracted through UP+/DOWN- keys




6. Press the "i" key for a long time to confirm and exit the setting state.



Notification: No-load speed up to 60KMH, load speed 45KMH. Too high a speed is not good for the long-term life of the motor and battery. Please follow local road traffic laws and pay attention to riding safety.



Documents / Resources

	<p>COSWHEEL Speed Limit Setting [pdf] Instructions Speed Limit Setting, Speed Limit</p>
---	---

References

-  [COSWHEEL T20 E-MTB – COSWHEEL-T20](#)
-  [COSWHEEL T20 E-MTB – COSWHEEL-T20](#)