

 


Cotsoco M49A Record Player User Manual

[Home](#) » [cotsoco](#) » Cotso M49A Record Player User Manual 



M49A Record Player User Manual

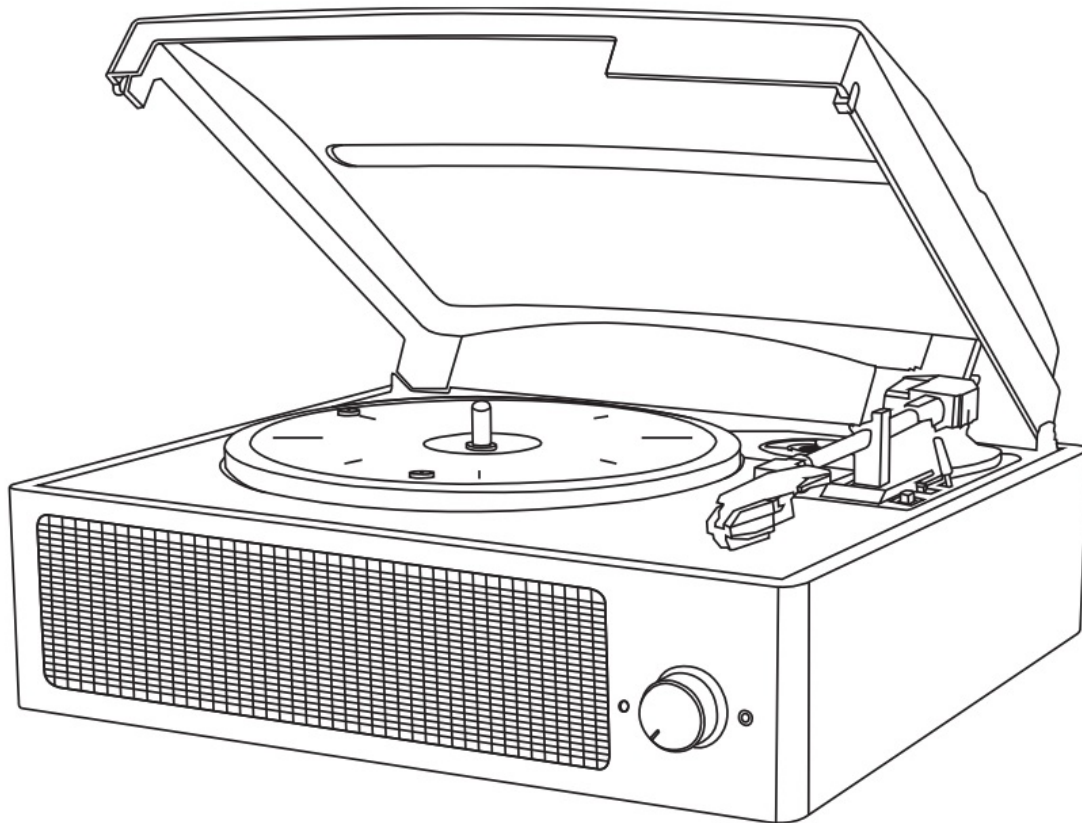

READ THIS INSTRUCTIONS CAREFULLY BEFORE USE AND STORE IN A SAFE PLACE FOR FUTURE REFERENCE

Contents

- 1 Read this before operation
- 2 Description of Parts:
- 3 TIPS FOR BETTER PERFORMANCE
- 4 Documents / Resources

Read this before operation

- Choose the installation location of your unit carefully. Avoid placing it in direct sunlight or close to a source of heat. Also avoid locations subject to vibrations and excessive dust, heat, cold or moisture.
- The ventilation holes should not be covered. Make sure there is enough space above and beside the amplifier/receiver (about 4 hours). Do not place a CD player or other equipment on top of the Turntable Player/Recorder/
- Do not open the cabinet as this might result in damage to the circuitry or electrical shock. If a foreign object gets into the set. Contact you dealer.
- When removing the power plug, never yank the cord.
- Do not attempt to clean the unit with the chemical solvents as this might damage the finish. Use a clean, dry cloth.
- Keep this manual in a safe place for future reference.



CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER(OR BACK), NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL



DANGEROUS VOLTAGE

Conducts dangerous voltage, that may be of sufficient magnitude to constitute a risk of electric shock to persons present within this product, enclosure



ATTENTION

The owner's manual contains important operating and maintenance instructions, for your safety, it is necessary to refer to the manual.

WARNING : TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO DRIPPING OR SPLASHING.

 
Note:

This unit will become warm when used for a long period of time. This is normal and does not indicate a problem with the unit

Features:

1. With Bluetooth function
2. 3-Speeds(33,45 and 78 RPM) Selectable Turntable Player
3. Built-in stereo speaker
4. RCA(R & L) output to other speaker systems
5. Aux in and headphone sockets
6. 45 RPM adapter included
7. Belt-drive and semi-automatic play tone arm
8. Portable fashionable design

Description of Parts:

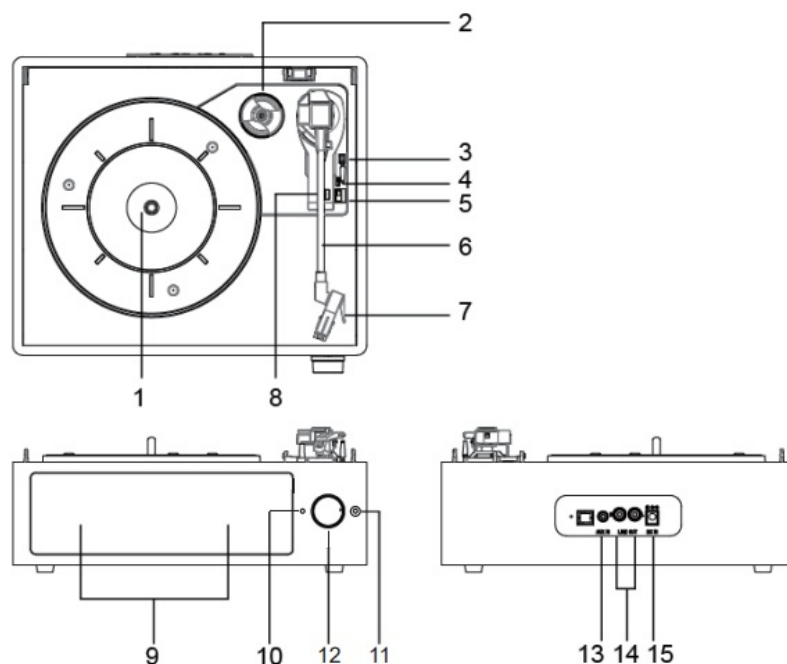

1. Turntable
2. 45 Single adaptor
3. Tone arm lifter
4. Auto stop on/off switch
5. Speed selector
6. Tone arm
7. Cartridge/Stylus
8. Tone arm rest and security latch
9. Hi-fi speaker
10. Power Indicator /Bluetooth Indicator (Power Indicator is red, Bluetooth Indicator is blue)
11. Headphone Jack
12. Power Switch & Volume Control
13. UX-IN
14. RCA(R & L) output
15. Power in(DC5V-1A)

Bluetooth Playing

1. Plug power adaptor to DC IN of the product and connect the power adaptor to 100–240V/50/60Hz AC power outlet.
2. Remove 3.5mm audio cable from AUX-IN jack.
3. Put the Tone Arm on Tone arm rest and security latch.
4. Power on the product by rotating the Power Knob. (Power Indicator keeps red Bluetooth Indicator fast flash blue
5. Switch on Bluetooth of your smartphone. Then search and connect to BR. (The bluetooth indicator light

changes from fast flashing to long on)

6. Play music of smart phone.
7. Rotate the volume control knob to get desired sound level.

 
Attention:

Before connecting Bluetooth,

1. Please remove 3.5 mm audio cable from AUX-IN jack.
2. Put the Tone Arm on Tone arm rest and security latch.

Vinyl Playing

1. Plug power adaptor to DC IN of the product and connect the power adaptor to 100–240V /50/60Hz AC power outlet.
2. Remove 3.5mm audio cable from AUX-IN jack.
3. Power on the product by rotating the Power Knob. (Power Indicator keeps red Bluetooth Indicator fast flash blue)
4. Then put a record on the Platter lightly. In certain circumstances, 45 RPM adapter is needed. Power Indicator keeps red

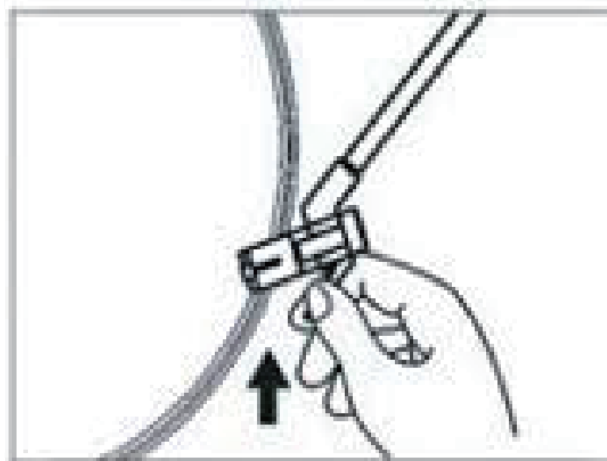

5. Select the speed of record: 33 1/3, 45, 78rpm according to vinyl to played.
6. Remove the stylus guard and push the lift lever upward to raise the tone arm from the arm park, and then move the cartridge holder over the record gently, now the platter will run automatically (default set of Auto/Manual stop switch at ON position). Then put down the lever, the tone arm would drop and touch record surface gently. Now users can enjoy their favorite sons.
7. Select the auto/manual stop control: The turntable will stop automatically while the song on the record finished when the switch at ON position. The other side it will always play when it is at OFF position, this may helps to play some long recorded vinyl which can not be played to the end by normal way.
8. Rotate the volume control knob to get desired sound level.
9. Push the arm lift lever up to raise the arm, now platter will still running but play will pause. To continue the play, user just need to put down the lever.

Attention:

Please remove 3.5 mm audio cable from AUX-IN jack at first before playing vinyl.

AUX-IN(LINE IN) Playing

1. Plug power adaptor to DC IN of the product and connect the power adaptor to 100–240V/50/60Hz AC power outlet.
2. Put the Tone Arm on Tone arm rest and security latch.
3. Power on the product by rotating the Power Knob. (Power Indicator keeps red Bluetooth Indicator fast flash blue)
4. Plug 3.5mm audio cable to AUX-IN of the product and AUX-OUT of audio sources. (Power Indicator keeps red)
5. Rotate the volume control knob to get desired sound level.

RCA Output:

Use RCA audio cable to connect the product and other audio devices to achieve different sound effects.

PHONES OUTPUT/EARPHONE JACK:

 
1. The turntable can be connected to amplifier or speakers by 3.5mm HEADPHONE jack, and you can get the 3.5mm to RCA audio converter to other audio jack.
2. Private listen of earphone also can be realized through this jack.

TIPS FOR BETTER PERFORMANCE

1. When opening or closing the turntable cover, handle it gently, moving it either at the center or equally from both sides.
2. Do not touch the stylus tip with your fingers; avoid bumping the stylus on the turntable mat or a record's edge
3. Clean the stylus tip frequently, using a soft brush with a back-to-front motion only.
4. If you use a stylus cleaning fluid, use it very sparingly.
5. Wipe the dust cover and turntable housing gently with a soft cloth. Use only a small amount of mild detergent solution to clean the turntable and dust cover.
6. Never apply harsh chemicals or solvents to any part of the turntable system.
7. Prior to moving the turntable, always unplug it from the AC outlet and fasten the tone arm on the tone arm rest with the vinyl twist-tie

Installation and Operation

CAUTION: To avoid stylus damage, make certain the included stylus guard is in place whenever the turntable is being installed, moved or cleaned.

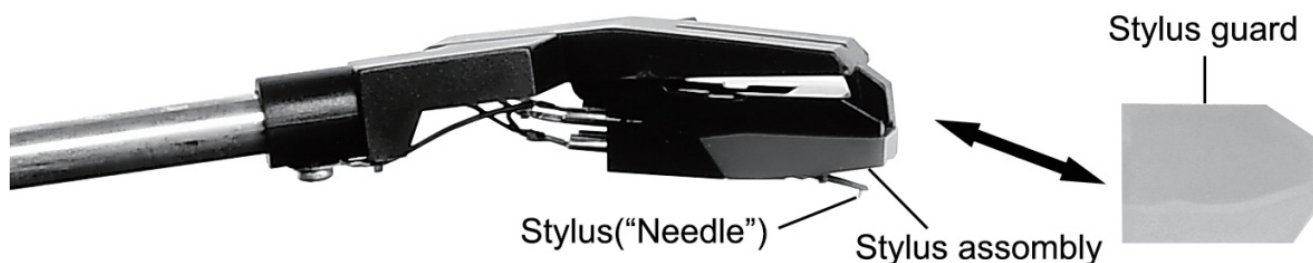


HOW TO REPLACE THE NEEDLE

To replace the needle, please refer to the instructions below.

Removing the needle form the cartridge

1. Place a screwdriver at the tip of the needle heads hell and push downwards in the direction shown in sketch “A”
2. Remove the needle head shell by pulling it forwards and pushing downwards.

 Inserting the needle

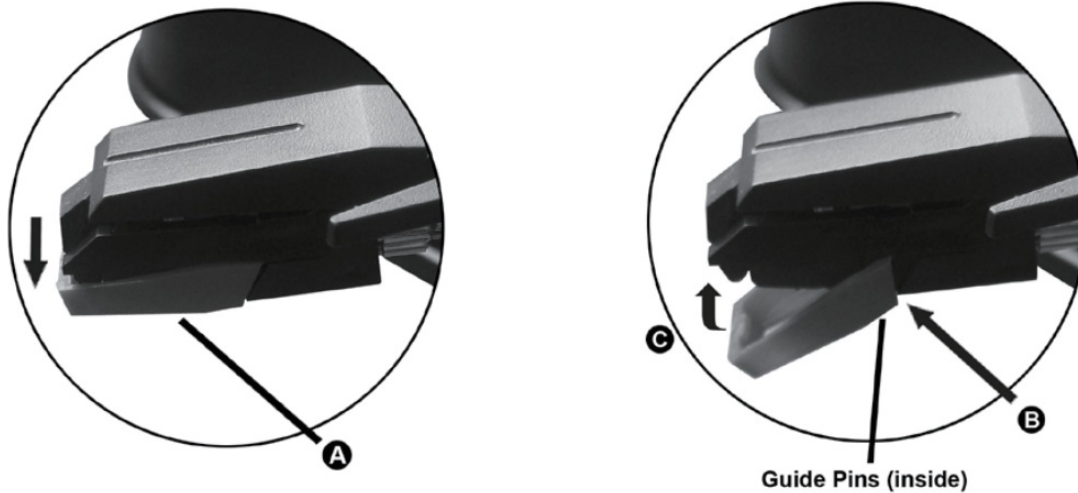

1. Hold the tip of the needle head shell and insert it by pressing in the direction illustrated by “B”
2. Push the needle head shell upwards in the direction illustrated by “C” until the needle locks into the tip position.

CAUTION:

Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

This unit should not be adjusted or repaired by anyone except qualified service personnel.

Caring for the player

- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- The maximum ambient temperature: 35
- Electronic products of this kind should never be subjected to extreme temperatures or high humidity. For instance, this set should not be placed in bathing areas or around stoves and radiators.
- If anything falls into the cabinet, unplug the unit and have it checked by qualified personnel before operating it any further.

Cleaning the Unit

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- The finish on your unit may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.
- Mild soap and a damp cloth may be used on the front panel.

Inclination

- Do not install the unit in an inclined position, It is designed to be operated in a horizontal position only.

Condensation

- If the unit is brought directly from a cold to a warm location, moisture may condense inside the player, and

cause damage it. When you first install the unit, or when you move it from a cold to a warm location, wait for 30 minutes before operating the unit.

Disconnect Power

- If you are not going to use the player for long time, be sure do disconnect the player from the AC power source



At the end of its life, the device has to be separated from the other waste. Consign the device and all its components together to a center of electronical and electrotechnical waste recycling center, designated by your local authorities

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.



User Manual
Record Player



PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING THIS
RECORD PLAYER FOR YOUR PROTECTION

[Cotsoco M49A Record Player](#) [pdf] User Manual

M49A, 2A59C-M49A, 2A59CM49A, M49A Record Player, Record Player, Player