

COURPAL Final-J11 Karaoke Machine with Handle



COURPAL Final-J11 Karaoke Machine with Handle User Manual

[Home](#) » [COURPAL](#) » COURPAL Final-J11 Karaoke Machine with Handle User Manual 

Contents

- [1 COURPAL Final-J11 Karaoke Machine with Handle](#)
- [2 Product Specifications](#)
- [3 Product Usage Instructions](#)
- [4 EXTERNAL SOCKET INSTRUCTION](#)
- [5 CONNECTION INSTRUCTION](#)
- [6 CHARGE INSTRUCTION](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

COURPAL

COURPAL Final-J11 Karaoke Machine with Handle



Product Specifications

- Wireless Range: 33FT(10m)
- Bluetooth: 5.3
- SNR: 80dB
- Charge Voltage: DC 5V/1A

Product Usage Instructions

Speaker Button Instruction

Instructions for using the speaker button.

Mic Button Instruction

Instructions for using the mic button.

Charge Indicator

Red light on during charging, light off after charging is complete.

Volume Control

- VOL +: Long press for the next play, short press to increase the volume of VOL+ the microphone's current mode.
- VOL -: Long press on the previous song, short press to decrease the volume of the microphone's current mode.

EFF Button

Short press to switch voice modes (male, female, baby, monster, karaoke, speech), double press to remove

backing vocals.

Power On/Off

Long press to turn on/off mic, short press to switch mic mode (mic/reverb/accompaniment).

External Socket Instructions

- AUX: External Audio Source
- TF: TF Card Port
- USB: USB Port
- DC 5V: Microphone Charging Port

Connection Instructions

- Bluetooth: Power on / Switch Bluetooth Mode (voice prompt) to connect to Bluetooth, connected successfully will have a machine ringing tone.
- TF Card/USB: Plug in the TF Card/USB, the machine will automatically recognize and play.
- AUX: Plug the audio cable into the AUX Port and connect to the phone/PC headphone Output Port. Press to switch to external audio mode. Open the audio software to play music.

Charge Instructions

Low battery auto power off. Please use the accessory USB cable to charge for 5 hours for normal charging. The red light turns off automatically after charging is finished.

Warnings

For any Karaoke Machine usage issues, please contact the manufacturer. If the Karaoke Machine gets wet internally due to rain or moisture, please put it in a ventilated place to dry or contact the manufacturer. The Karaoke Machine should not be placed in an overheated environment.

Frequently Asked Questions (FAQ)

- **Q: What should I do if the wireless range is shorter than specified?**

A: Make sure there are no obstructions between the device and the Karaoke Machine. Try moving closer to improve connectivity.

- **Q: How do I know when the Karaoke Machine is fully charged?**

A: The red light on the charge indicator will turn off after charging is complete.

COURPAL MACHINE

USER MANUAL

Please read the manual carefully before use





Wireless Range: 33FT(10m)



Bluetooth: 5.3



SNR: 80dB



Charge Voltage: DC 5V/1A

- POWER ON/OFF: Long press to turn ON/OFF, Press 8 Sec to Reset
- PLAY/PAUSE Short press to play/pause, long press to disconnect/reconnect Bluetooth
- MODE: Press to switch modes
- PREVIOUS PLAY: Short press for previous music, long press for reduced volume
- NEXT PLAY: Short press for next music, long press for volume increase
- LIGHTING: Short press to switch the light, long press to turn OFF the light
- CYCLE: Press to turn ON/OFF loop of music
- VOCAL REMOVAL: Press to turn ON/OFF silence vocals (voice prompt)
- CHARGE INDICATOR: Red light on during charging, light off after charging is complete
- **VOL+** : Long press for the next play, short press to increase the volume of the microphone's current mode
- **VOL-** : Long press on the previous song, short press to decrease the volume of the microphone's current mode
- **EFF** : Short press to switch voice modes (male, female, baby, monster, karaoke, speech), double press to remove backing vocals
- POWER ON/OFF: Long press to turn on/off mic, short press to switch mic mode (mic/reverb/accompaniment)
- DC 5V: Microphone Charging Port

EXTERNAL SOCKET INSTRUCTION



AUX: External Audio Source



TF: TF Card Port



USB: USB Port



DC 5V: Microphone Charging Port

CONNECTION INSTRUCTION

- **Bluetooth:**
Power on / Switch Bluetooth Mode (voice prompt) to connect to Bluetooth, connected success that machine ringing tone
- **TF Card/USB:**
Plug in the TF Card/USB, the machine automatically recognizes and play

- **AUX:**

Plug the audio cable into the AUX Port and connect to the phone/PC headphone Output Port. Press to switch to external audio mode. Open the audio software to play music.

CHARGE INSTRUCTION


- Low battery auto power off
- Please use the accessory USB cable to charge
- 5 hours for normal charging, the red light turns off auto after charging finished



WARNING

- For any Karaoke Machine usage issues, please contact the manufacturer.
 - Karaoke Machine internal rain or moisture, please put in a ventilated place to dry or contact the manufacturer.
 - Karaoke Machine should not be placed in an overheated environment.
-

Documents / Resources

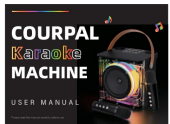

[COURPAL Final-J11 Karaoke Machine with Handle](#) [pdf] User Manual

Final-J11 Karaoke Machine with Handle, Final-J11, Karaoke Machine with Handle, Machine with Handle, Handle

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.