



## Cox Contour Remote TV Codes: Big EZ Setup Guide & Programming

[Home](#) » [Cox](#) » **Cox Contour Remote TV Codes: Big EZ Setup Guide & Programming** 

The COX Big EZ Contour Remote Setup Guide and Codes is a comprehensive manual that provides users with step-by-step instructions on how to set up and program their Big EZ remote. The remote is pre-programmed to operate Contour cable boxes, but users may need to program it for Motorola or Cisco mode if they are using it to control a non-Contour cable box. The manual also includes instructions on how to program the remote for TV power, volume, and mute control, as well as troubleshooting tips for users who encounter issues with their remote. The TV code list included in the manual provides users with a comprehensive list of codes for various TV manufacturers. If users cannot find their TV manufacturer's code, the manual provides a step-by-step guide on how to search through all available codes. Overall, this manual is an essential tool for users who want to get the most out of their COX Big EZ Contour Remote.

## Contents

- 1 COX Big EZ Contour Remote Setup Guide and Codes
- 2 Setting Up your Big EZ Remote
- 3 Programing for TV control:
- 4 Can't find your code?
- 5 General Troubleshooting
- 6 Button Descriptions:
- 7 DEVICE CODES
  - 7.1 SETUP CODES FOR TV
  - 7.2 SPECIFICATION
  - 7.3 FAQS
- 8 Read More About This Manual & Download PDF:
  - 8.1 Questions about your Manual? Post in the comments!
- 9 Related Posts

## COX Big EZ Contour Remote Setup Guide and Codes



### Setting Up your Big EZ Remote

Your remote is preprogrammed to operate Contour cable boxes. If you are using the remote for control of a non-Contour cable box, you may need to program the remote for Motorola or Cisco mode using the steps below:

**Step 1.** Press the Setup button until the status LED on the remote changes from red to green. Then,

- Press B for control of a Motorola brand cable box.
- Press C for control of a Cisco or Scientific-Atlanta brand cable box.

**Note:** The status LED will blink green twice when the button is pressed. If you need to re- program the remote for control of an Contour cable box, press A in Step 1.

**Step 2.** Press the Contour button to verify that the remote controls the cable box as expected.

### **Programing for TV control:**

To program your remote for control of TV Power, Volume and Mute, follow the steps below:

1. Install the batteries and make sure your TV and cable box are powered on.
2. Refer to the TV Code list included with the remote to locate your TV manufacturer.
3. Press and hold the Setup button on the remote until the status LED changes from red to green.
4. Enter the first code listed for your TV manufacturer. The status LED should flash green twice when the code is entered.
5. Press the TV Power button on the remote. If the TV turns off, you have successfully programmed your remote. Turn the TV back on and verify that the Volume and Mute buttons operate the TV volume as expected.
6. If the TV does not turn off or the Volume and Mute buttons do not work, repeat the steps above using the next code listed for your TV manufacturer.

### **Can't find your code?**

If you can't program the remote for TV control using the codes provided for your manufacturer, follow the steps below to search through all available codes.


1. Turn on your TV.
2. Press and hold the Setup button on the remote until the status LED changes from red to green.
3. Press the CH+ button repeatedly to search through the manufacturer codes until the TV turns off.
4. Once the TV turns off, press the Setup button. The status LED on the remote should flash green twice.
5. Press the TV Power button on the remote. If the device turns on, you have successfully programmed the remote for TV contro

### **General Troubleshooting**

#### **Q: Why doesn't my remote work to control my cable box?**

A: This remote is designed to work with Contour, Motorola and Cisco cable boxes. If you have certain Motorola or Cisco cable boxes, you need to program the remote for Motorola or Cisco mode. Follow the "Setting up your Big EZ Remote" steps to program the remote for control of your cable box.

### **Button Descriptions:**

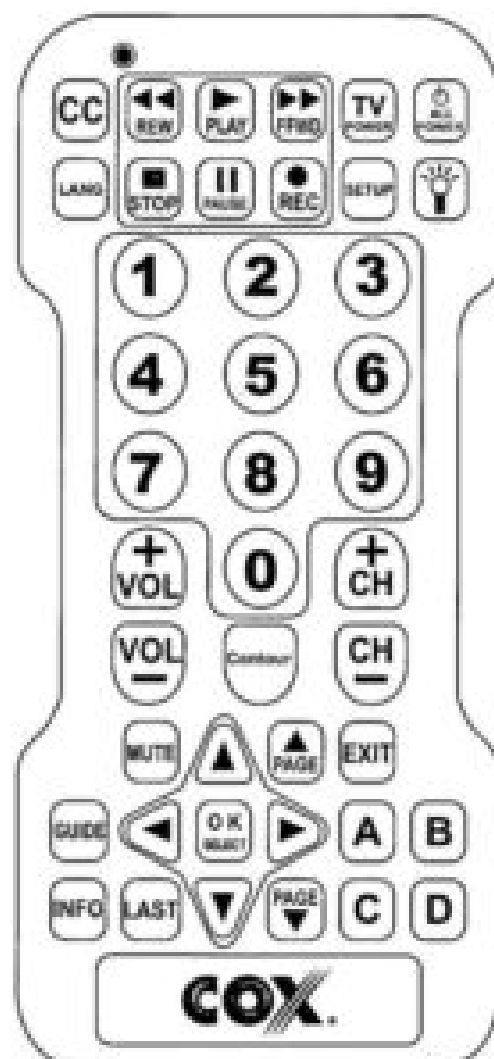



Turns your TV on/off  
(if programmed).



One button to turn the  
cable box and TV  
(if programmed) on/off.



Used for programming  
the remote for control  
of your TV.



Turns the backlight  
on/off.



Turns closed  
captioning on/off.



Selects secondary  
audio stream for  
different language.



Enters the  
on-screen guide  
menus.



Selects the next higher or  
next lower channel.



Controls the volume on  
the cable box or TV  
(if programmed).



Turns the sound on and  
off.



Select the channel  
you want to view.



Shortcut to TV  
listings.



Controls On Demand or  
DVR viewing. Play,  
Pause, Fast-Forward,  
Rewind and Stop.



Scroll through menu screen  
pages.



Context-sensitive  
control keys.



Selects the highlighted  
item within the guide.



Returns to the previous  
channel menu or guide  
screen.



Provides a program  
description.



Exits guide screen and  
returns you to TV viewing.

## DEVICE CODES

## SETUP CODES FOR TV

3M	089,649,653,	Astar	384,581,
A-Mark	302,	Akai	397,076,231,067,509,
Abex	464,		576,446,660,663,376,
Accurian	663,		664,360,513,
Action	556,	Alaron	007,483,
Admiral	475,361,	Albatron	302,541,
Advent	362,581,579,	Ambassador	274,
Adventura	079,	America Action	035,
Altron	364,	Ampro	523,
Aiko	040,	Anam	035,
Aiwa	512,692,	Anam National	468,
Akai	397,076,231,067,509,	AOC	231,645,377,
	576,446,660,663,376,	Aomni	650,
	664,360,513,	Apex Digital	364,561,565,017,099,
Alaron	007,483,	Archer	302,
Albatron	302,541,	Astar	384,581,
Ambassador	274,	Audiovox	035,040,302,655,533,
America Action	035,		543,557,589,697,698,
Ampro	523,	Aurora Systems	532,
Anam	035,	Aventura	063,
Anam National	468,	Belcor	001,
AOC	231,645,377,	Bel & Howell	313,462,
Aomni	650,	BenQ	376,596,
Apex Digital	364,561,565,017,099,	Bradford	035,
Archer	302,	Brillan	566,582,583,

Brockwood	001,	CXC	035,
Broksonic	260,361,	CyberHome	527,
Bush	276,	Cytron	363,705,
Bydtsign	596,	Daewoo	040,001,055,470,474,
Cadla	588,		065,509,655,
Candle	231,079,001,106,	Daytron	001,
Canon	132,617,	Dei	585,109,001,621,
Carnivale	231,	Delta	614,
Carver	109,292,	Denon	069,502,
Casio	506,575,	Denstar	035,
OCE	483,354,	Diamond Vision	682,703,
Celebrity	061,	Digistar	451,
Celera	099,	Digital Lifestyles	673,684,
Changhong	099,	Digital Projection Inc.	629,658,167,
Cinego	702,	Dream Vision	595,
Citizen	076,231,040,079,001,	Dumont	463,
	106,235,503,656,657,	Durabrand	361,035,001,053,
	658,655,	Dwin	475,020,192,
Clarion	035,	Dynastech	049,
Classic	701,	Dynex	361,457,
Coby	707,384,	Eki	132,
Commercial Solutions	233,	Electroband	061,
Compaq	522,	Electrograph	363,690,
Concerto	001,	Electrohome	361,446,641,360,658,
Contec	035,		060,061,
Craig	035,	Element	381,
Crosley	109,	Emerson	313,688,280,361,035,
Crown	035,		689,367,690,053,489,
Curtis Mathes	109,313,655,475,076,		235,267,483,281,007,
	513,231,089,166,462,		274,465,001,655,454,
	001,319,192,233,608,	Emprex	626,638,673,

Envision	231,534,377,	Hello Kitty	655,
Epson	572,592,	Hewlett Packard	631,633,570,377,571,
Erce	578,	Hisense	364,442,
ESA	513,053,454,	Hitachi	712,711,689,607,528,
Fisher	313,158,		517,516,413,175,250,
Fujitsu	007,106,510,547,382,		481,479,097,253,001,
Funai	035,053,007,689,454,		465,464,462,089,
	586,	Hyundai	545,375,593,
Futuretech	035,	Hinc	670,
Gateway	363,001,376,	iLo	370,398,053,661,
GE	655,001,082,333,029,	Infinity	109,
	468,135,175,489,192,	InFocus	519,520,521,526,
	691,116,233,608,	Initial	392,398,
Gibraltar	463,231,001,	Insignia	053,457,361,374,383,
Go Video	563,581,446,		634,454,446,
GoldStar	231,011,001,464,	Inteq	463,
Goodmans	494,	IX	559,
Gradiente	496,	Janel	079,
Grundig	510,	JBL	109,
Grumpy	035,007,	JCB	061,
H & B	613,	Jensen	362,004,581,579,
Haler	569,001,364,567,	JVC	467,008,056,480,518,
Hallmark	001,		610,580,
Hanns.G	677,	Kamp	483,
Hannspree	609,669,677,	Kawasho	483,490,
Harley Davidson	466,007,689,	Kaypani	052,
Haman/Kardon	109,471,	KDS	381,
Harvard	035,305,	KEC	035,
Havermy	475,	Kenwood	231,001,
Helios	551,	KLH	099,



Kloss	024,079,471,	MGA	579,231,001,
Knoll Systems	526,	Micro	581,
Konka	035,355,508,236,446,	Midland	233,463,116,464,135,
	695,		192,
Kost	584,581,	Mintek	392,398,
Kreiser	558,581,	Minut	082,
KTV	035,231,483,	Mitsubishi	475,579,461,067,155,
LG	302,499,549,636,581,		491,493,506,539,552,
	694,001,		001,616,
Lloyd's	689,	Monivision	302,541,
Loewe	477,	Motrola	475,468,381,
Logik	462,	Moxell	381,
Luce	540,568,	MTC	076,231,049,001,474,
Luxman	001,		483,
LXI	233,109,313,099,	Multitech	035,049,483,
Magnavox	628,511,231,514,392,	NAD	099,001,066,109,
	454,689,635,377,574,	Nakamichi	630,
	581,495,533,109,187,	Naxa	704,
	106,007,096,008,105,	NEC	231,008,001,292,144,
	024,		500,167,562,618,665,
Magnin	691,		680,708,
Majestic	015,462,	NerTV	363,
Marantz	109,231,292,548,581,	Nikko	001,231,040,
	618,640,	Niko	644,
Matsushita	128,	Noblex	498,
Maxent	363,014,671,	Norcent	364,536,377,
MB Quar	001,	Norwood Micro	594,370,
Megapower	302,	Noshi	018,
Megatron	001,089,302,	NTC	040,
Memorex	313,361,579,001,462,	NuVision	654,
	007,559,641,367,087,	Olevia	648,573,001,

Olympus	605,	Protron	379,601,
Onwa	035,	Proview	381,
Optimus	313,166,128,689,	Pulsar	463,001,
Optoma	554,609,659,	Puneet	638,
Optonica	475,049,	Pvision	578,
Orion	280,361,007,690,367,	Quasar	468,049,128,219,116,
Parasonic	468,128,162,486,375, 597,624,116,	RadioShack	233,313,035,001,231, 049,
Perney	233,099,076,001,231, 116,691,192,309,478, 135,110,464,333,082,	RCA	116,691,192,468,140, 135,473,679,233,608, 639,035,446,465,029, 001,018,
Potters	381,	Realistic	313,035,231,049,464, 001,
Philco	109,231,001,021,105, 096,302,	RevolutionHD	650,
Philips	628,103,511,581,	Rhapsody	483,
Pilot	231,001,	Runco	463,231,167,109,
Pioneer	166,679,066,465,268, 618,	Sampo	231,464,052,100,110, 363,
Planar	632,	Samsung	231,699,642,076,535, 524,504,270,497,408, 354,483,464,001,513,
Polaroid	709,099,700,676,675, 674,672,451,637,381, 446,109,602,376,383, 599,581,	Sansui	361,623,689,367,360,
Portland	040,001,	Sanyo	313,472,146,159,103, 484,132,529,530,691,
Prima	362,581,579,589,457, 109,	Scopre	560,017,611,646,
Princeton	302,515,	Scimitsu	001,
Prism	116,	Scotch	001,
Proscan	001,608,319,192,233,	Scott	280,035,001,007,309, 666,
Proton	001,302,320,052,319,		

Sears	233,109,313,099,053, 015,001,146,478,159, 168,007,192,566,689,	SunElite	625,627,
Seleco	089,585,	Superscan	475,550,
Sharp	475,049,049,495,647, 398,501,548,	Supra-Macy	079,
Sharper Image	696,	Supreme	061,
Sheng Chia	475,	SVA	504,364,561,553,554, 555,
Sherwood	619,	Sylvania	688,109,231,566,021, 105,469,096,581,053, 454,
Shogun	001,	Symphonic	035,053,689,
Signature	462,	Syntax	573,001,648,
Signet	531,542,584,	Tandy	475,485,
SIM2 Multimedia	595,	Tashiko	589,
Simpson	106,187,	Tatung	302,049,468,571,370, 590,591,612,076,376,
Skyworth	681,	Technics	128,116,
Solarism	577,		
Sole	534,568,613,615,636, 650,581,	Technol Ace	007,
Sony	061,200,273,492,538, 600,620,662,678,679, 689,693,	Techview	544,706,
Soundesign	035,001,007,106,	Techwood	116,302,001,
Sova	379,698,	Teknika	109,035,579,076,040, 462,001,482,007,106, 312,
Soyo	638,670,319,685,686, 687,446,	Telefunken	513,001,476,
Spectricon	302,137,	Telemagic	132,
Spectronic	381,	Tera	320,
Squareview	063,	Thomas	689,
SSS	035,001,	Thomson	476,494,507,
Starfile	035,	TMK	001,274,
Studio Experience	541,	TNCi	463,

Toshiba	313,001,078,008,128, 478,519,537,606,614, 665,360,099,	Xococo	589,
		Yamaha	231,001,528,622,
		Zenith	463,361,001,040,462,
TruTech	667,710,		689,655,
TVS	361,	Zonda	302,
Ultra	000,601,		
Universal	333,		
US Logic	370,		
Vador Research	231,		
Venturer	001,		
VEOS	586,		
Victor	467,		
Video Concepts	067,		
Vidkron	106,487,618,652,		
Vidtech	001,008,		
Viewsonic	363,109,517,525,528, 365,550,380,603,605, 643,651,		
Viking	079,312,		
Vione	576,661,011,		
Visart	604,		
Vizio	001,550,380,376,		
Wards	109,231,462,021,082, 333,105,029,001,096,		
Waycon	099,		
Westinghouse	655,380,373,565,587, 061,		
White Westinghouse	361,655,		
WinBook	370,076,		
Wyse	377,		

## SPECIFICATION

Product Specifications	Description
Product Name	COX Big EZ Contour Remote Setup Guide and Codes
Functionality	Programming and setup guide for COX Big EZ Contour Remote
Compatibility	Pre-programmed to operate Contour cable boxes, can be programmed for Motorola or Cisco mode for non-Contour cable boxes
Troubleshooting	Provides troubleshooting tips for remote issues
TV Code List	Includes a comprehensive list of codes for various TV manufacturers
Code Search	Provides a step-by-step guide on how to search through all available codes if TV manufacturer's code is not found

## FAQS

### What should I do if my COX Big EZ Contour Remote isn't working to control my cable box?

If your remote isn't working to control your cable box, make sure you have followed the "Setting up your Big EZ Remote" steps to program the remote for control of your cable box. If you have followed these steps and the remote still isn't working, refer to the troubleshooting tips provided in the manual.

### What should I do if I can't find my TV manufacturer's code in the list provided?

If you can't program the remote for TV control using the codes provided for your manufacturer, follow the steps provided in the manual to search through all available codes. Turn on your TV and press and hold the Setup button on the remote until the status LED changes from red to green. Press the CH+ button repeatedly to search through the manufacturer codes until the TV turns off. Once the TV turns off, press the Setup button. The status LED on the remote should flash green twice. Press the TV Power button on the remote. If the device turns on, you have successfully programmed the remote for TV control.

### How do I program the COX Big EZ Contour Remote for TV control?

To program the remote for TV Power, Volume and Mute, follow the steps provided in the manual. Install the batteries and make sure your TV and cable box are powered on. Refer to the TV Code list included with the remote to locate your TV manufacturer. Press and hold the Setup button on the remote until the status LED changes from red to green. Enter the first code listed for your TV manufacturer. The status LED should flash green twice when the code is entered. Press the TV Power button on the remote. If the TV turns off, you have successfully programmed your remote.

### Is the COX Big EZ Contour Remote pre-programmed to operate all cable boxes?

No, the remote is pre-programmed to operate Contour cable boxes. If you are using it to control a non-Contour cable box, you may need to program it for Motorola or Cisco mode using the steps provided in the manual.

### **Read More About This Manual & Download PDF:**

COX Big EZ Contour Remote Setup Guide and Codes – [Optimized PDF](#)

COX Big EZ Contour Remote Setup Guide and Codes – [Original PDF](#)

**Questions about your Manual? Post in the comments!**