



CP PLUS F42A ezykam Plus WiFi Camera User Guide

[Home](#) » [CP PLUS](#) » CP PLUS F42A ezykam Plus WiFi Camera User Guide 

Contents

- [1 CP PLUS F42A ezykam Plus WiFi Camera](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 What's in the Box](#)
- [5 Get Ready](#)
- [6 Installation Instruction](#)
- [7 Frequently Asked Questions](#)
- [8 Technical Specifications](#)
- [9 Documents / Resources](#)



CP PLUS F42A ezykam Plus WiFi Camera



Product Information

The Ezykam Wi-Fi Camera is a smart camera that allows you to control it using your voice through Alexa or Google Assistant. It can be shared with family and friends for access to view the camera. The range of your home Wi-Fi is dependent on your home router and the room conditions.

Technical Specifications

- Alexa capability only includes streaming video and not controlling the light
- System Requirements: iOS 9.0 or higher or Android 5.0 or higher

Frequently Asked Questions

1. Can I share camera with family and friends?

Yes, you can share your cameras with family and friends who will have access to view the camera.

2. What's the Wireless Range?

The range of your home Wi-Fi is heavily dependent on your home router and the conditions of the room. Check with your router specifications for exact range data.

3. The camera appears offline or unreachable?

Make sure you entered the correct Wi-Fi password during the Wi-Fi setup. Check whether there is any Internet connection problem. If the Wi-Fi signal is too weak, reset your Wi-Fi router and try again.

4. Cannot connect to your Wi-Fi network.

Make sure you entered the correct Wi-Fi password during the Wi-Fi setup. Check whether there are any Internet connection problems. If the Wi-Fi signal is too weak, reset your Wi-Fi router and try again.

5. How many cameras can I control?

You can control cameras in an unlimited amount of locations. Your router may have a limit of how many cameras can be connected to one router.

Product Usage Instructions


Follow these instructions to use your Ezykam Wi-Fi Camera:

1. Download the ezykam+ app from App Store or on Google Play.
2. Register an account on your ezykam+ app.
3. Plug in the power adapter.
4. Add Camera by clicking “Add Camera” on the app and following the prompts. When the indicator light on the device turns to steady blue light, the network configuration is complete.
5. You can now control your camera using the app or your voice with Alexa or Google Assistant-enabled devices.


If you encounter any issues, refer to the Frequently Asked Questions section or contact us at ezycare@cpplusworld.com for further assistance.

Thank you for choosing CP PLUS ezykam. Get started using your new devices by downloading ezykam+ app, one convenient app that manages everything straight from your smart phone. Easily connect to your home Wi-Fi and control multiple devices from the touch of your fingertips

What’s in the Box

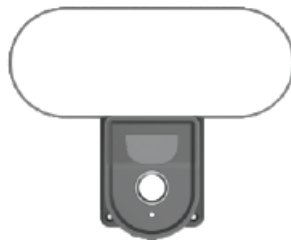

ezykam Wi-Fi Camera

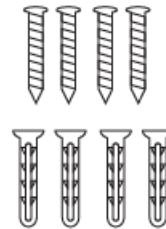

Screw



Power Adapter

 
 


Quick Operation
Guide

Get Ready


- Know your Wi-Fi network and password.
- Make sure your mobile device is running iOS® 9.0 or higher or Android™ 5.0 or higher.
- Make sure you’re connecting to a 2.4GHz Wi-Fi network (It can’t connect to 5GHz networks)

Download the ezykam+ app from App Store or on Google Play.

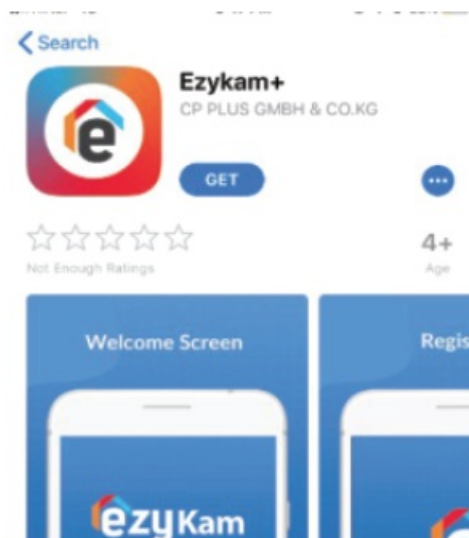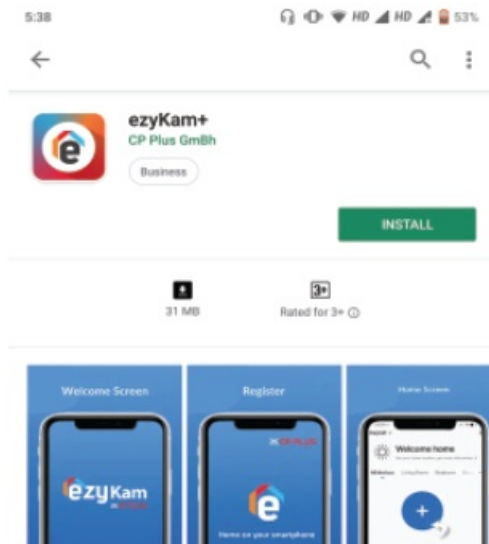

Google, Google Play and Google Home are trademarks of Google LLC.
Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates.

Register an account on your ezykam+ app.

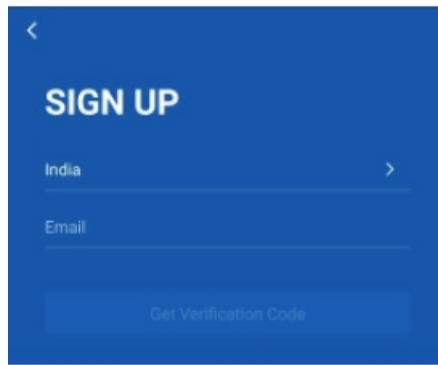A blue screen with a back arrow in the top left corner. The title "SIGN UP" is centered at the top. Below it, there is a dropdown menu showing "India" with a right arrow. Underneath is an "Email" input field. At the bottom is a button labeled "Get Verification Code".


<

SIGN UP

India >

Email

Get Verification Code

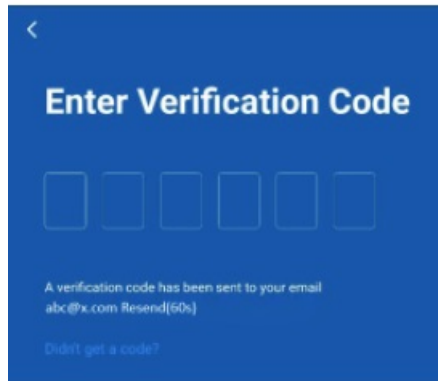A blue screen with a back arrow in the top left corner. The title "Enter Verification Code" is centered at the top. Below it are six empty square boxes for entering a code. At the bottom, there is a message: "A verification code has been sent to your email abc@x.com Resend(sds)" and a link "Didn't get a code?".

<

Enter Verification Code

□ □ □ □ □ □

A verification code has been sent to your email
abc@x.com Resend(sds)

[Didn't get a code?](#)

1. **STEP 1.**

1. Select the country.
2. Enter the email address. Enter Verification Code


2. **STEP 2.**

1. Enter the verification code and create a password

Plug in


How do I reset my camera?

- Use the reset pin to press the Reset Button for several seconds until the camera starts to beep.
- Optional: Insert Micro SD card

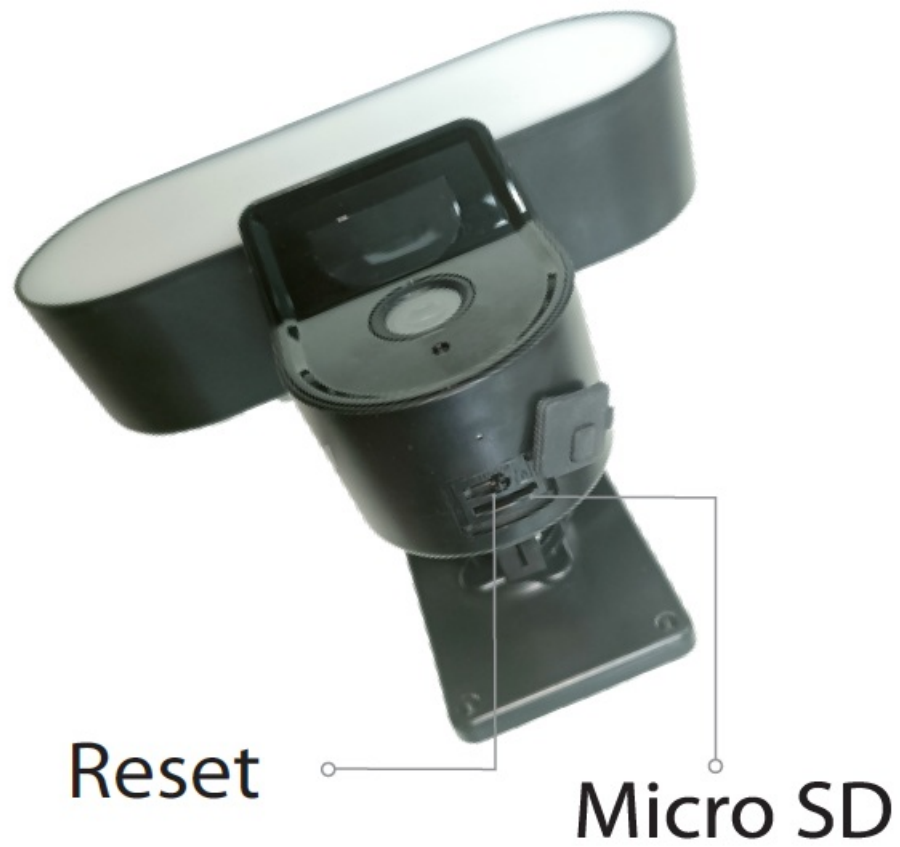


Add Camera

 - Open the ezykam+ app, click “+” on the top right corner of the “HOME” page, then select “Specific model to add”
- Make sure that the Red LED indicator is blinking and the voice prompt is audible.

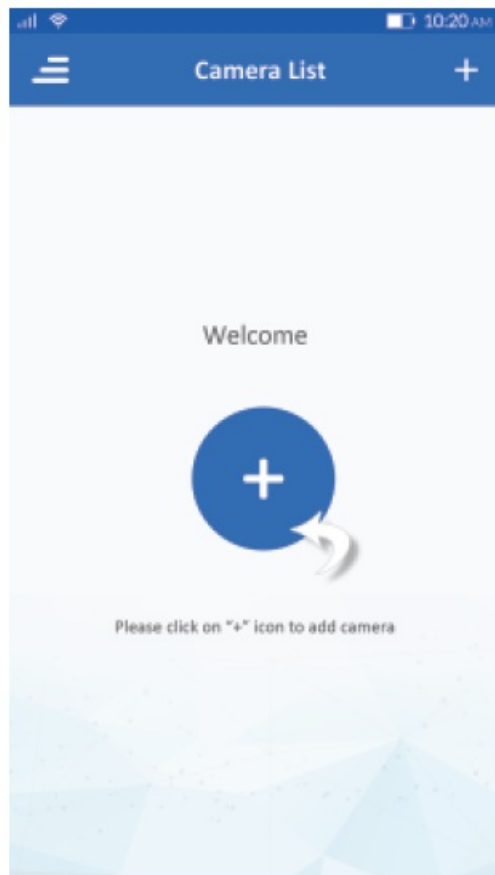

 - Enter your “Wi-Fi network and password”, and click “CONFIRM”.

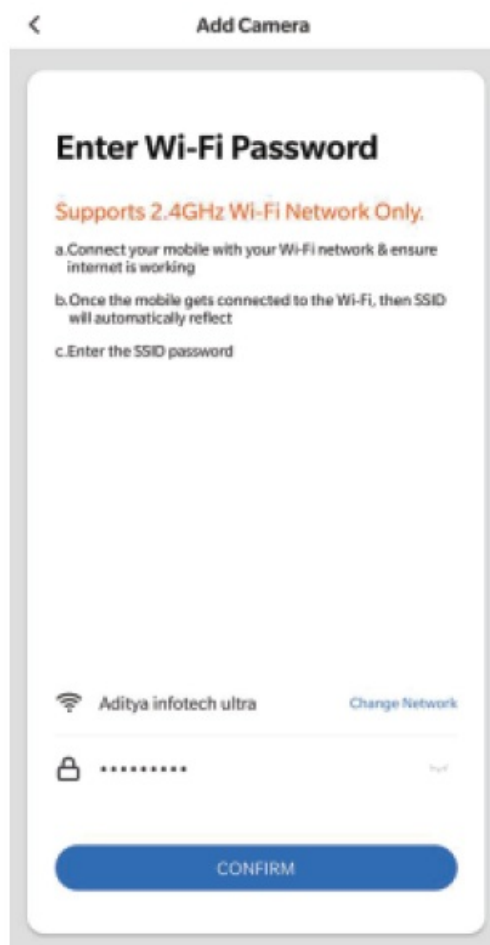


- Read the instruction about “Scan the camera QR code” and click “Continue”.



- Scan the QR Code on your phone with a camera. Heard a voice prompt, click “Heard the beep”




 - When the indicator light on the device turns to steady blue light, the network configuration is complete.

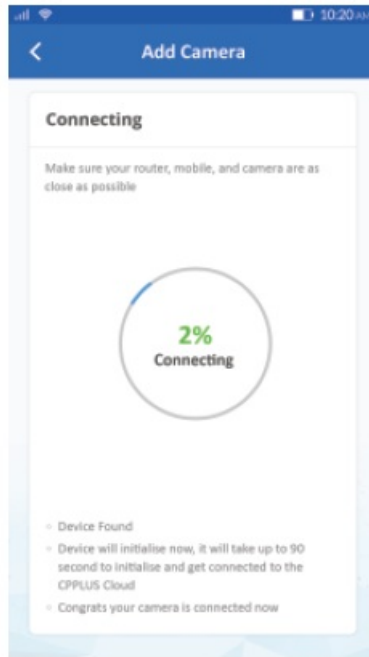

- Please refer to the specific APP interface if there are any differences.

Installation Instruction

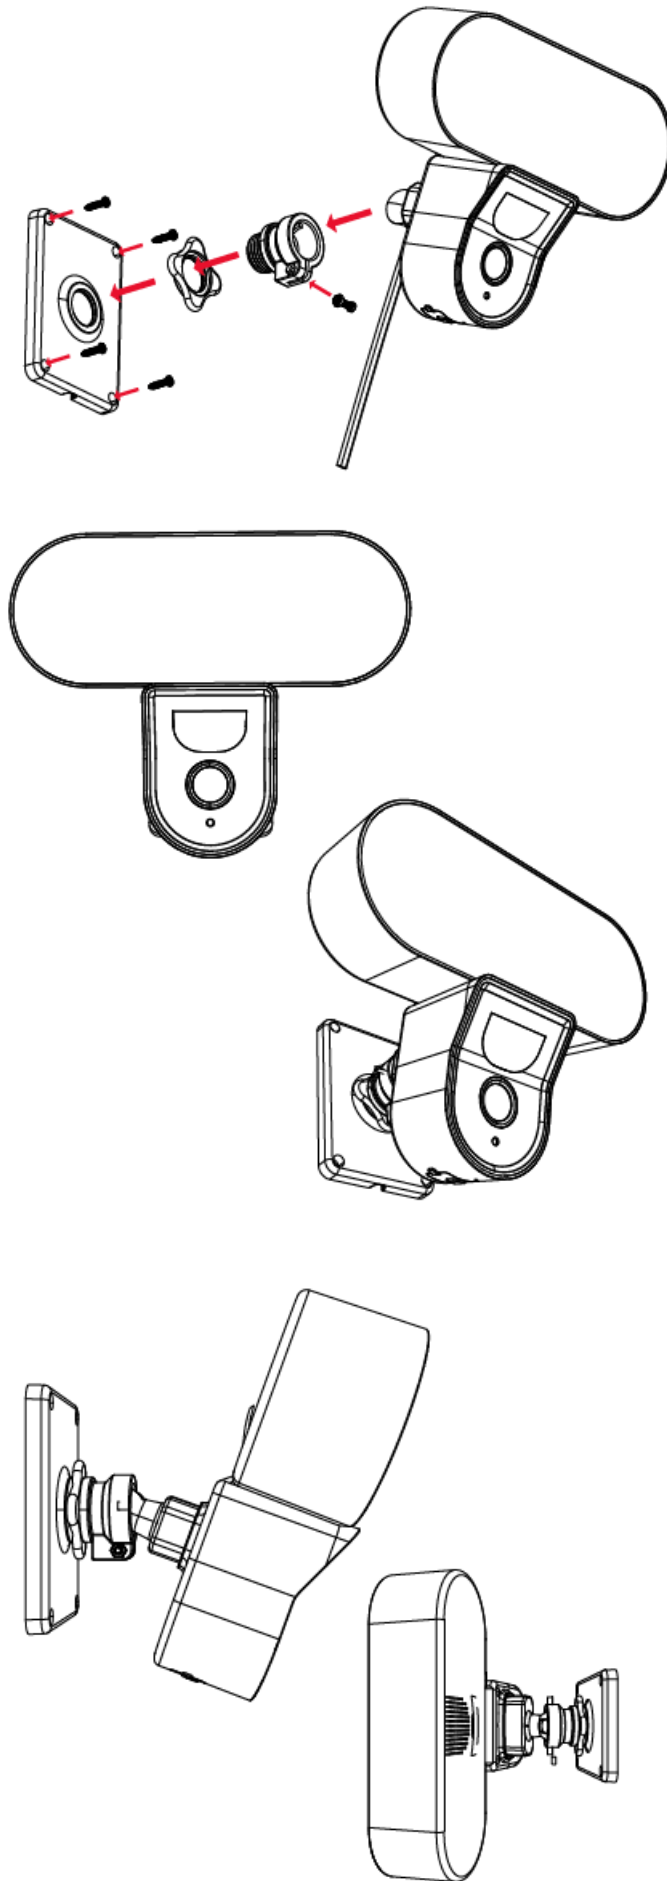

Voice control works with Alexa or Google Assistant

You can control your camera using just your voice with Alexa or Google Assistant-enabled devices.



Alexa's capability only includes streaming video and not controlling the light.

Frequently Asked Questions

1. Can I share the camera with family and friends?

Yes, you can share your cameras with family and friends who will have access to view the camera.

2. What's the Wireless Range?

The range of your home Wi-Fi is heavily dependent on your home router and the conditions of the room. Check with your router specifications for exact range data.

3. Does the camera appear offline or unreachable?

Make sure you entered the correct Wi-Fi password during the Wi-Fi setup. Check whether there is any Internet connection problem. If the Wi-Fi signal is too weak, reset your Wi-Fi router and try again.

4. Cannot connect to your Wi-Fi network.

Make sure you entered the correct Wi-Fi password during the Wi-Fi setup. Check whether there are any Internet connection problems. If the Wi-Fi signal is too weak, reset your Wi-Fi router and try again.

5. How many cameras can I control?

CP Plus app control an unlimited number of cameras in an unlimited amount of locations. Your router may have a limit of how many cameras can be connected to one router.

System Requirements

- Smartphone running iOS® 9.0 or higher or Android™ 5.0 or higher
- Existing Wi-Fi Network with Internet connection

Technical Specifications

- Camera: up 4MP (2560×1440) at 20frames / sec.H.265 encoding
- Field of view: 3.6MM 85.9°(H) , 45.5°(V), 107 °(D)
- Audio: Internal Speaker and Microphone
- Storage: supports up to 128GB Micro SD card (not Included)
- Wi-Fi: IEEE 802.11b/g/n, 2.4GHz (not compatible with 5GHz Wi-Fi networks)

For further assistance, you can reach us via ezycare@cpplusworld.com

Please read the instruction carefully before using the product

Documents / Resources



[CP PLUS F42A ezykam Plus WiFi Camera](#) [pdf] User Guide

F42A, F42A ezykam Plus WiFi Camera, ezykam Plus, WiFi Camera, ezykam Plus WiFi Camera , Camera