



Crane 2022 Instant Canopy User Manual

[Home](#) » [Crane](#) » Crane 2022 Instant Canopy User Manual 

Crane 2022 Instant Canopy



Contents

[1 Getting Started](#)

[1.1 Caution](#)

[1.2 Cleaning & Maintenance](#)

[2 Pack contents / parts](#)

[3 Assembly Instructions](#)

[4 Disassembly Instructions](#)

[5 Instant Canopy Frame](#)

[6 WARRANTY CARD](#)

[6.1 ALDI INC. FULL WARRANTY CONDITIONS](#)

[7 Documents / Resources](#)

[8 Related Posts](#)

Getting Started

Ensure all parts packaged in carton match the parts list. Remove all protective materials and place parts on a non-abrasive surface to avoid scratching. If any parts are missing or damaged, DO NOT attempt to assemble. Please contact our customer service center (Monday-Friday 9:00am – 5:00pm EST) at 1-800-599-8898.

Caution

Read all the instructions before set-up. Failure to comply with instructions may result in faulty assembly and

potential injury.


WARNING: Pinching hazard. Keep fingers away from the scissoring area and telescoping legs when assembling and disassembling the product.

Cleaning & Maintenance

Wash canopy with a mild solution of soap and water; rinse thoroughly. Dry completely.


Pack contents / parts

- A Gazebo Frame
- B Canopy
- C Stakes
- D Rope
- E Carrying Bag

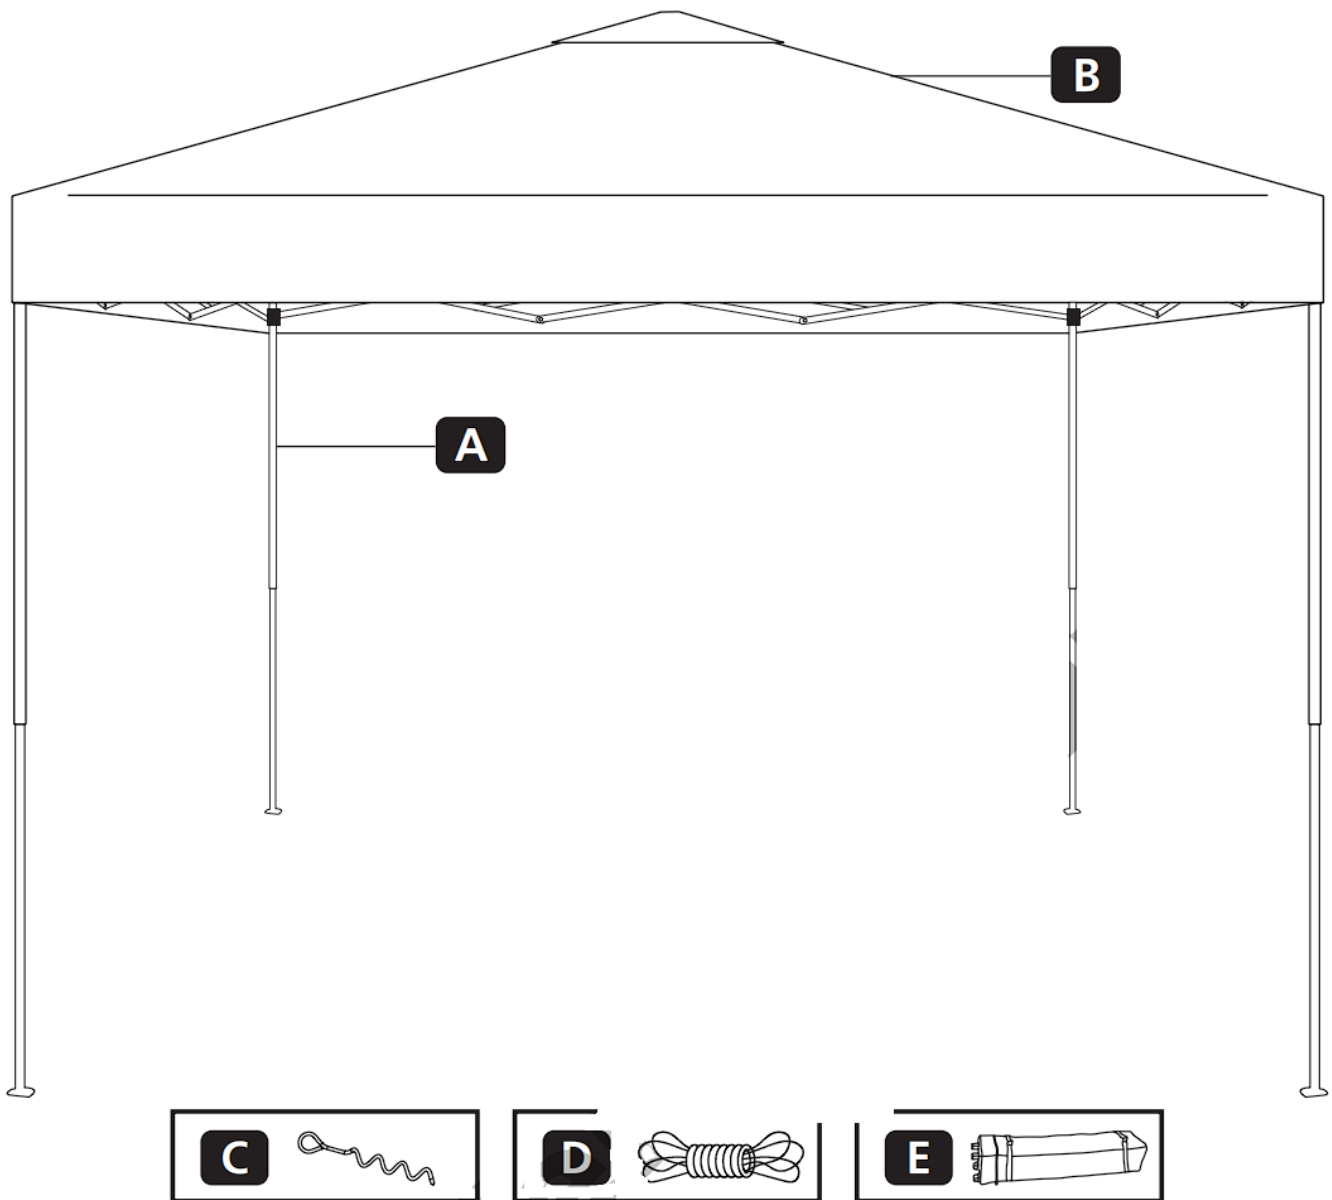

	Description	Qty
A	Gazebo Frame	1
B	Canopy	1
C	Stakes	12
D	Rope	4
E	Carrying Bag	1

Assembly Instructions

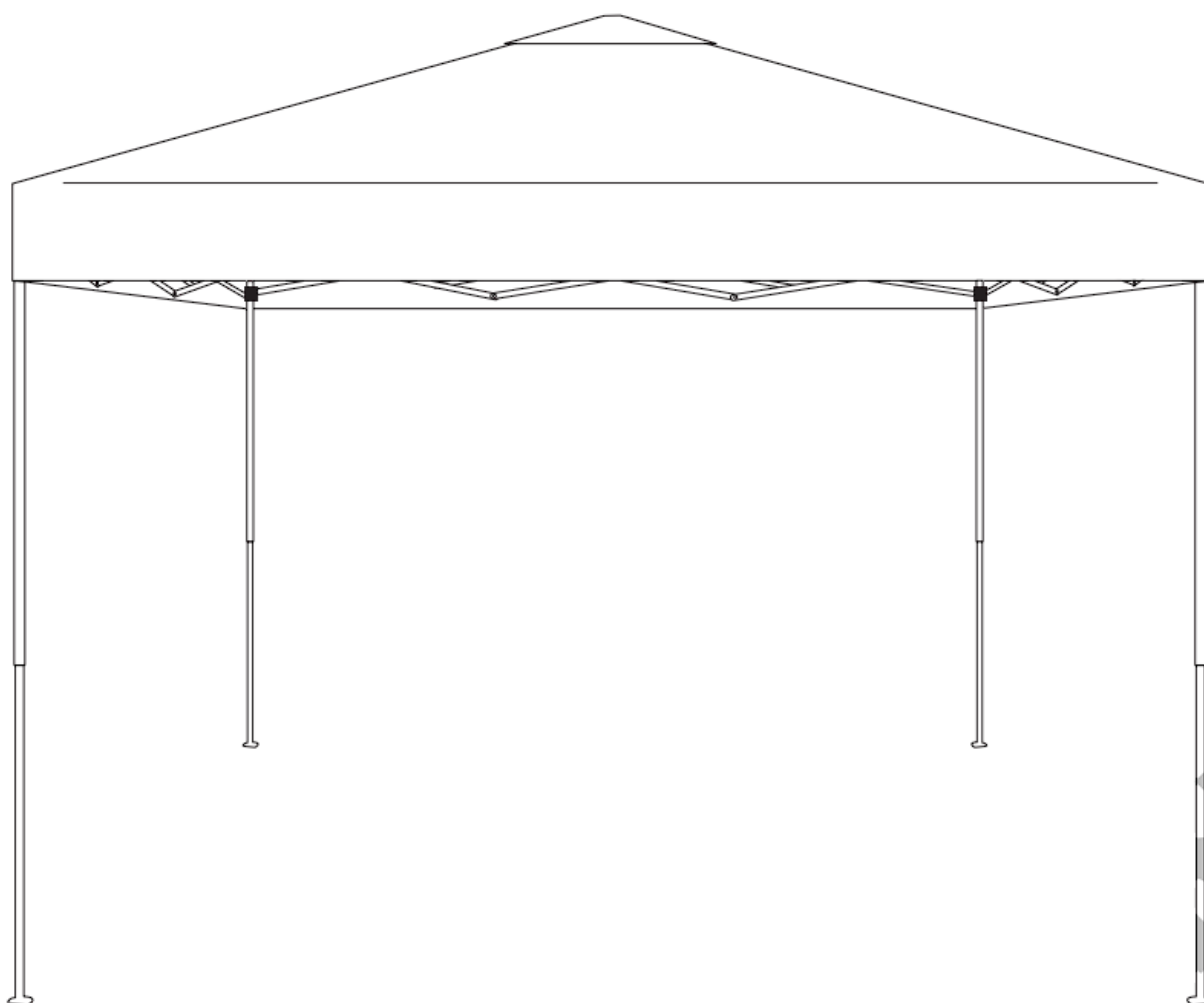

Please read, and follow the instructions within this manual before using this gazebo for the first time. Please review the diagram on page 12 to familiarize yourself with descriptions of the individual parts that make up the gazebo frame. Be careful not to pinch fingers or hands in moving parts when opening or closing this gazebo. **Do not use excessive force during any part of set up.**

Do not use this gazebo in strong wind and rain. Wind and rain can damage the canopy, metal parts of the frame, and could result in injury to you and others.


The gazebo is designed to provide shade from the sun only. The canopy is not waterproof, and not intended to be used when raining. Water will sit easily on the canopy fabric, and the weight of the water will

severely damage metal parts of the frame.

When raining or windy, or expecting rain, wind, snow, or other stormy conditions, close the gazebo as instructed within this manual, and stow it away out of the elements. This gazebo is not a permanent structure, and is intended to be taken down when not in use. This gazebo is not intended to be anchored to a patio deck or concrete surface. Please take a moment to review the Limited Warranty policy found on page 13.


Before starting, find a level work space with sufficient room to open this 10 foot by 10 foot gazebo.

NOTICE: Please read all instructions to avoid damaging parts to the gazebo frame. Do not use excessive force when opening the gazebo.

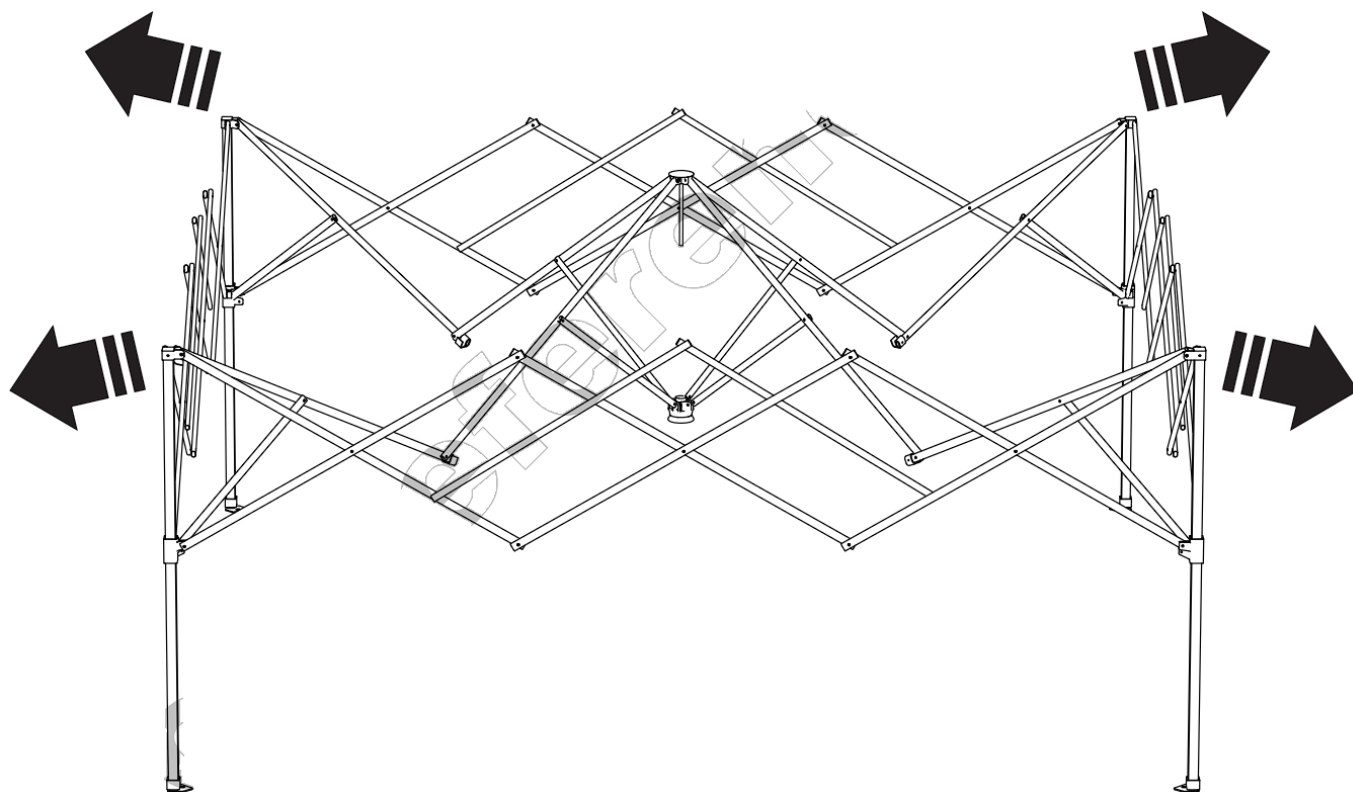



STEP 1:

Gradually pull each leg/corner of the Gazebo Frame (A) outward to extend it fully on all sides. This gazebo can be opened by one person.

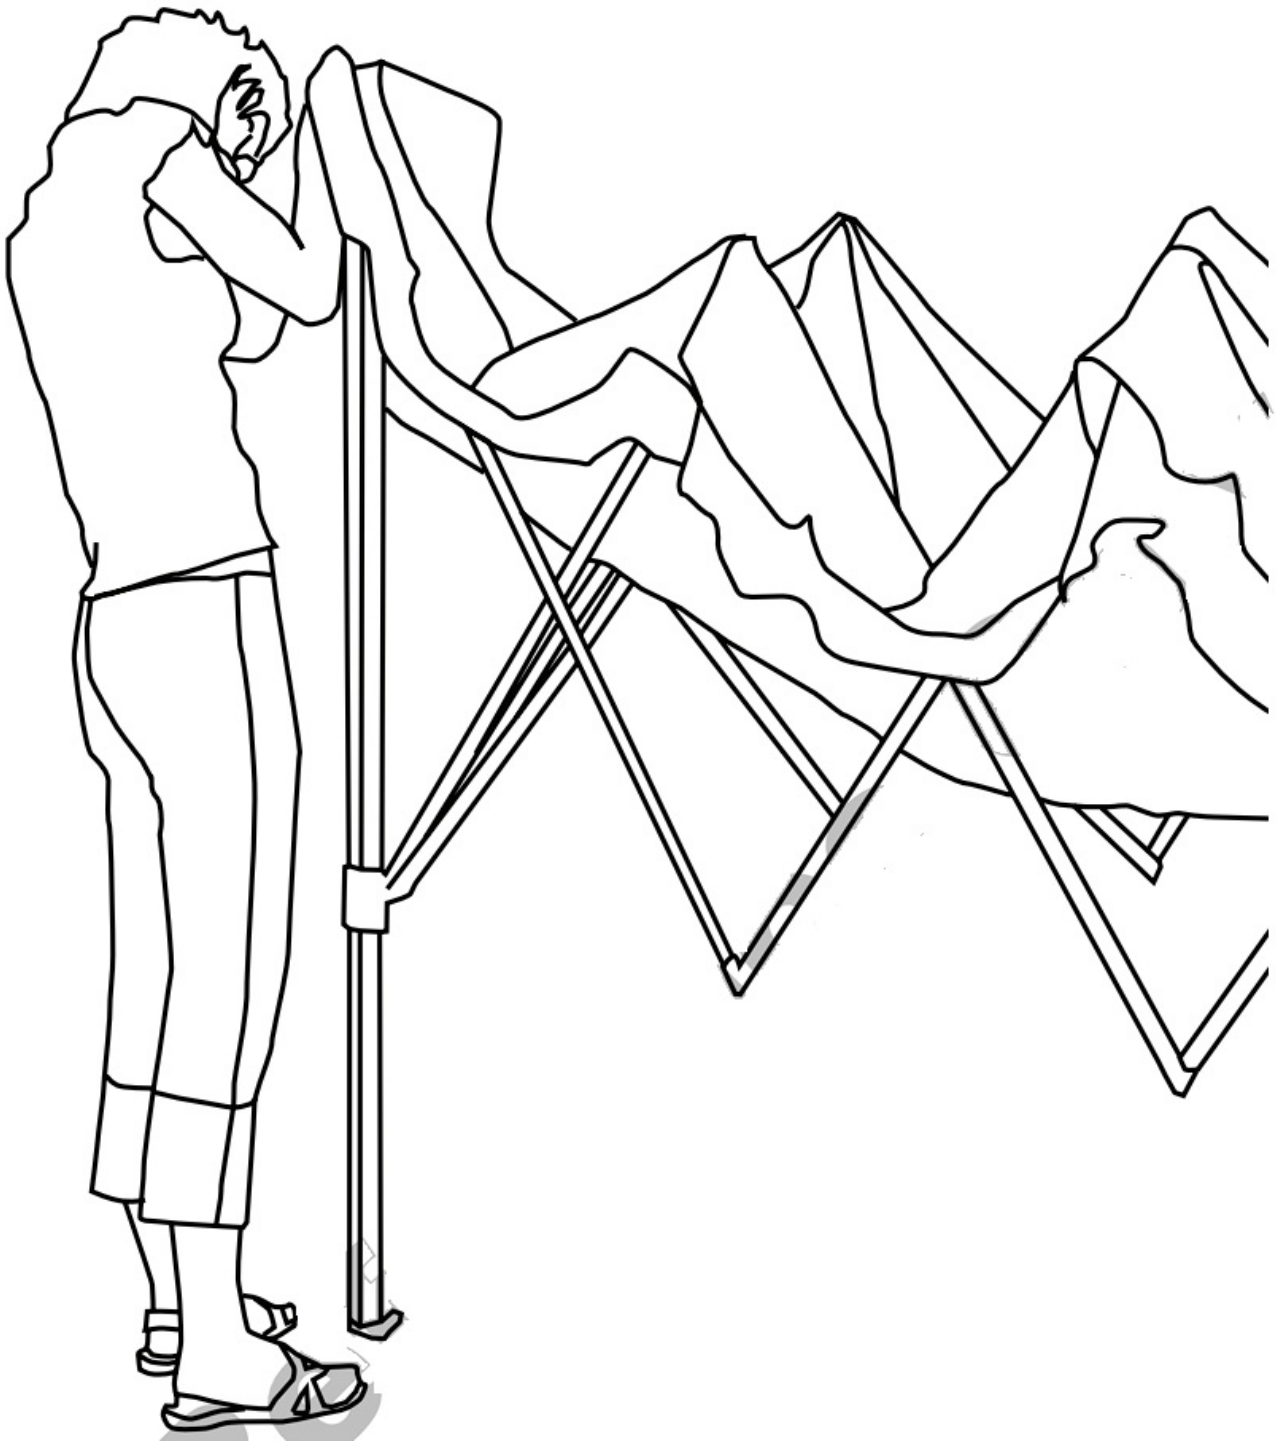

STEP 2:

Place the Canopy (B) over crossbeams and ribs of Gazebo Frame (A). Connect all fasteners at the tops of each telescopic leg to the fasteners found on the inside-corners of the Canopy (B), and that the fastening straps are secured around the crossbeams.

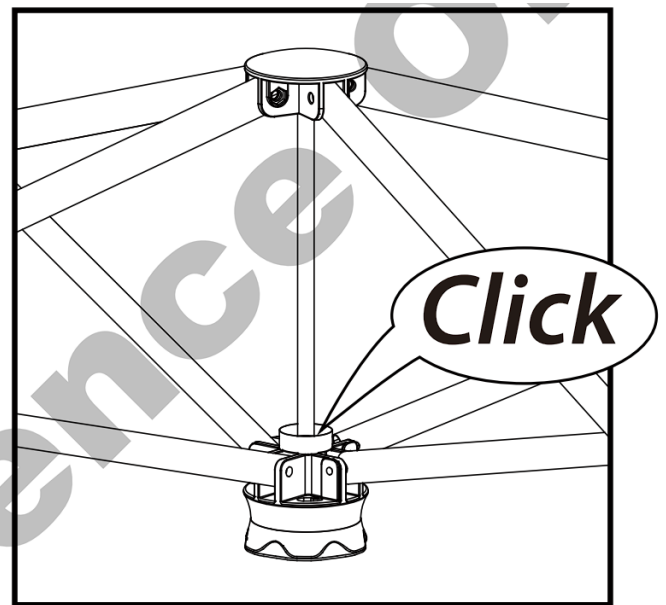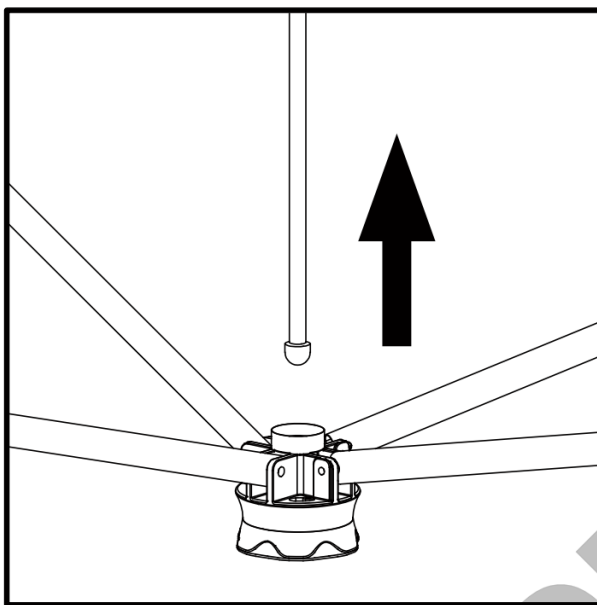


STEP 3:

One-by-one, lift the Gazebo Frame (A) off the ground by each collapsed telescopic leg, and pull the lower half of each leg out of the upper half. Extend each leg to the lowest height setting for now.

STEP 4:

Lift the Gazebo Frame (A) off the ground some, so that you can get underneath. Push up on locking-mechanism until it is locked to the rod of the center connector. Listen for the 'Click' to know that it is secured. With the locking-mechanism secured to the connector with rod, the crossbeams will be fully extended, the ribs underneath the canopy straightened out, along with the canopy itself.

Select from the additional eyelets found on each telescopic leg to extend the lower halves out further. There are two additional eyelets to choose from, which raises the overall height of the gazebo.

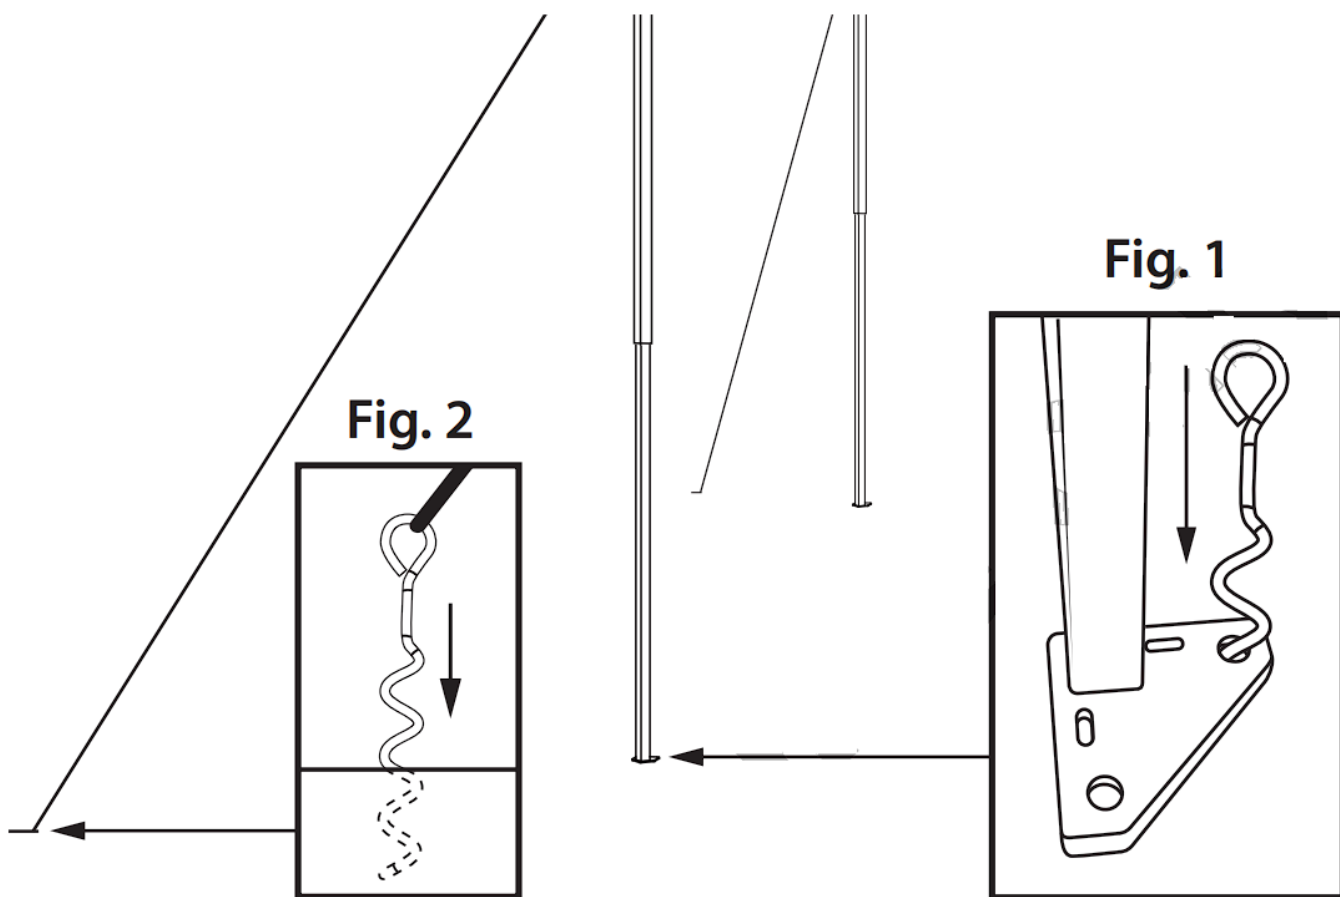

STEP 5:

Insert Stakes (C) through designated eyelets on foot paddles of telescopic legs, see Fig. 1. Screw Stakes (C) clockwise while inserting them into the ground for extra stability.

STEP 6:

Tie one end of each Rope (D) to loops found at the corners of the Canopy (B). Tie the opposite ends of Rope (D) to the remaining Stakes (C). Pull these Stakes (C) with Ropes (D) so that the rope is taut, and screw these stakes in the ground, see Fig. 2.

Disassembly Instructions

Please review the diagram on page 12 to familiarize yourself with part descriptions of the individual parts that make up the gazebo frame.

NOTICE: Please read instructions below to avoid damaging parts to the gazebo frame. Do not use excessive force when closing the gazebo.

1. Remove Ropes (D) and Stakes (C) that tie down each corner of the gazebo.
2. Remove Stakes (C) securing each telescopic leg to the ground.
3. Collapse each telescopic leg by depressing the push-pins, and pushing the bottom halves into the upper halves. Be careful not to pinch fingers or hands in moving parts.
4. Pull red latch on locking-mechanism to unlock it from rod of connector in the center of Gazebo Frame (A).
5. Depress push-pins within the sliding leg hinges at the top of telescopic legs, and push the hinges down to the bottom of collapsed telescopic legs.
6. Carefully close the Gazebo Frame (A) without applying force. If you meet resistance while closing the frame, open the frame some, and trying to close it again.


7. Carefully place the closed Gazebo Frame (A) in its Carrying Bag (E).

WARNING

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS CANOPY FABRIC. This canopy is made with fabric that meets CPAI-84 specifications for flame resistance. It is not fire proof. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the canopy fabric may render the flame-resistant properties ineffective

Instant Canopy Frame

Please review the diagram below to familiarize yourself with part descriptions. When needing assistance from our customer support team, please use these descriptions to help identify what concerns you are having with any part to this Instant Canopy.

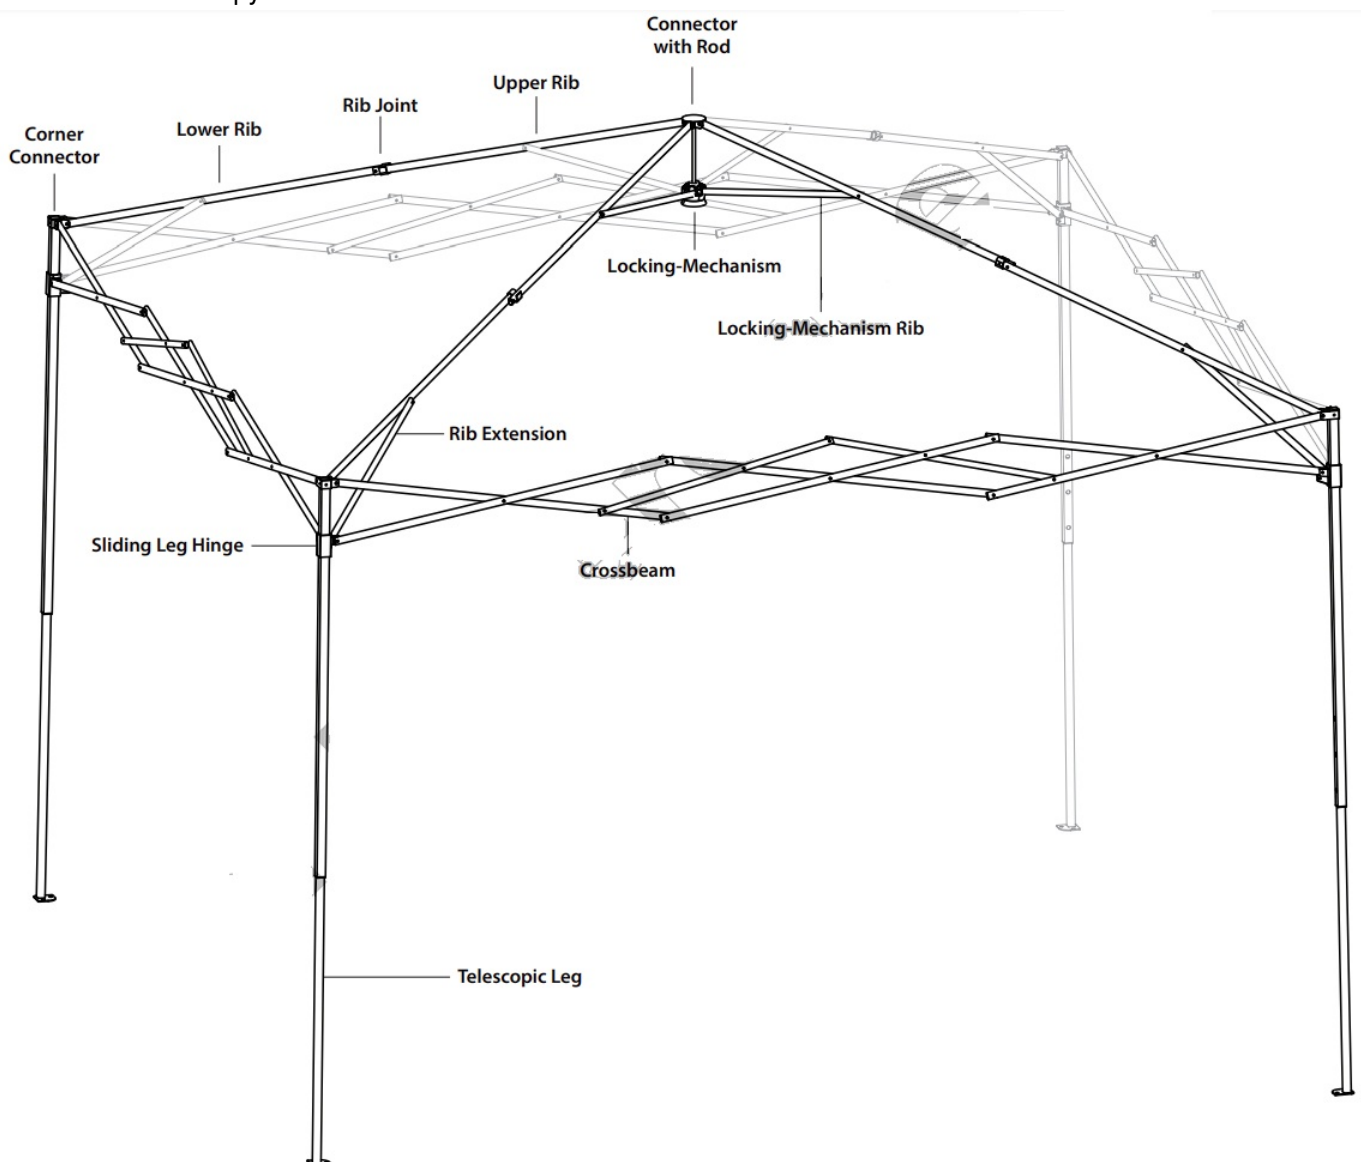

WARRANTY CARD

Please contact our AFTER SALES SUPPORT by phone or e-mail when needing assistance with your purchase. Please retain your sales receipt which validates the 1-year Limited Warranty. Only submit the Warranty Card when needing assistance with a faulty part

**AFTER SALES SUPPORT****1800 599 8898****support@tdcusainc.com****PRODUCT CODE****1537****MODEL NUMBER****22635-22****SERVICE CENTER**

TDC USA, Inc.

5 Industrial Road, STE 1

Fairfield, NJ 07004-3017

United States of America

**Phone lines available Monday to Friday
9am - 5pm EST.**

Description of problem:

Your details:

Name: _____

Address: _____

E-Mail: _____ **ALDI INC. FULL WARRANTY CONDITIONS****Dear Customer:**The **ALDI warranty** is a full warranty offering you the following benefits:

Warranty period:	1 year* from date of purchase 6 months for movable parts and consumables under normal and proper conditions of use.
Costs:	Free repair/exchange or refund. No shipping or handling costs
Hotline:	1-800-599-8898
Operating hours:	Monday – Friday, 9:00 AM – 5:00 PM EST

Please contact our service hotline by phone, email, or fax when needing assistance with assembly or with faulty parts. This allows us to provide support in the event of possible operator errors.

In order to make a claim under the warranty, please send us:

A copy of your sales receipt, your completed warranty card with contact information provided, and an explanation as to how we can help and what concerns you have with any parts.

The warranty does not cover damage caused by:

- **Accident or unanticipated events to frame** [metal parts] (e.g. wind, snow, lighting, fire).
- **Deterioration, fading, sagging, or unanticipated events to canopies and netting panels** (e.g. wind, sun, rain, pets/animals).
- **Improper use or transport.**
- **Failure to follow safety and maintenance instructions.**
- **Other improper treatment or modification.**

After the expiration of the warranty period, you may have your product repaired at your own expense. You will be notified of the repair costs in advance.

This warranty gives you specific legal rights, which may vary from state to state, that are not intended to exceed statutory minimum requirements beyond what is included above.

This warranty does not limit the statutory obligation of the seller arising from any implied warranties. The period of warranty can only be extended in accordance with applicable law.



Documents / Resources

The image shows the front cover of the user manual for the Crane 2022 Instant Canopy. It features a blue header with the text "User Manual" and "Manual del usuario". Below this is the Crane logo and the product name "INSTANT CANOPY". A photograph of the canopy is visible at the bottom.	<p>Crane 2022 Instant Canopy [pdf] User Manual 2022 Instant Canopy</p>
--	--