

CRATE FLEXWAVE 212 Three Channel Guitar Amplifier with DSP and Channel Tracking



CRATE FLEXWAVE 212 Three Channel Guitar Amplifier with DSP and Channel Tracking Owner's Manual

[Home](#) » [CRATE](#) » CRATE FLEXWAVE 212 Three Channel Guitar Amplifier with DSP and Channel Tracking Owner's Manual 

Contents

- [1 CRATE FLEXWAVE 212 Three Channel Guitar Amplifier with DSP and Channel Tracking](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 IMPORTANT SAFETY INSTRUCTIONS](#)
- [6 Introduction](#)
- [7 Channel Tracking](#)
- [8 The Front Panel](#)
- [9 Suggested Settings](#)
- [10 System Block Diagram](#)
- [11 FCC STATEMENT](#)
- [12 SPECIFICATIONS](#)
- [13 CONTACT](#)
- [14 Documents / Resources](#)
 - [14.1 References](#)



CRATE FLEXWAVE 212 Three Channel Guitar Amplifier with DSP and Channel Tracking

5. **LEVEL:** Use this control to adjust the output level of the High Gain channel.
6. **HIGH GAIN/OVERDRIVE:** Use this switch to select the High Gain or Overdrive channel. When the switch is pushed in, the High Gain channel is selected. Note that this switch is only active when the Overdrive/Clean switch is pushed in.
7. **OVERDRIVE LED:** This LED illuminates when the Overdrive channel is selected.
8. **LOW/MID/HIGH:** Use these controls to adjust the equalization settings for the Clean channel.
9. **VOLUME:** Use this control to adjust the output level of the Clean channel.
10. **EFFECTS:** Use these controls to adjust the parameters of the built-in DSP effects, including Reverb, Modulation, Delay, Slapback Delay, Flanger, Chorus, and Phaser.
11. **MEDIUM:** Use this control to adjust the intensity of the Modulation effect.
12. **CD INPUT:** Use this jack to connect an external audio source, such as a CD player or MP3 player, to play along with your guitar.
13. **POWER:** Use this switch to turn the amplifier on or off.

FAQ

- **Q:** Can I use this amplifier with any guitar?
- **A:** Yes, you can use the FlexWave120/212 Guitar Amplifier with any electric guitar that has a standard 1/4" output jack.
- **Q:** How do I switch between channels?
- **A:** To switch between channels, use the High Gain/Overdrive switch. Pushing the switch in selects the High Gain channel while keeping it out selects the Overdrive channel.
- **Q:** Can I connect external effects pedals to this amplifier?
- **A:** Yes, you can connect external effects pedals to the amplifier using the effects loop jacks located on the rear panel. Consult the user manual for detailed instructions on connecting external effects.

CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE. TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

IMPORTANT SAFETY INSTRUCTIONS

- READ, FOLLOW, HEED, AND KEEP ALL INSTRUCTIONS AND WARNINGS.
- DO NOT OPERATE NEAR ANY HEAT SOURCE AND DO NOT BLOCK ANY VENTILATION OPENINGS ON THIS APPARATUS. FOR PROPER OPERATION, THIS UNIT REQUIRES 3" (75mm) OF WELL VENTILATED SPACE AROUND HEATSINKS AND OTHER AIR FLOW PROVISIONS IN THE CABINET.
- DO NOT USE THIS APPARATUS NEAR SPLASHING, FALLING, SPRAYING, OR STANDING LIQUIDS.
- CLEAN ONLY WITH A LINT-FREE DAMP CLOTH AND DO NOT USE CLEANING AGENTS.
- ONLY CONNECT THE POWER CORD TO A POLARIZED, SAFETY-GROUNDED OUTLET WIRED TO CURRENT ELECTRICAL CODES AND COMPATIBLE WITH VOLTAGE, POWER, AND FREQUENCY REQUIREMENTS STATED ON THE REAR PANEL OF THE APPARATUS.
- PROTECT THE POWER CORD FROM DAMAGE DUE TO BEING WALKED ON, PINCHED, OR STRAINED.

- UNPLUG THE APPARATUS DURING LIGHTNING STORMS OR WHEN UNUSED FOR LONG PERIODS.
- ONLY USE ATTACHMENTS, ACCESSORIES, STANDS, OR BRACKETS SPECIFIED BY THE MANUFACTURER FOR SAFE OPERATION AND TO AVOID INJURY.
- **WARNING:** TO REDUCE THE RISK OF ELECTRIC SHOCK OR FIRE, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.
- SERVICE MUST BE PERFORMED BY QUALIFIED PERSONNEL.
- OUR AMPLIFIERS ARE CAPABLE OF PRODUCING HIGH SOUND PRESSURE LEVELS. CONTINUED EXPOSURE TO HIGH SOUND PRESSURE LEVELS CAN CAUSE PERMANENT HEARING IMPAIRMENT OR LOSS. USER CAUTION IS ADVISED AND EAR PROTECTION IS RECOMMENDED IF THE UNIT IS OPERATED AT HIGH VOLUME.
- **WARNING:** THIS UNIT REQUIRES A SAFETY GROUNDED OUTLET WIRED TO CURRENT ELECTRIC CODES HAVING THE LINE SUPPLY VOLTAGE, POWER, AND FREQUENCY IDENTIFIED ON THE REAR OF THE UNIT. THE OUTLET MUST REMAIN ACCESSIBLE TO DISCONNECT THE UNIT IF A FAULT SHOULD ARISE WHILE IN USE. THIS UNIT SHOULD BE UNPLUGGED WHEN NOT IN USE.

EXPLANATION OF GRAPHICAL SYMBOLS:



Introduction

Congratulations! You are now the proud owner of the Crate FlexWave120/212 three-channel guitar amplifier with advanced digital signal processing (DSP) and Channel Tracking. This rugged amplifier combines outstanding features with serious clean and distorted sounds. Digital Reverb, Delay, and Modulation effects provide you with a wide variety of sounds. Crate's unique Channel Tracking feature automatically stores your DSP settings for each channel to memory. As you switch from one channel to another, the DSP settings for the selected channel are instantly recalled. The supplied three-button footswitch allows you to select channels and change the DSP bank (Bank A/Bank B) by "remote control." A front panel 1/8" stereo CD input jack allows you to play along with your CD player, MP3 player, or iPod. A rear panel insert jack allows you to add even more effects by connecting an external effect processor. Like all Crate products, your FlexWave120/212 amplifier is designed by musicians and built using only the best components. Extensive testing confirms that this amplifier is the absolute best it can be. To get the most out of your new amplifier, we strongly urge you to read this manual before you begin playing. And thank you for choosing Crate.

Here are some of the features packed into your new FlexWave120/212 Combo Amplifier:

- 120 watts rms power output
- 2 x 12" speaker
- Three-Channel Operation
 - High Gain Channel
 - Overdrive Channel
 - Clean Channel
- 3-band EQ on the Overdrive and Clean Channels
- Proprietary "Shape" EQ control on the High Gain Channel
- DSP Effects including Delay, Modulation, and Reverb sections
- CD Input

- Effects Loop
- 3-Function Footswitch included
- External Speaker jack
- Built-in Chromatic Tuner

Channel Tracking

Your Crate FlexWave120/212 gives you the power of Channel Tracking. Once you select a DSP setting for each channel, Channel Tracking stores the settings to memory whenever you change channels. When you go back to that channel, Channel Tracking recalls those DSP settings automatically, without changing the DSP controls!


For example:

- Select the Clean channel. Set the Mod control to “Flanger,” the Delay control to “Medium,” and adjust the Reverb control to your preference.
- Select the Overdrive channel. Set the Mod control to “Chorus,” the Delay control to “Slap,” and readjust the Reverb control to a different setting. (The DSP settings for the Clean channel are now saved to memory.)
- Select the High Gain channel. Set the Mod control to “Phaser,” the Delay control to “Long,” and readjust the Reverb control once again. (The DSP settings for the Overdrive channel are now saved to memory.)
- Reselect the Clean channel. (The DSP settings for the High Gain channel are now saved to memory.)

When you reselected the Clean channel, the DSP settings previously stored in memory were automatically recalled. Switch to the Overdrive channel and the DSP settings you just stored are still there. You can change the DSP settings at any time. Once you set the DSP and select another channel, Channel Tracking stores the settings for you. Even when the amplifier is turned off, the DSP settings are stored and recalled the next time you turn it on. That’s the power of Channel Tracking!

In addition, each channel has two DSP banks, Bank A and Bank B, when you use the supplied three-button footswitch (see page 8 for more information on using the footswitch). Channel Tracking also remembers which DSP bank was selected for each channel.


The Front Panel

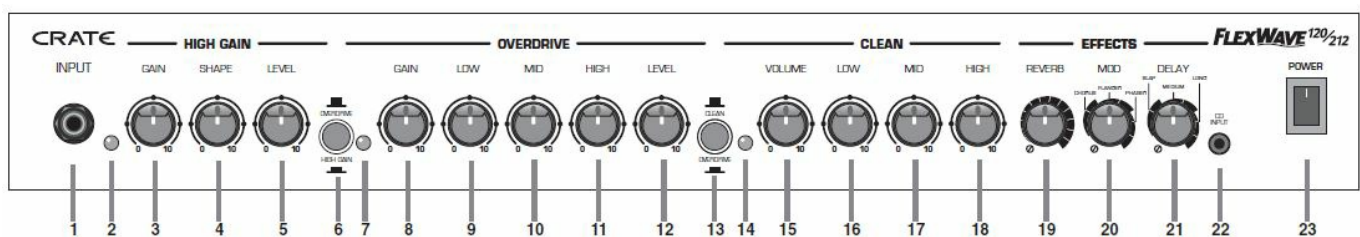

- **1. INPUT:** Use this jack to connect your guitar to the amplifier using a shielded instrument cable.
- **2. HIGH GAIN LED:** This LED illuminates when the High Gain channel is selected.
- **3. GAIN:** Use this control to adjust the amount of distortion for the High Gain channel.
- **4. SHAPE:** Use this control to “dial in” the tone for the High Gain channel. Rotating this control counter-clockwise enhances the mid frequencies, while rotating it clockwise enhances the low and high frequencies.
- **5. LEVEL:** Use this control to adjust the output level of the High Gain channel.
- **6. HIGH GAIN/OVERDRIVE:** Use this switch to select the High Gain or Overdrive channel. With the switch in the out position, the Overdrive channel is selected. When the switch is pushed in, the High Gain channel is selected. Note: This switch is only active when the Overdrive/Clean switch [13] is pushed in.
- **7. OVERDRIVE LED:** This LED illuminates when the Overdrive channel is selected.

- **8. GAIN:** Use this control to adjust the amount of distortion for the Overdrive channel.
- **9. LOW:** This adjusts the bass frequencies. Use this control to get the best-sounding bass response for your instrument when using the Overdrive channel.
- **10. MID:** This adjusts the midrange frequencies. Use this control to get the best projection and midrange tones for your instrument when using the Overdrive channel.
- **11. HIGH:** This adjusts the treble frequencies. Use this control to attain a bright and lively sound for your instrument when using the Overdrive channel.
- **12. LEVEL:** Use this control to adjust the output level of the Overdrive channel.
- **13. OVERDRIVE/CLEAN:** Use this switch to select the Clean channel or the Overdrive and High Gain channels. With the switch in the out position, the Clean channel is selected. When the switch is pushed in, either the High Gain or Overdrive channel is selected, depending on the setting of the High Gain/Overdrive switch [6].
- **14. CLEAN LED:** This LED illuminates when the Clean channel is selected.
- **15. VOLUME:** Use this control to adjust the output level of the Clean channel.
- **16. LOW:** This adjusts the bass frequencies. Use this control to get the best-sounding bass response for your instrument when using the Clean channel.
- **17. MID:** This adjusts the midrange frequencies. Use this control to get the best projection and midrange tones for your instrument when using the Clean channel.
- **18. HIGH:** This adjusts the treble frequencies. Use this control to attain a bright and lively sound for your instrument when using the Clean channel.
- **19-21. EFFECTS:** Use these controls to apply and adjust the DSP effects. Complete information on these effects is provided.
- **22. CD INPUT:** Use this 1/8" stereo mini jack to connect the output from a CD player, MP3 player, laptop, etc., to the amplifier. The signal at this jack is summed into a mono signal, which is sent to the internal power amp circuit. Use the output level control for the signal source to adjust the signal for the proper mix with your guitar.
- **23. POWER:** Use this switch to turn the amplifier on (top of the switch depressed) and off (bottom of the switch depressed). The switch illuminates when the amplifier is turned on.


The Rear Panel

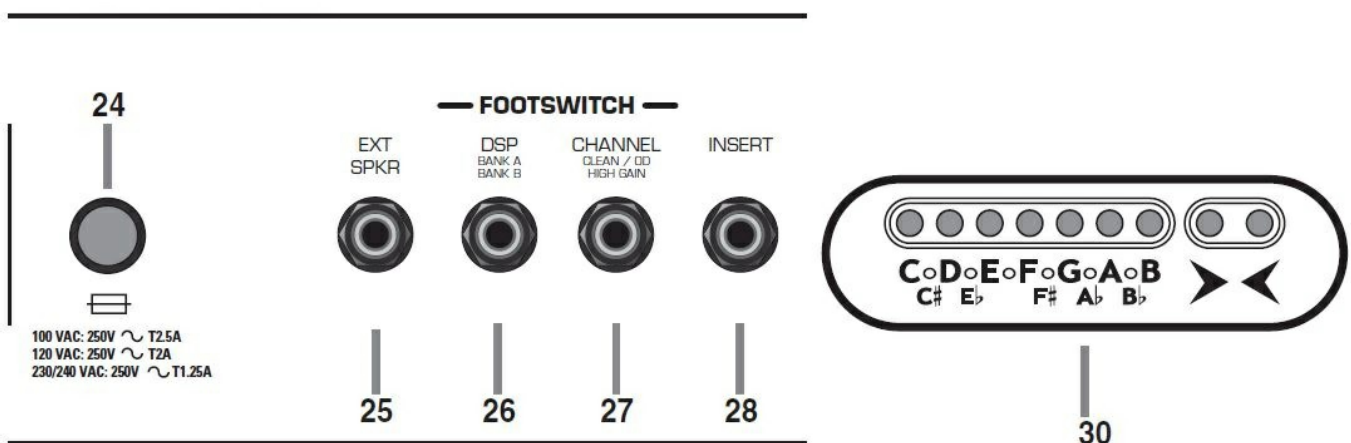

- **24. FUSE:** The fuse protects the amplifier from damage caused by a faulty AC power source or other problems. If the fuse opens, replace it with the same size and type. If fuses continue to fail, check the AC source. If the


source is okay, refer to page 12 or contact your Crate dealer for service information.

- **25. EXTENSION SPEAKER:** Use this jack to connect the amplifier to an external speaker cabinet. This jack is wired in series with the internal speaker, which remains active when an extension speaker is connected.
- **26. DSP FOOTSWITCH:** Use this jack to connect one of the footswitch cables to the three-button footswitch (supplied). This allows you to select between two DSP presets for each of the three channels. Additional information about the operation of the footswitch is.
- **27. CHANNEL FOOTSWITCH:** Use this jack to connect one of the footswitch cables to the three-button footswitch (supplied). This allows you to remotely switch between the Clean, High Gain, and Overdrive channels. Additional information about the operation of the footswitch.
- **28. INSERT:** Use this jack to connect an external signal processor to the amplifier. Use Crate's STP201, STP202, or STP203 stereo-to-mono Y-cord or an adapter such as Crate's YPP117 and two 1/4" mono signal cables to connect to the effect, as shown below.
- **29. POWER CORD (not shown):** This grounded power cord is to be plugged into a grounded power outlet, wired to current electrical codes and compatible with the voltage, power, and frequency requirements stated on the rear panel. Do not attempt to defeat the safety ground connection!
- **30. ELECTRONIC TUNER (cabinet top)** The electronic tuner is active whenever the amplifier is turned on, providing constant "real-time" tuning. The row of red LEDs on the left indicates which note is being tuned. When a single LED is lit, it represents the note that appears just below the LED. When two LEDs are lit, it represents the note that appears between them in the bottom row. The left green LED indicates the note is flat, and the right green LED indicates the note is sharp. The note is properly tuned when both LEDs are lit at the same time.

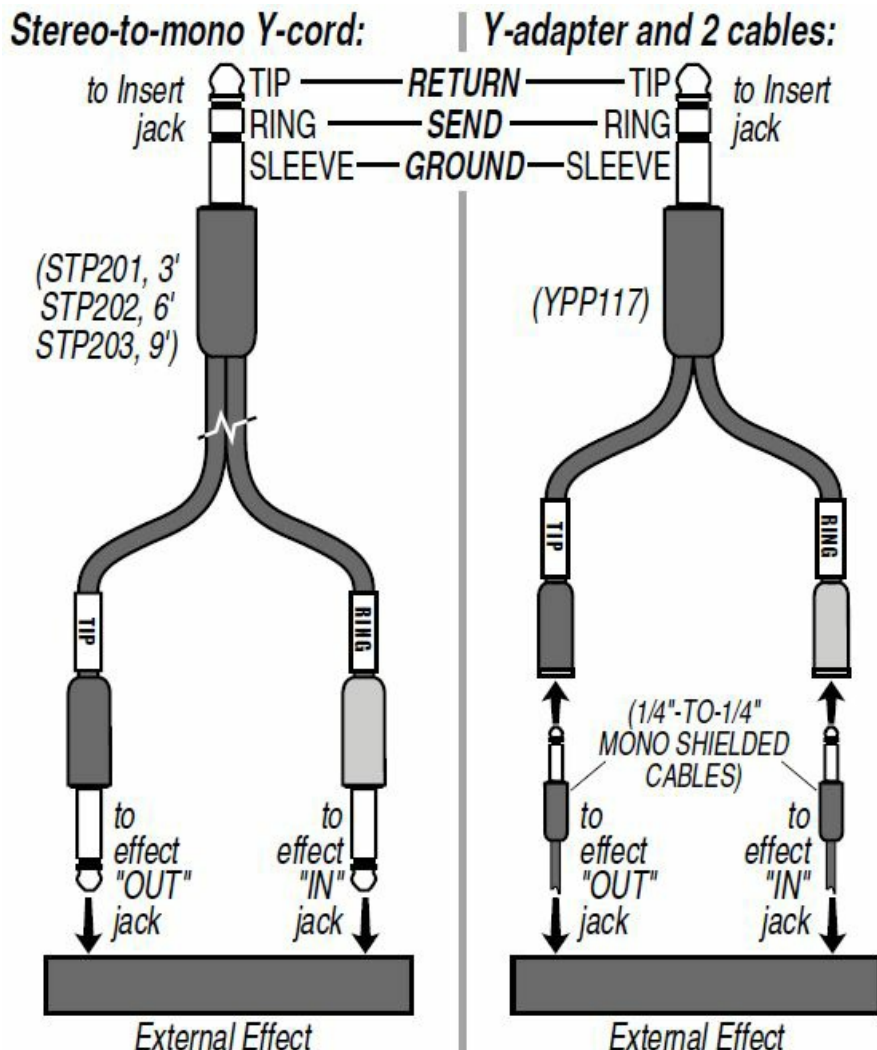

Signal Path

MOD + DELAY + REVERB

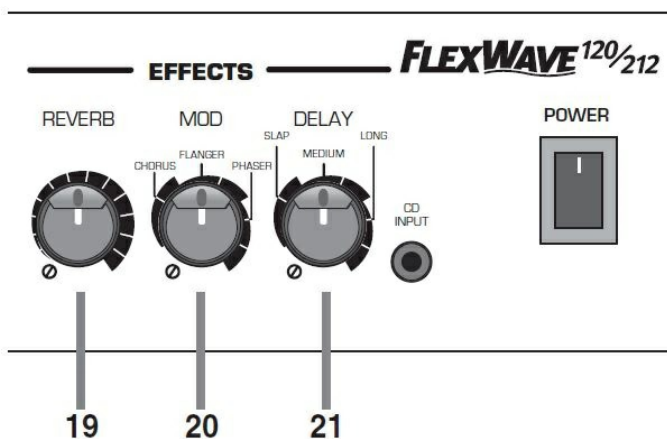

- **19. REVERB:** Use this control to adjust the amount of digital reverb effect. In its fully counterclockwise position, the signal will be “dry” (without reverb). As you rotate this control clockwise, the amount of reverb increases.
- **20. MOD:** Use this control to select the type of digital modulation effect. In its fully counterclockwise position, the signal will be “dry” (without modulation). As you rotate the control clockwise, you can select from three chorus settings, three flanger settings, or three phaser settings. The chart below describes these effects.
- **21. DELAY:** Use this control to select the type of digital delay effect. In its fully counterclockwise position, the signal will be “dry” (without delay). As you rotate the control clockwise, you can select from three slap settings, three medium delay settings, or three long delay settings. The chart below describes these effects.

Effect Setting Description


- Chorus 1 Chorus with low depth
- Chorus 2 Chorus with medium depth
- Chorus 3 Chorus with high depth
- Flanger 1 Flanger with low depth
- Flanger 2 Flanger with medium depth
- Flanger 3 Flanger with high depth
- Phaser 1 Phaser with low feedback
- Phaser 2 Phaser with medium feedback
- Phaser 3 Phaser with high feedback
- Slap 1 Single short delay with low level
- Slap 2 Single short delay with medium level
- Slap 3 Single short delay with high-level
- Medium 1 Multiple repeats with low-level and medium length
- Medium 2 Multiple repeats with medium level and medium length
- Medium 3 Multiple repeats with high level and medium length
- Long 1 Multiple repeats with low level and long length
- Long 2 Multiple repeats with medium level and long length
- Long 3 Multiple repeats with high level and long length

Using the Footswitch with the DSP

The Crate three-button footswitch supplied with the FlexWave120/212 allows access to an additional DSP preset


for each channel of the amplifier. When the footswitch is connected to the amplifier as shown below, the “original” DSP presets are active for each channel when the #3 footswitch LED is illuminated. These are referred to as “DSP Bank A.” When the #3 button is switched and the LED is off, a second DSP preset may be stored and recalled for each channel — “DSP Bank B.”

Note: DSP Bank B presets are only accessible when the footswitch is connected to the amplifier. When the footswitch is not connected, only DSP Bank A is accessible.

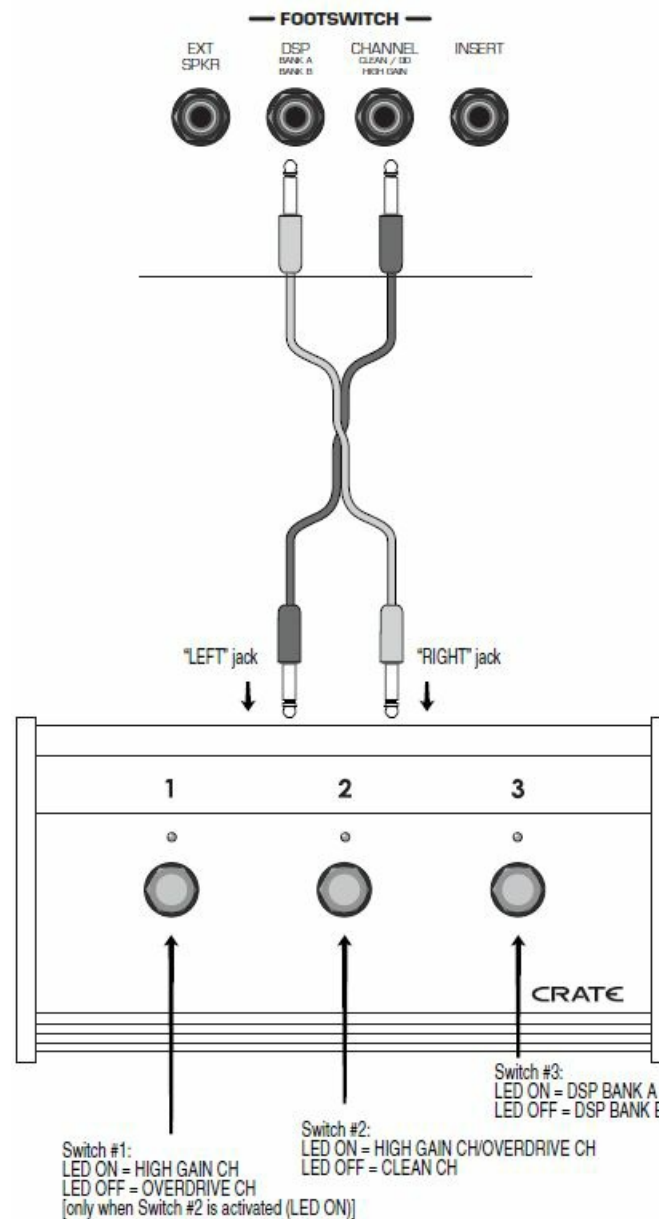


Suggested Settings


Sweet 'n Clean:

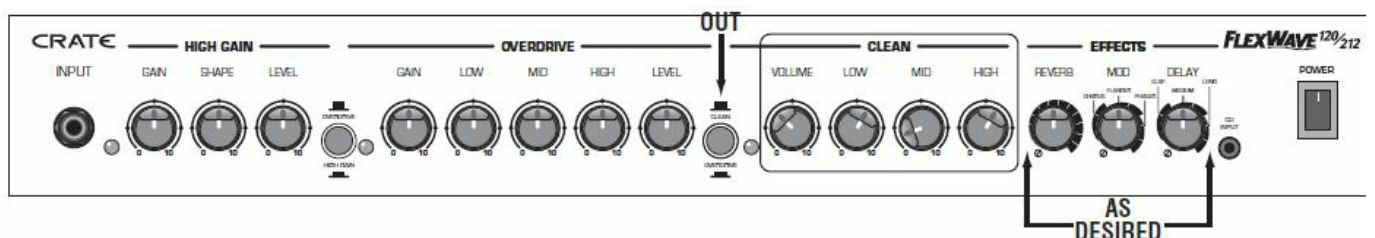


Just a 'Lil Nasty:

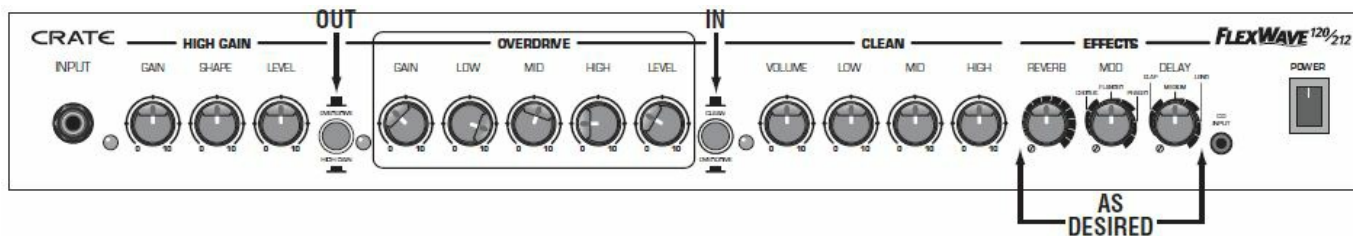


Politely Gritty:

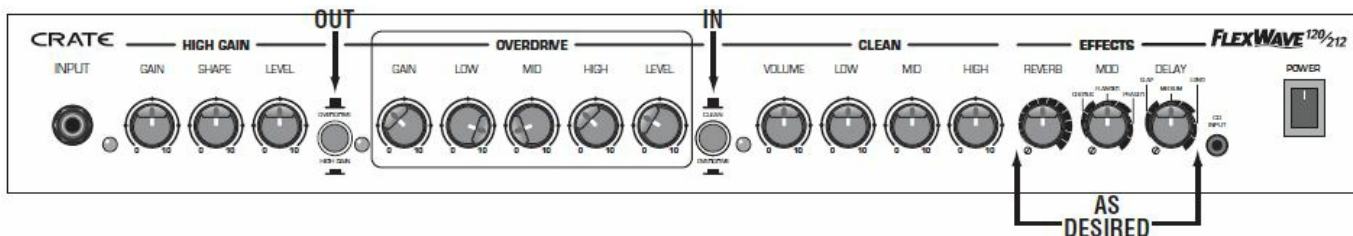


Down 'n Dirty:

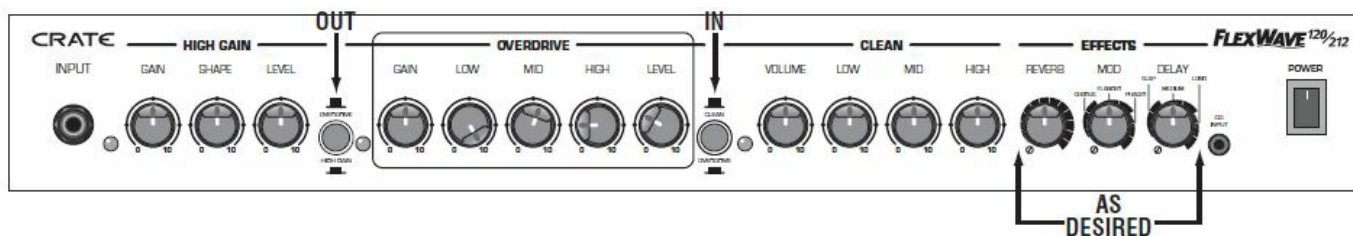

Mean & Obscene:

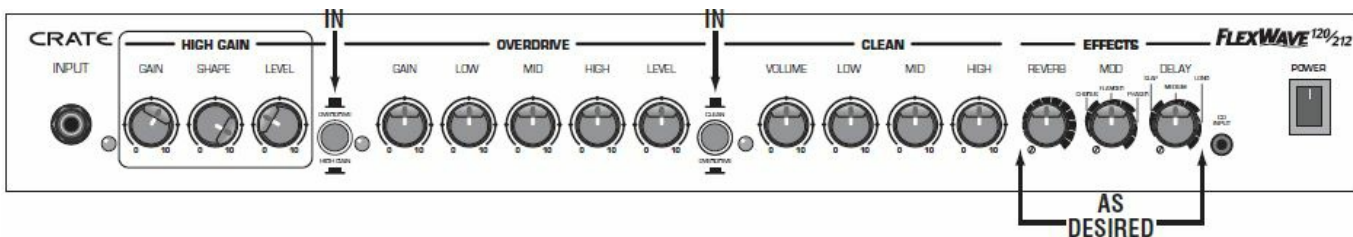

System Block Diagram

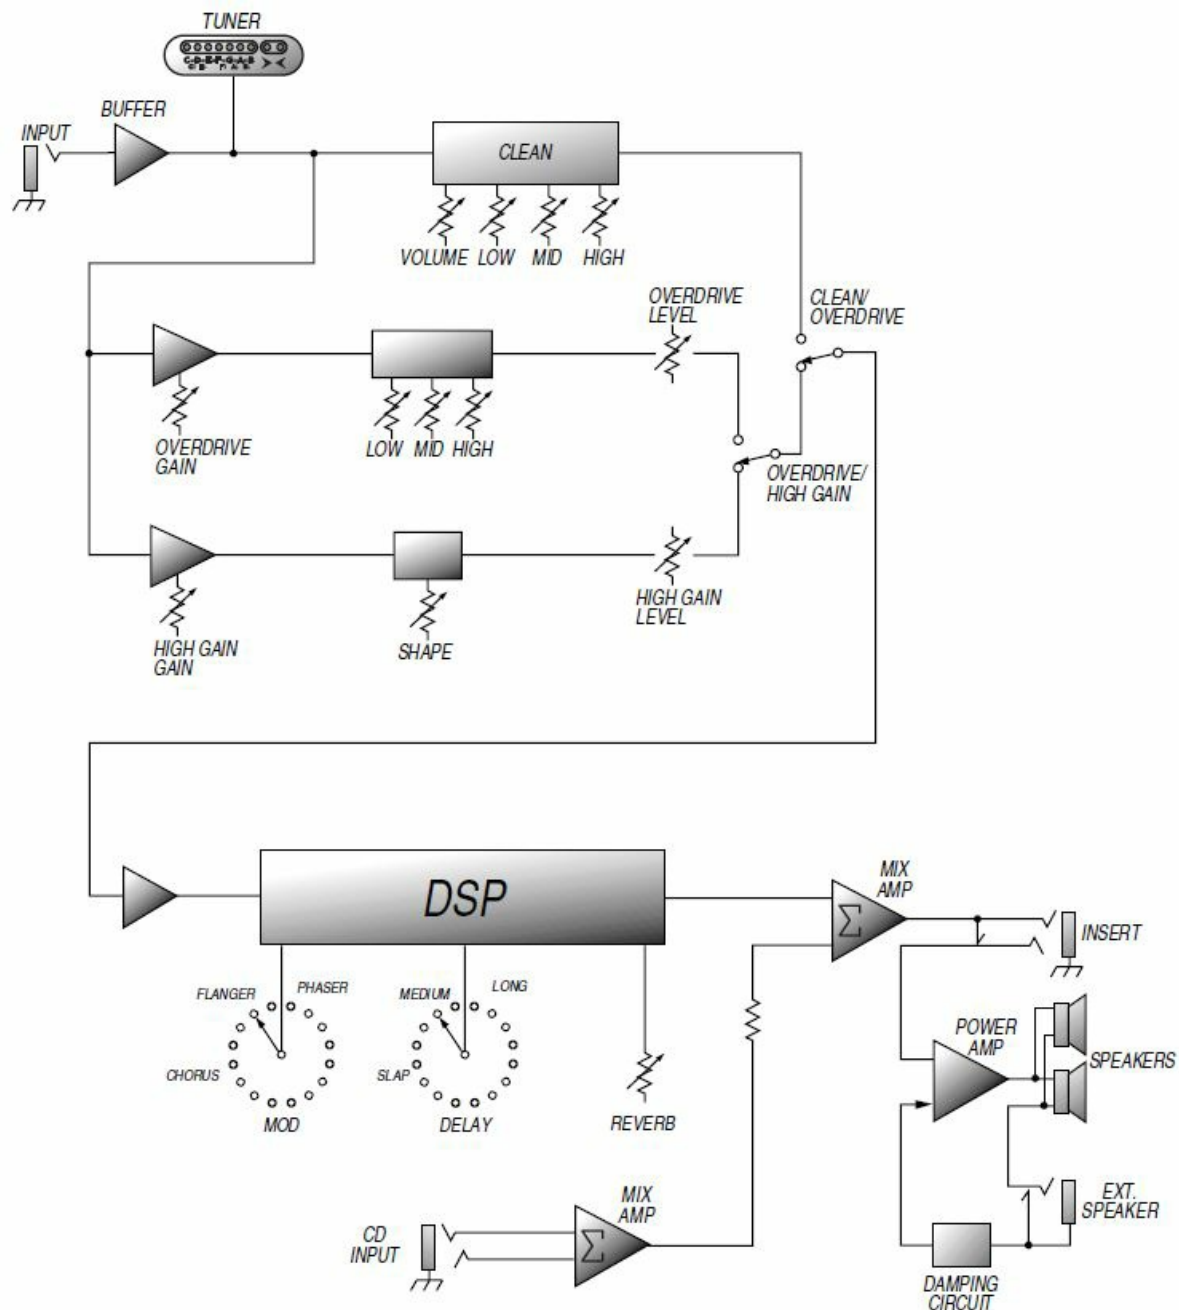

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, according to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used under the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this device not expressly approved by LOUD Technologies Inc. could void the user's authority to operate the equipment under FCC rules.

Declaration Of Conformity

- Manufacturer: LOUD Technologies Inc.
- 16220 Wood-Red Rd. NE
- Woodinville, WA 98072, USA
- Product Name: Crate FlexWave120/212
- Product Type: Audio Amplifier
- Complies with Standards:
- LVD: 92/31/EEC, 93/68/EEC, & 73/23/EWG
- Safety: EN60065
- EMC: EN55013, EN55020, EN55022, EN55103, EN61000-3-2,
- & EN61000-3-3
- The official Declaration of Conformity for this product is kept on file at:
- LOUD Technologies Inc., 16220 Wood-Red Road NE, Woodinville, WA 98072 • Tel: 1-866-858-5832

SPECIFICATIONS

FlexWave120/212 TECHNICAL SPECIFICATIONS

Output Power Rating	120W rms @ 5% THD, 8Ω, 120 VAC	
Gain	High Gain Channel	110 dB, all controls @ 10
	Overdrive Ch	88 dB, all controls @ 10
	Clean Ch	58 dB, all controls @ 10
CD Input	29 dB	
Maximum Input Signal Accepted	2.5 volts rms @ 400 Hz	
Input Impedance	470k ohm	
High Gain Channel	Shape Control	Proprietary Circuit
Overdrive Channel	Low	20 dB range @ 80 Hz
	Mid	15 dB range @ 1 kHz
	High	20 dB range @ 10 kHz
Clean Channel	Low	36 dB range @ 80 Hz
	Mid	15 dB range @ 800 Hz
	High	40 dB range @ 10 kHz
Speaker Size and Rating	2 x 12" (parallel) Crate Custom Design, 4 ohm total	
Power Requirements	120 VAC, 60 Hz, 95 VA	
	100/115 VAC, 50/60 Hz, 95 VA	
	230/240 VAC, 50/60 Hz, 95 VA	
Size (H x W x D)	20.0 in/50.8 cm x 26.25 in/66.8 cm x 13.0 in/33.0 cm	
Weight	48.7 lb/22.08 kg	

The FlexWave120/212 is covered with a durable Tolex material. Wipe it clean with a lint-free cloth.

Never spray cleaning agents onto the cabinet. Avoid abrasive cleansers which would damage the finish. Crate continually develops new products, as well as improves existing ones. For this reason, the specifications and information in this manual are subject to change without notice. "Crate" is a registered trademark of LOUD Technologies Inc. All other brand names mentioned are trademarks or registered trademarks of their respective holders and are hereby acknowledged.


Service Information

If you are having a problem with your FlexWave120/212, you can go to our website (www.crateamps.com) and click on Support for service information, or call 1-800-898-3211 during business hours (7 am to 5 pm PST, Monday-Friday). If you are outside of the U.S., contact your local distributor for technical support and service.

CONTACT

- www.crateamps.com
 - @2007 LOUD Technologies Inc.
 - 16220 Wood-Red Road NE
 - Woodinville, WA 98072
 - Part No. 0022725 Rev. A 01/07
-

Documents / Resources

	CRATE FLEXWAVE 212 Three Channel Guitar Amplifier with DSP and Channel Tracking [pdf] Owner's Manual FLEXWAVE 212 Three Channel Guitar Amplifier with DSP and Channel Tracking, FLEXWAVE 212, Three Channel Guitar Amplifier with DSP and Channel Tracking, Guitar Amplifier with DSP and Channel Tracking, Amplifier with DSP and Channel Tracking, DSP and Channel Tracking, Channel Tracking, Tracking
---	--

References

-  [Manual-Hub.com - Free PDF manuals!](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.