Home » Crayola » Crayola 04-0907-0-100 Light Up Tracing Pad Instructions

Crayola 04-0907-0-100 Light Up Tracing Pad Instructions

Contents

- 1 LIGHT-UP TRACING PAD
 - 1.1 Contents
 - 1.2 How to Use Your Light-Up Tracing

Pad

- 1.3 Insert Batteries
- 1.4 For Best Results
- 2 Documents / Resources
 - 2.1 References
- **3 Related Posts**




LIGHT-UP TRACING PAD


Bright LED Power in an Ultra Thin Tablet

NOTE: Please review instructions to ensure best results.


Contents

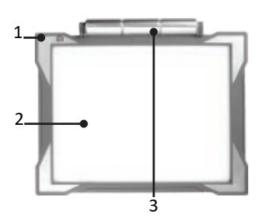


- 1. On/Off Switch
- 2. Light Screen
- 3. Battery Case

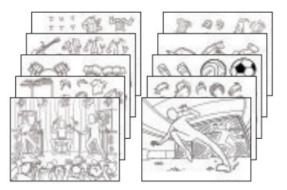

10 Design Template Sheets

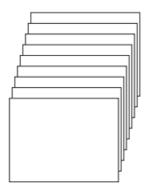

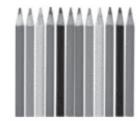

10 Blank Tracing Sheets

12 Colored Pencils



Graphite Pencil

Plus more tracing sheets at Crayola.com/tracing

Additional Items Needed: 3 AA alkaline batteries & Phillips screwdriver (Not included)

How to Use Your Light-Up Tracing Pad



1. Slide light switch to "On" position.



2. Lay a design sheet on the screen. Cover with a blank tracing sheet.



3. Trace, then replace! Swap the first design sheet with new ones to add different details.




4. When your design is just the way you want, color it in.


Insert Batteries



CAUTION: BATTERIES MUST BE INSTALLED BY AN ADULT ONLY.

- 1. Use Phillips screwdriver (not included) to loosen battery cover screws underneath the pad.
- 2. Remove the used batteries and dispose of properly. Insert three (3) AA alkaline batteries. Ensure that direction matches diagram inside battery case.
- 3. Replace battery cover and tighten the screws.

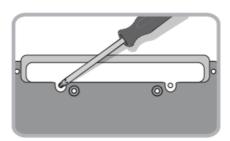

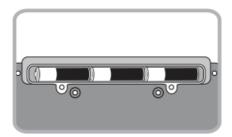

For Best Results

- Use one design sheet & one drawing sheet at a time.
- Trace outline lightly with a pencil & color as desired.
- Any standard writing or copier paper may be used with the Tracing Pad.
- Also use Crayola Crayons, Markers or Colored Pencils for tracing & coloring.
- Turn Tracing Pad to "Off" position when not in use.
- Wipe any marks or dust off screen with a soft, damp cloth. Do NOT immerse Tracing Pad in water.

FOR BEST RESULTS: To sharpen, use a hand-held sharpener.

CLASS 1 LED PRODUCT

BATTERY SPECIFICATIONS & CAUTIONS

Requires 3 AA batteries 4.5 V (DC). Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the toy before being charged. Non-rechargeable batteries are not to be recharged. Different types of batteries or new and used batteries are not to be mixed. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited.

Contents and colors may vary. Keep instructions for future reference.

NO BATTERIES INCLUDED



The Wheelie Bin symbol indicates that the product and the batteries must not be disposed of with other household waste as they may contain elements which can have a harmful effect on the environment and human health. Please use designated collection points or recycling facilities when disposing of the item and the batteries. To help locate your nearest facility see: www.recyclenow.com

> 6+ crayola.com

04-0907-0-100



BINNEY & SMITH (EUROPE/EUROPA) LTD., BEDFORD HEIGHTS, MANTON LANE, BEDFORD, MK41 7PH, ENGLAND/ ANGLETERRE/INGLATERRA.

DISTRIBUTED IN AUSTRALIA BY CRAYOLA (AUSTRALIA) PTY LTD. 10 CARIBBEAN DRIVE SCORESBY VICTORIA 3179. IMPORTED BY CRAYOLA CANADA, LINDSAY, ON, K9V 2N5.

QUALITY GUARANTEE

We guarantee the quality of all Crayola products. If this product does not perform properly, please contact us.

M-F, 9 AM-4 PM ET/AEST: U.S.A. & CANADA (Call/Text): 1-800-CRAYOLA (800-272-9652) Text charges may apply. AUSTRALIA: 1-800-657-353

M-F, 9 AM-5 PM LOCAL TIME:

UK: 0800 389 6238

ITALY: +39 (0) 543 720997 **MEXICO:** 800 7178 222

BENELUX: +31 (0)104596 580 **FRANCE:** +33 (0) 1 41 06 54 54 **GERMANY:** +496103 459180

Documents / Resources



Crayola 04-0907-0-100 Light Up Tracing Pad [pdf] Instructions

04-0907-0-100 Light Up Tracing Pad, 04-0907-0-100, Light Up Tracing Pad, Tracing Pad, Pad

References

- <u>e crayola.com</u>
- Crayola.com/tracing

Manuals+,