

# **CREATE Aroma Ceramic Diffuser User Manual**

Home » CREATE » CREATE Aroma Ceramic Diffuser User Manual



#### Contents

- **1 CREATE Aroma Ceramic**
- Diffuser
- **2 SECURITY INSTRUCTIONS**
- **3 DESCRIPTION**
- **4 PARTS LIST**
- **5 OPERATING INSTRUCTIONS**
- **6 TROUBLESHOOTING**
- 7 Documents / Resources
- **8 Related Posts**



# **CREATE Aroma Ceramic Diffuser**



#### **SECURITY INSTRUCTIONS**

Read the following instruction carefully before using the appliance for the first time.


- Only use the power cord that is supplied with the unit.
- · Always remove the power cord before cleaning.
- An essential oil should not come in contact with the exterior surface of the unit. Use only 100% pure essential
  oil. Do not use fragrance oils.
- To clean the aroma diffuser, first remove the top cover.
- Ory with a soft cloth to avoid mineral buildup.
- · Do not use strong detergents.

## **DESCRIPTION**

- It utiUzes ultrasonic vibration to transform water into mist Essential oil could be applied to create fragrance, and it has some humidification effect.
- Water shortage protection: With water shortage detector, when being in operation, it will automatically power off ff waterless, which can protect the atomizer from being burnt and broken.
- OV..rheating protection: The machine will automatically power off it abnormal overheating. Such function could avoid shell deformation caused by high temperature.

## **PARTS LIST**

- 1. Ceramic cover
- 2. Drain side
- 3. Ceramic disc
- 4. Light button
- 5. water tank
- 6. Max water level
- 7. Air outlet
- 8. Power button
- 9. Air inlet
- 10. DC plug
- 11. Cleaning brush
- 12. Power adaptor

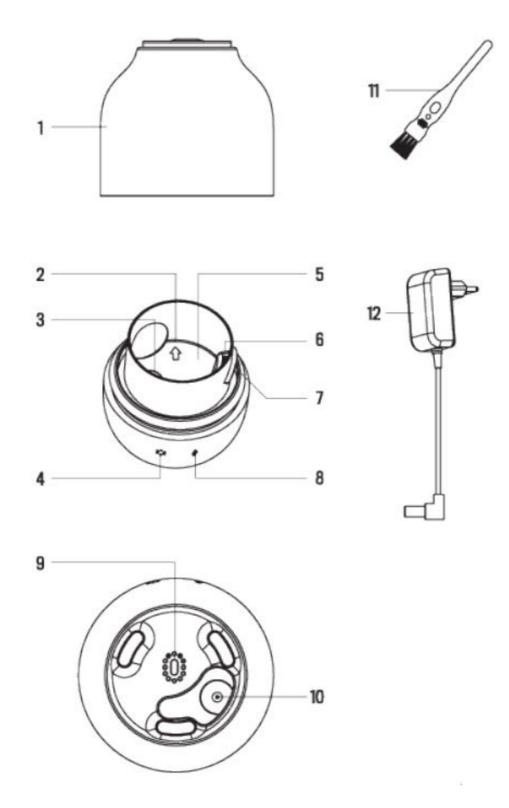

## **OPERATING INSTRUCTIONS**

- 1. Open the top cover.
  - 1. Avoid essential oil or acetone chemicals dropping on the cover surface because the painting can peel off.
- 2. Add around 130 ml tap water Inside the water tank.
  - 1. Do not exceed the max water line when filling water inside, two or three drops of essential oil is enough for 130 ml water.
- 3. Close the top cover.
- 4. Insert the adaptor plug Into a household power socket. Light button usage:
  - 1. 1st pressing: Light is on at 100% intensity.
  - 2. 2nd pressing: Light is on at 20% intensity.

- 3. 3rd pressing: Candle Light mode is on.
- 4. 4th pressing: Light Is off.
- 5. When the ught is on, long-press the light button to control the intensity. It can be adjusted from 100% to 30% intensity. Once the button is loosened, the light intensity is locked.
- 6. Power button usage 1st pressing: Continuous mist is on. 2nd pressing: Intermittent mist is on in 15 seconds intervals. 3rd pressing: Mist is off. When the unit is on, long-press the power button to turn off the unit completely.

# **TROUBLESHOOTING**

| PROBLEM            | POSSIBLE CAUSE                                     | SOLUTION                                  |
|--------------------|--|---|
| It is not working. | Power is not connected.                            | Connect the power and press power button. |
|                    | Power wire is broken or the adaptor has burnt out. | Please contact local retailer.            |

| Unable to spray mist or sprays badly. | There is not enough water in the tank.                         | Fill with water.  |
|---------------------------------------|--|---|
|                                       | There is too much water in the tank.                           | If the water volume exceeds 130 ml, the mist volume will be very small.                                     |
|                                       | The ceramic disc is dirty.                                     | Clean the water inlet.  |
|                                       | The top cover is not placed correctly.                         | Replace the top cover properly.   |
|                                       | The bottom air inlet is dirty.                                 | Clean away the dust of the bot-<br>tom air inlet.   |
| Main body is leaking water.           | The top cover is not placed correctly.                         | If the top cover is not placed properly, the water will splash out and fall onto the machine body or table. |
|                                       | The room temperature is low or there is an excess of humidity. | Low temperature and wet hu-<br>midity may cause the machine<br>to sweat.                                    |

## **Documents / Resources**



**CREATE Aroma Ceramic Diffuser** [pdf] User Manual Aroma Ceramic Diffuser