

CREATE
Espresso Machine
With Cold Coffee
Function



CREATE Espresso Machine With Cold Coffee Function User Manual

[Home](#) » [CREATE](#) » CREATE Espresso Machine With Cold Coffee Function User Manual 

Contents

- [1 CREATE Espresso Machine With Cold Coffee Function](#)
- [2 Product Usage Instructions](#)
- [3 FAQ](#)
- [4 SECURITY INSTRUCTIONS](#)
- [5 PARTS LIST](#)
- [6 BEFORE FIRST USE](#)
- [7 BREW ESPRESSO](#)
- [8 MILK FROTHER FUNCTION](#)
- [9 HOT WATER FUNCTION](#)
- [10 TANK CLEANING](#)
- [11 TROUBLESHOOTING](#)
- [12 COOLING FUNCTION](#)
- [13 CLEANING AND MAINTENANCE](#)
- [14 Documents / Resources](#)
 - [14.1 References](#)

CREATE

CREATE Espresso Machine With Cold Coffee Function



Product Specifications:

- Cup warming tray
- Pressure panel
- Power button
- Espresso button
- Cold coffee button
- Filter holder arm
- Cup rest tray
- Drip tray
- Water tank
- Steam regulator

Product Usage Instructions

Security Instructions:

Follow all safety precautions mentioned in the user manual before using the product.

Parts List:

Refer to the parts list to familiarize yourself with the components of the Thera Classic Compact.

Before First Use:

1. Ensure all parts are clean and in place.
2. Fill the water tank with fresh water.
3. Proceed with brewing espresso or other functions after setup.

Brew Espresso:

1. Place the filter in the filter holder arm and add ground coffee powder.
2. Tamp the coffee and clean the edges of the filter.
3. Insert the filter holder arm into the coffee maker and close it securely.
4. Place a cup on the cup rest tray, press the power button, and start brewing.

Milk Frother Function:

1. Press the power button followed by the steam button for preheating.
2. Pour milk into a cup and use the steam nozzle to froth the milk.
3. Adjust the steam size as needed and release some water before frothing.

Hot Water Function:

1. Press the power button and then the steam button for preheating.
2. Turn the steam regulator to dispense hot water for your needs.

FAQ

Q: How do I clean the Thera Classic Compact?

A: Refer to the user manual for detailed instructions on cleaning and maintenance of the product.

Q: What should I do if the indicator lights do not function properly?

A: Troubleshoot the issue by checking the power source and ensuring all components are properly connected.

SECURITY INSTRUCTIONS

Before using any electrical appliance, always read the basic safety precautions carefully.

- Before using this appliance, check that the voltage of your home outlet corresponds to the product rating plate.
- This device must always be connected to a ground outlet.
- Close supervision is necessary when the appliance is used near children.
- To prevent electric shock in case of fire, do not immerse the power cord or plug in water or any other liquid.
- Do not damage, bend, or stretch the power cord. Do not place heavy objects on the cable.
- To protect against electric shock, do not immerse the cord, plug, or machine in water or any other liquid.
- Do not use this device in humid environments, with high temperatures or high magnetic fields.
- Do not place the coffee maker on a hot surface, near a fire source, or other electrical appliances, such as a


refrigerator.

- Do not turn on the machine when the cord or plug is damaged, the coffee maker is malfunctioning, or damaged in any way, and return it to the nearest authorized service center for inspection and maintenance or contact the supplier.
- Always use original accessories.
- This appliance is only used for making coffee, do not use it for other purposes, and place it in a dry environment.
- Place the coffee maker on a flat surface or table. Do not let the cord hang over the edge of the table or counter.
- When using the coffee maker, do not directly touch the hot parts of the surface.
- Regularly clean and maintain the parts of the coffee machine to ensure coffee quality and extend the life of the appliance.
- Do not move or turn off the power cord when the machine is working.
- Never use the coffee machine without water.
- To ensure safety, please read the instructions carefully and understand the correct use method.
- Do not wash the coffee maker or power cord in water or other liquids.
- This appliance is for home use only, do not use it outdoors.
- Before using the appliance for the first time, use the coffee maker twice with only clean water to eliminate the odor.
- Please save this instruction manual for future reference.
- This appliance can be used by children aged 8 years and older if they have been given supervision or instruction concerning the use of the appliance safely and understand the hazards involved.
- Cleaning and maintenance of the product cannot be carried out by children unless they are over 8 years old and under supervision.
- Keep the appliance and its cord out of the reach of children under 8 years of age.
- The appliances can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children should never play with the device.
- **Warning:** Misuse of this product could cause possible injury. The surface of the heating element is subject to residual heat after use.


PARTS LIST

1. Cup warming tray
2. Pressure panel
3. Power button
4. Espresso button
5. Cold coffee button
6. Filter holder arm
7. Cup rest tray
8. Drip tray
9. Water tank
10. Steam regulator
11. Steam button

- 12. Skimmer arm
- 13. 1 Cup Filter
- 14. 2 Cup Filter
- 15. pressing spoon

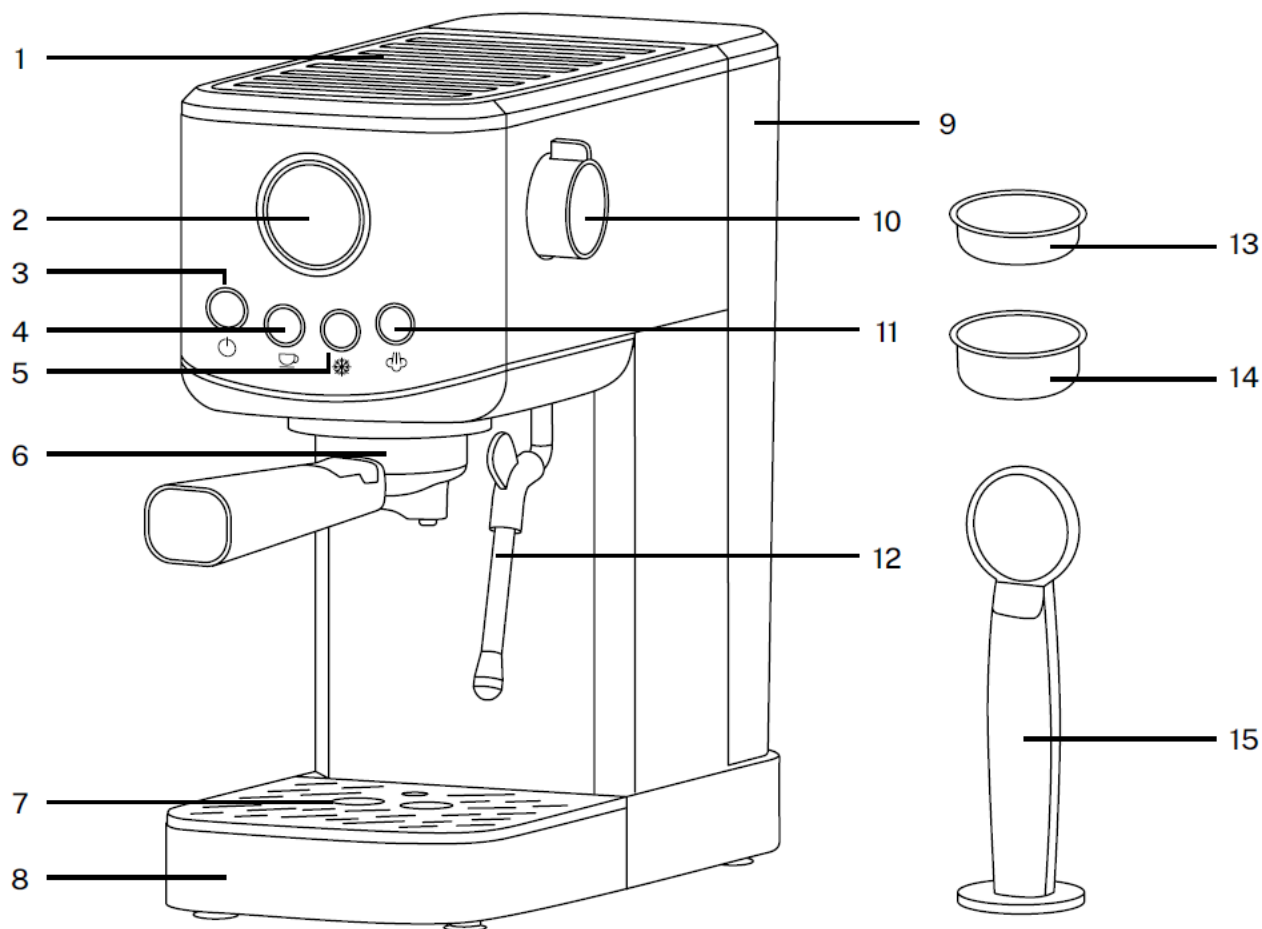


BEFORE FIRST USE

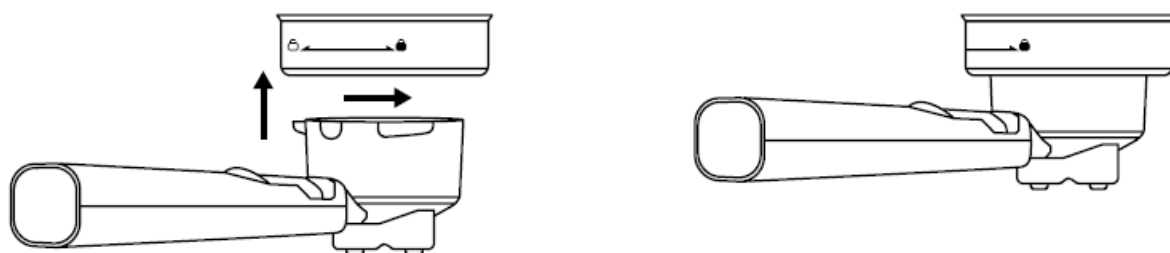



- Pour water into the tank, never exceeding the “Max” mark that appears on the tank. If you want to prepare cold coffee, you must add cold water inside the tank.
- Take the filter holder arm out of the packaging box, place the filter you want to use on the arm, and screw it into the corresponding position on the machine. The handle of the funnel should be aligned with the mark so that it is correctly placed.
- Plug in the power supply, the machine will beep and the four lights flash once.
- Press the power button and the indicator lights will remain on.

BREW ESPRESSO

1. Place the filter you want to use in the filter holder arm, then put the ground coffee powder in the filter (the coffee powder should be No. 1, neither too coarse nor too fine).
2. Then, with the flat part of the tamper spoon, press the coffee from the filter and clean the coffee powder from the edge of the filter with a brush or a dry cloth.

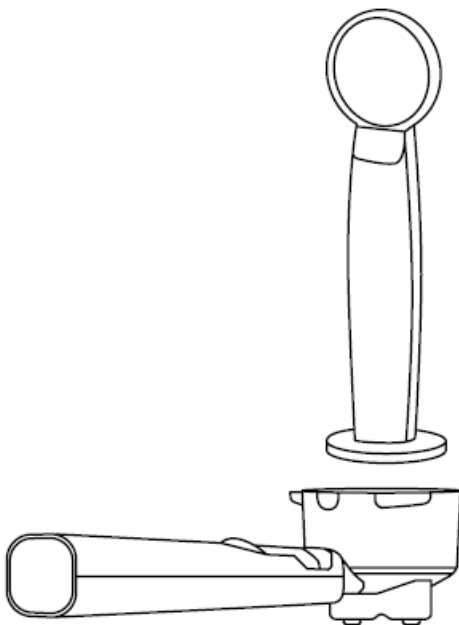

3. Insert the filter holder arm into the coffee maker and close it firmly until you reach the locking point.
4. Then place the coffee cup on the cup rest tray, press the power button, and all the indicator lights will remain on.

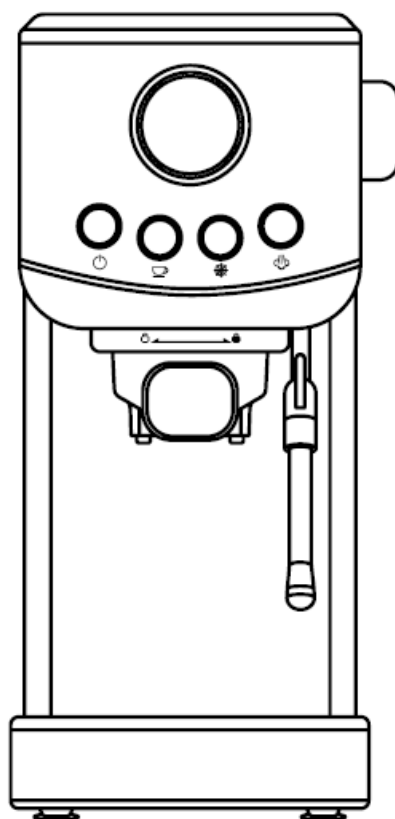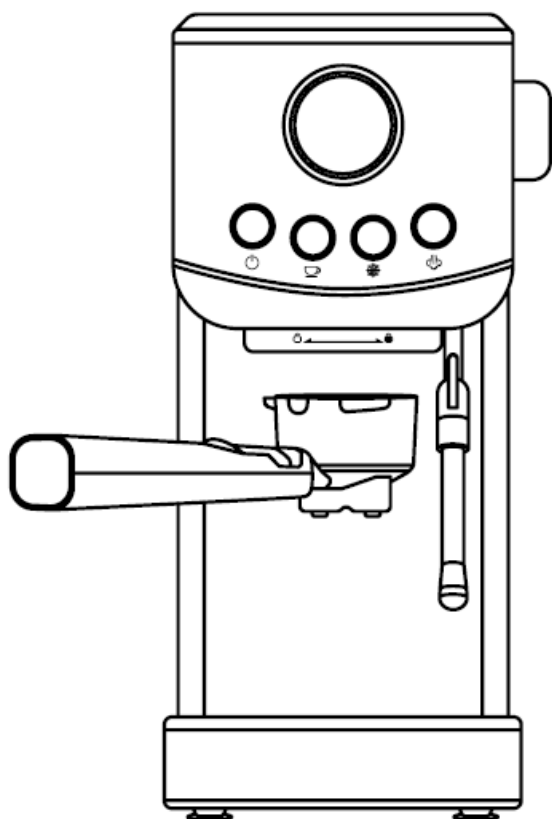

Prepare hot coffee.

- Press the espresso button the indicator light will flash and the machine will start the heating system.
- When the indicator light stays on, the internal components have heated up, the machine is ready and the coffee comes out automatically.
- When you reach the desired coffee volume, press the espresso button again to stop the coffee maker. (The longest coffee is 60 seconds).
- Press the power button and the coffee maker will remain in standby mode.


Prepare cold coffee.

- Press the cold brew button once for the coffee to start coming out.
- When you reach the desired volume, press the cold brew button again and the coffee will stop (the maximum coffee duration is 60 seconds).
- It is recommended to use cold water to obtain a better flavor.

ADVICE:

- Whenever you make hot coffee first and then cold coffee, place a large cup under the hot water spout.
- Turn on the steam selector, hot water and steam will come out of the machine.
- When the hot water from the steam nozzle forms a straight line, turn off the steam selector.
- Put cold water in the water tank and your machine is ready to brew cold brew coffee.

MILK FROTHER FUNCTION

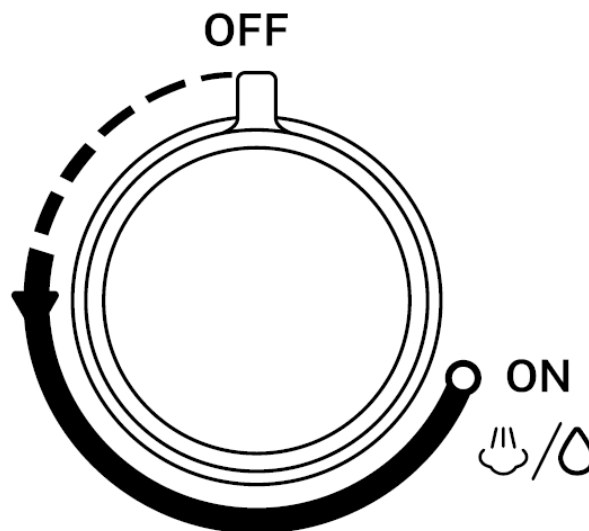

1. Press the power button and then the steam button. At this time, the indicator light will start flashing. When the steam indicator light stays completely on, preheating is complete.
2. Pour whole milk into a cup, insert the steam nozzle into the surface of the milk, then slowly unscrew the steam regulator until steam begins to come out.

Note: The steam size can be adjusted according to personal skill. Release some water into the steam wand before frothing.

3. When the milk temperature reaches about 70°C and the milk foam starts to puff up, you can turn the steam regulator to OFF and press the steam button to turn it off.

HOT WATER FUNCTION

1. Press the power button and then the steam button. At this time, the indicator light will start flashing. When the steam indicator light stays completely on, preheating is complete.
2. Turn the steam regulator and the steam pipe will start to discharge hot steam continuously. This way you can heat water in a cup.
3. Turn the steam regulator OFF to stop the steam output.

TANK CLEANING

- For your coffee machine to work efficiently, the internal pipes to be clean, and the taste of the coffee to be optimal, it is necessary to descale, clean, and maintain the coffee machine periodically.
 - The descaling warning will be displayed when the appliance has run cumulatively for 300 cycles. At this time, all indicators will flash and beep 5 times, which means that the coffee maker needs to be descaled, and then the appliance will return to its normal state.
 - The descaling warning will be displayed every time you turn on the appliance if you do not cancel it.
1. Fill the water tank with water and softener to the MAX level (follow the water and softener scale detailed in the softener instructions). If you wish, you can use a household descaler; use citric acid instead of the descaler (one hundred parts water and three parts citric acid).
 2. Press the espresso button once to prepare the coffee and prepare about 100 ml of hot water. Then turn off the appliance and leave the descaling solution in the appliance for 5 minutes.
 3. Turn on the device and repeat the previous step 3 times.
 4. Then repeat the previous step 2 times with only water at the MAX level (it is not necessary to wait 5 minutes).

NOTE: Once descaling is completed, it is necessary to cancel the descaling notice. Simultaneously press and hold the espresso button, cold coffee button, and steam button for 3 seconds.

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
	<ul style="list-style-type: none">• There is water in the water tank but the water tank is clogged.	<ul style="list-style-type: none">• Fill the tank with water and turn on the power switch and coffee switch.
	<ul style="list-style-type: none">• No water has been previously added to the machine.	<ul style="list-style-type: none">• Add water to the machine: Press the hot water button and the pump will start adding water to the machine until water comes out of the steam nozzle or funnel.

No water/steam.	<ul style="list-style-type: none"> The machine is not preheated. 	<ul style="list-style-type: none"> The machine needs to preheat before producing coffee. Wait for the indicator light to become steady and not flashing.
Fat-free.	<ul style="list-style-type: none"> Ground coffee is too thick. 	<ul style="list-style-type: none"> Change the coffee for one that is more ground.
	<ul style="list-style-type: none"> The coffee is not pressed. 	<ul style="list-style-type: none"> Press the coffee correctly.
No steam	<ul style="list-style-type: none"> The steam outlet is not connected properly. 	<ul style="list-style-type: none"> Connect the steam outlet correctly.
	<ul style="list-style-type: none"> The steam switch is not on or preheating to turn on the steam has not been completed. 	<ul style="list-style-type: none"> Use a small wire through the steam hole. Clean the steam wand with hot water after frothing. Turn on the steam switch and wait for preheating to complete before steaming.
A lot of little coffee comes out.	<ul style="list-style-type: none"> There is too much or too little coffee powder in the container. 	<ul style="list-style-type: none"> According to the standard amount of coffee powder, 1 cup with 1 tablespoon pressure: Coffee powder cannot be too thick or too fine. Coffee that is too thick cannot be fully extracted, too fine affects the amount of coffee.
Milk does not foam well.	<ul style="list-style-type: none"> Has not used whole milk. 	<ul style="list-style-type: none"> Use whole milk.
	<ul style="list-style-type: none"> You have started steaming before the steam is properly heated. 	<ul style="list-style-type: none"> Steaming can only be started after the steam indicator light turns from flashing to steady light.
The coffee light and steam light flash.	<ul style="list-style-type: none"> The temperature is too high after using the vaporizer. 	<ul style="list-style-type: none"> Refrigerate with water.
It doesn't boil the coffee.	<ul style="list-style-type: none"> In the steam state, the steam switch is not turned off. 	<ul style="list-style-type: none"> Turn the steam regulator to OFF.

COOLING FUNCTION

- When making coffee after using the steamer, turn off the “steam switch” as the temperature will be too high. The espresso and/or cold brew indicator light will flash until the machine has cooled.
- Then turn the steam regulator to, the machine will start pumping water and the steam pipe will discharge water

continuously and start cooling.

- When the indicator light flashes quickly, turn the steam regulator to “OFF” and it will stop cooling.
- Once the power indicator lights up, you can make coffee.

CLEANING AND MAINTENANCE


1. Turn off the power and allow the coffee maker to cool completely before cleaning.
2. Wipe the exterior and parts of the coffee maker with a damp cloth or clean sponge.

Note: Do not use alcohol or solvent cleaner, do not immerse the machine in water to clean it.

3. Unscrew the coffee funnel and clean the coffee grounds from the filter.

In compliance with Directives: 2012/19/EU and 2015/863/EU on the restriction of the use of dangerous substances in electric and electronic equipment as well as their waste disposal. The symbol with the crossed dustbin shown on the package indicates that the product at the end of its service life shall be collected as separate waste. Therefore, any products that have reached the end of their useful life must be given to waste disposal centers specializing in separate collection of waste electrical and electronic equipment or given back to the retailer at the time of purchasing new similar equipment, on a one-for-one basis. The adequate separate collection for the subsequent start-up of the equipment sent to be recycled, treated, and disposed of in an environmentally compatible way contributes to preventing possible negative effects on the environment and health and optimizes the recycling and reuse of components making up the apparatus. Abusive disposal of the product by the user involves application of the administrative sanctions according to the laws.

Documents / Resources

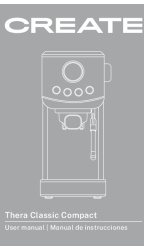	<p>CREATE Espresso Machine With Cold Coffee Function [pdf] User Manual Espresso Machine With Cold Coffee Function, Machine With Cold Coffee Function, Cold Coffee Function, Coffee Function, Function</p>
---	---

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.