

CREATE

CREATE Speaker
Table With
Subwoofer



CREATE Speaker Table With Subwoofer User Manual

[Home](#) » [CREATE](#) » CREATE Speaker Table With Subwoofer User Manual 

Contents

- [1 CREATE Speaker Table With Subwoofer](#)
- [2 SECURITY INSTRUCTIONS](#)
- [3 PARTS LIST](#)
- [4 HOW TO USE](#)
- [5 AUTO POWER OFF](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

CREATE

CREATE Speaker Table With Subwoofer



Speaker Table Bass

User manual

Thank you for choosing our product. Before using this appliance and to ensure its best use, please read the instructions carefully.

The safety measures listed here reduce the risk of fire, electric shock, and injury when followed correctly. Please keep the manual in a safe place for future reference, as well as the warranty, sales receipt, and box. If applicable, give these instructions to the future owner of the appliance. Always follow basic safety instructions and hazard prevention measures when using an electrical appliance. The manufacturer will not be responsible for any damage resulting from the user's failure to follow these instructions.

SECURITY INSTRUCTIONS


Before using any electrical appliance, basic safety precautions should always be observed.

- The maximum load weight of this product is 15 kg, do not place any object weighing more than 15 kg on this appliance.
- Do not use this product as a seat.
- Always use the original AC adapter and power cable, otherwise it may cause slow wireless charging and poor operation of the Bluetooth speaker. In extreme cases, an incompatible AC adapter could burn out.

PARTS LIST


1. Base with wireless charger
2. Control Panel
3. Drawer
4. Speaker
5. Paws
6. Auxiliary cable
7. Charging cable

8. Power adapter

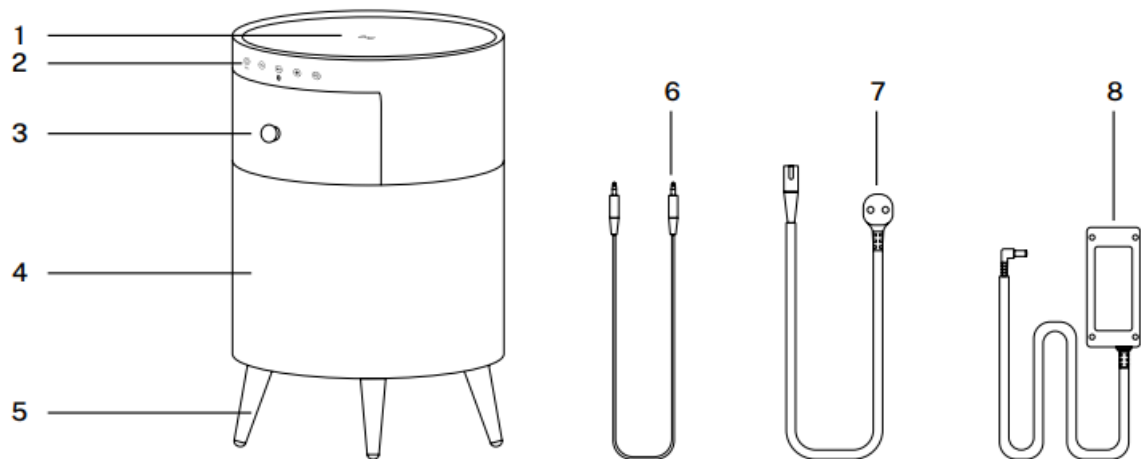


1. Power button/TWS
2. Lower volume
3. Play/pause/Bluetooth connection
4. Turn up the volume
5. EQ
6. USB port
7. Current input
8. Auxiliary input

 
FRONTAL

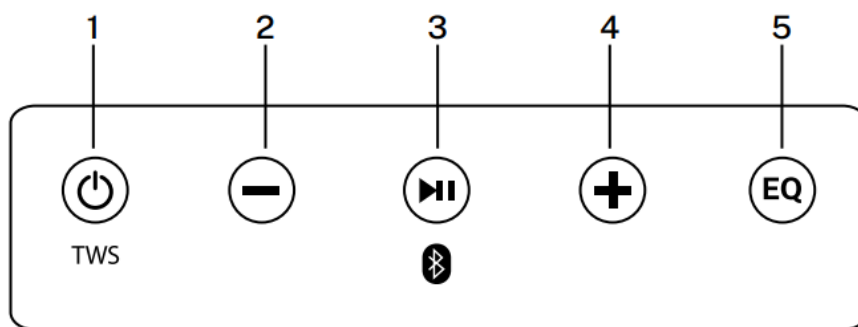

REAR

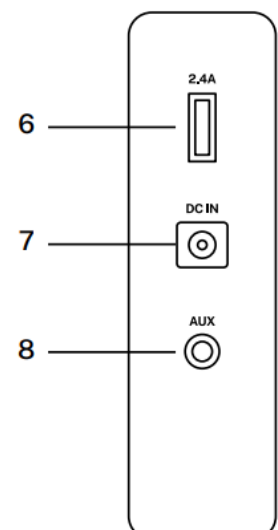 

FACILITY

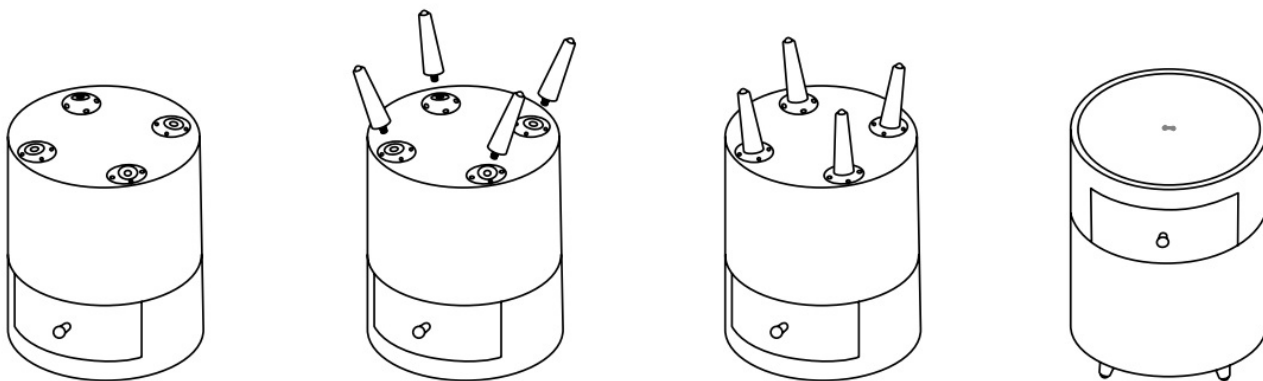



1. On a flat, smooth surface, carefully remove all components from the product box.
2. Place the main body of the table with the wooden top facing down on a flat and stable surface to place the legs of the product.
3. Take one of the legs and insert it into one of the fixed holes in the table. Turn clockwise to tighten.
4. Repeat the same step with all the remaining legs. Make sure all legs are properly tightened.
5. Carefully lift the table and turn it over, resting it on the legs.

HOW TO USE

ON OFF

Plug the AC adapter into the DC power socket of the speaker (make sure to use the original AC adapter that comes with the speaker), you will hear the voice of "Power on" from the speaker and the speaker will automatically start entering Bluetooth mode by default "Bluetooth, waiting for connection" ringing on your speaker. Once the device is turned on you can pair your device with the speaker.

Warning: Please use the original power adapter for charging, otherwise it may cause slow charging or unable to charge at all. In extreme cases, the adapter may burn out or cause another accident.



- Press and hold the power button , the speaker will turn on, you will hear "Power on" voice from the speaker and enter Bluetooth mode, "Bluetooth, waiting for connection" will sound again.
- Press and hold the power button , again, the speaker will turn off and you will hear the voice "Power off" from the speaker.

AUXILIARY INPUT

- Insert the auxiliary cable into the auxiliary input located on the rear panel of the table. The speaker will switch to auxiliary mode automatically and the green light will turn on. Bluetooth mode will be disabled.
- After taking out the auxiliary cable, the Bluetooth mode will be activated automatically and you will hear the voice of "Bluetooth, waiting for connection" or "Bluetooth".

BLUETOOTH CONNECTION AND PLAYBACK



- When the speaker is in Bluetooth mode, it will automatically switch to pairing status, the blue light will flash quickly and you can search your Bluetooth device for "SPEAKER-TABLE-BASS" for connection.

- The speaker will pair with your device via Bluetooth, the speaker will sound “Bluetooth is connected” after pairing, the blue light will keep on. If the Bluetooth connection fails, the blue light will flash quickly.
- While playing music after connecting with your device via Bluetooth, the speaker will stop if you briefly press the power/pause button , press again and the music will play again.
- When this speaker is connected with a device, if you press and hold the power/pause button , the speaker will turn off the connection with the paired device, the voice “Bluetooth disconnected, waiting for connection” will sound. You can then pair another device via Bluetooth.

EQ – POP / ROCK / MOVIE

- When the speaker is on it is in normal mode by default. The light will remain off.
- Press the button **EQ** and the speaker will enter POP mode and the red light will light up and make “POP” sound.
- Briefly press the button again **EQ**, the speaker will enter ROCK mode and the green light will illuminate and the word “ROCK” will sound on your speaker.
- Press the button again **EQ** and the speaker will enter “MOVIE” mode, the green and red light will keep on, emitting “MOVIE” sound.
- The speaker will enter normal mode by pressing the button once more and the word “Normal” will sound on your speaker.

VOLUME CONTROL

- Press the button  to increase the volume of your speaker and the white light will flash. (This speaker has 31 sound levels in total. When the speaker is turned on the default sound level is 1).
- When you reach the maximum volume of your speaker you will hear a voice message saying “Maximum volume”.
- Press the button  to decrease the volume and the white light will turn on.

USB CHARGING



- When the unit is turned on or connected with the power adapter, the USB port will be able to charge mobile devices.
- When the speaker is off, the USB port cannot charge any external devices.
- The USB port can charge mobile devices even when the unit is turned off, as long as the AC adapter is connected to a main power source that is turned on.

WIRELESS CHARGING

- If you have a mobile device with wireless charging capability, you can charge it by placing it on the wireless charging symbol displayed on the top of the speaker.
- Make sure the phone is within the charging area. Once charging starts, the charging signal will be displayed on the phone screen. You can remove your phone from the charging area at any time to finish the charging process.

- The wireless charger will charge compatible mobile devices even when the unit is turned off, as long as the table is connected to a main power source and is turned on.
- Some phone cases may inhibit the wireless charging function. It may be necessary to remove phone cases to improve wireless charging efficiency.

TWS FUNCTION

- Turn on the first and second speaker, double click power/TWS button  on one of the two speakers, they will enter device pairing mode, you will hear a beep and the orange light will flash quickly at the same time.
- After pairing the device, the orange light of the main speaker will keep on, the light of the secondary speaker will flash slowly.
- To disconnect the pairing of the two speakers, briefly press the power/TWS button  once, the speakers will be unpaired.
- When the speakers are successfully paired in Bluetooth mode, the two speakers can operate by inserting the auxiliary cable into the auxiliary jack on the rear panel of the main speaker. Both speakers will fail if you insert the auxiliary cable into the auxiliary jack of the second speaker.

Observation: While the speakers are set to TWS mode, the EQ function of both speakers can be adjusted by pressing one of their EQ buttons.


AUTO POWER OFF

- The speaker will automatically turn off if any of its functions are not used after 10 minutes.

In compliance with Directives: 2012/19/EU and 2015/863/EU on the restriction of the use of dangerous substances in electric and electronic equipment as well as their waste disposal. The symbol with the crossed dustbin shown on the package indicates that the product at the end of its service life shall be collected as separate waste. Therefore, any products that have reached the end of their useful life must be given to waste disposal centres specialising in separate collection of waste electrical and electronic equipment, or given back to the retailer at the time of purchasing new similar equipment, on a one for one basis. The adequate separate collection for the subsequent start-up of the equipment sent to be recycled, treated and disposed of in an environmentally compatible way contributes to preventing possible negative effects on the environment and health and optimises the recycling and reuse of components making up the apparatus. Abusive disposal of the product by the user involves application of the administrative sanctions according to the laws.



Documents / Resources

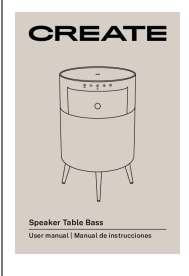 The image shows the cover of a user manual for the 'CREATE Speaker Table Bass'. At the top, the word 'CREATE' is written in a bold, sans-serif font. Below it is a line drawing of a cylindrical speaker table with four legs. At the bottom of the cover, the text 'Speaker Table Bass' is written, followed by 'User manual Manual de instrucciones' in a smaller font.	<p>CREATE Speaker Table With Subwoofer [pdf] User Manual</p> <p>Speaker Table With Subwoofer, Table With Subwoofer, With Subwoofer, Subwoofer</p>
--	---

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.