



# CREATE Toast Easy Toaster Maker Machine User Manual

[Home](#) » [CREATE](#) » CREATE Toast Easy Toaster Maker Machine User Manual 

## Contents

- [1 CREATE Toast Easy Toaster Maker Machine](#)
- [2 SECURITY INSTRUCTIONS](#)
- [3 Caution](#)
- [4 PARTS LIST](#)
- [5 BEFORE THE FIRST USE](#)
- [6 OPERATION INSTRUCTIONS](#)
- [7 CLEANING](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

# CREATE

## CREATE Toast Easy Toaster Maker Machine



Thank you for choosing our toaster. Before using the appliance, and to ensure the best use, carefully read these instructions. The safety precautions enclosed herein reduce the risk of death, injury and electrical shock when correctly adhered to. Keep the manual in a safe place for future reference, along with the completed warranty card, purchase receipt and package. If applicable, pass these instructions on to the next owner of the appliance. Always follow basic safety precautions and accident-prevention measures when using an electrical appliance. We assume no liability for customer failing to comply with these requirements.

### SECURITY INSTRUCTIONS

When using any electrical appliance, basic safety precautions should always be observed.

- Only plug this appliance to a 220-240V AC electrical wall outlet.
- Unplug the toaster when it is not in use. Allow the appliance to cool down and make sure it's unplugged before cleaning and maintenance.
- Do not use outdoors or for commercial purposes. This appliance is intended for household use only. Using the toaster for commercial purposes will void the warranty.
- Incorrectly operating the appliance can cause problems with the appliance and injury to the user.
- Place the toaster on a hard, flat, level surface. Do not place it on a soft surface such as a carpet. Avoid placing it where it may tip over during operation.
- When using this appliance, make sure there's enough room above and on all sides for air circulation. Do not operate the appliance if it's touching or if it's near curtains, clothing, towels or other flammable materials.
- This appliance is hot and produces steam during operation and retains heat for some time after being turned off. Always use oven mitts and handle with care to prevent burns as well as other injuries and fires.
- Do not place anything on top of the toaster during operation or while it is hot.
- Never attempt to dislodge food inside the toaster while it's still plugged in. Doing so could result in an electrical shock or fire.

- Do not insert any forks, knives or anything other than food in the toasting slot.
- Do not pull out the mains plug by tugging the cable.
- Never immerse the cord, plug or the main body of the toaster in water or other liquids. Should the appliance fall into water, immediately unplug it from the mains and have the appliance checked by an expert before using it again. Do not operate it with wet hands.
- Children should be supervised to ensure that they do not play with the appliance. Do not allow children to operate, clean or maintain the appliance.
- This appliance can be used by children and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Do not operate the appliance using an external timer or a separate remote control system.
- Do not pick up or operate the appliance if the power supply cord or the plug are damaged, or if the unit is malfunctioning or has been dropped or damaged in any way. In case of damage, contact the aftersales service. A damaged cord or plug must be exclusively replaced by the manufacturer or a qualified person in order to avoid injuries.
- Do not let the cord hang over the edge of a table or bench top. Do not let it come in contact with hot surfaces and do not place the appliance near open fires or any type of heat and sources of ignition.
- Operate the appliance on a flat, heat-resistant level surface in a tidy and well-lit area to prevent accidents.
- Never leave the appliance unattended during operation.
- Only use accessories recommended by the manufacturer.

## Caution

Do not toast:

1. Pastries with runny fillings or frosting.
2. Torn slices of bread.
3. Buttered bread or wrapped food
4. Small-sized bread, mini-baguettes, breadsticks, etc.

## PARTS LIST



1. Bread Carriage Lever

2. Browning Control Knob
3. Defrost button
4. Reheat button
5. Cancel button
6. Removable Crumb Tray

## **BEFORE THE FIRST USE**

1. Remove all packaging materials including those that may be inside the toasting slots or toasting lever slots.
2. Wipe the exterior with a damp cloth. Dry thoroughly. Do not use alcohol, abrasive cleaners or scourers.
3. Make sure the crumb tray is pushed all the way into the back and that the lever is in the uppermost position before plugging in the toaster's power cord.
4. Unwrap the power cord and plug into a 220-240V AC outlet.
5. Turn the browning control knob to the lightest setting.
6. Without inserting any food into the bread slots, push the bread lever all the way down until it locks. (The lever will not lock if the toaster is not plugged into a power source.) The first toasting process will preheat the new elements and burn off any dust which may have accumulated during storage or manufacturing. It is normal for this burn off to create an odour. Your toaster is now ready for use.

## **OPERATION INSTRUCTIONS**

Now you are ready to insert your food into the bread slots. Keep the following tips in mind when inserting your food:

- Most types of breads and pastries can be toasted, such as bagels, tea cakes, thickly sliced breads, English muffins, etc. Slices should not, however, be so thick as to jam the bread slots.
- When toasting two slices at a time, the slices should be of equal size and freshness to ensure even toasting.
- Place the bread in the centre of each slot.

Always remove all protective wrappings from your food before placing it into the toaster.

### **After you insert the food into the bread slots:**

1. Choose between the different functions. If no function is selected, Toast is the default setting.
2. Select the desired darkness setting by turning the Browning Control Knob.
3. Press the Bread Carriage Lever down until it locks.

The Auto-Adjusting Bread Guides will automatically center the food for even browning. After the desired level of darkness has been reached, the food will pop up automatically. The Bread Carriage Lever will return to its original position.

### **Warning**

To prevent a fire hazard, never place bread over the opening of the toaster, always place the bread into the slots.

### **NOTE:**

4. DO NOT change the Browning Control Knob selection during the toasting cycle. First press the CANCEL

- button; then turn the Browning Control Knob to adjust the browning level.
5. Carefully remove the toasted food from the bread slots.


**WARNING:**

Toasted food can be very hot. Handle with care. To interrupt toasting, press the CANCEL button.

**CLEANING**

Before cleaning unplug the appliance and allow it to cool down. Clean the outer surface with a damp cloth. Grasp the crumb tray by the edge and pull it out, remove the bread residue and push it back in. In compliance with Directives: 2012/19/EU and 2015/863/EU on the restriction of the use of dangerous substances in electric and electronic equipment as well as their waste disposal. The symbol with the crossed dustbin shown on the package indicates that the product at the end of its service life shall be collected as separate waste. Therefore, any products that have reached the end of their useful life must be given to waste disposal centres specialising in separate collection of waste electrical and electronic equipment, or given back to the retailer at the time of purchasing new similar equipment, on a one for one basis. The adequate separate collection for the subsequent start-up of the equipment sent to be recycled, treated and disposed of in an environmentally compatible way contributes to preventing possible negative effects on the environment and health and optimises the recycling and reuse of components making up the apparatus. Abusive disposal of the product by the user involves application of the administrative sanctions according to the laws.

**Documents / Resources**

	<p><a href="#">CREATE Toast Easy Toaster Maker Machine</a> [pdf] User Manual Toast Easy Toaster Maker Machine</p>
--	---