

**Contents** [ [hide](#) ]

- [1 CREATIVE F18 Rotation Keyboard Case](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Product Parameter](#)
- [5 Wireless Connection](#)
- [6 Charge the keyboard](#)
- [7 Keyboard indicator](#)
- [8 Instructions for key operation](#)
- [9 FCC Statement](#)
- [10 FAQ](#)
- [11 Documents / Resources](#)
  - [11.1 References](#)

# CREATIVE

## CREATIVE F18 Rotation Keyboard Case



## Product Information

### Specifications:

- **Compliance:** Part 15 of FCC Rules
- **RF Exposure:** Meets general RF exposure requirements
- **Usage:** Portable exposure condition without restriction

## Product Usage Instructions

### Compliance with FCC Rules:

This device complies with part 15 of the FCC Rules. It is designed to operate without causing harmful interference. Please ensure that the device is used in accordance with these regulations to maintain compliance.

### RF Exposure Information:

The device has been evaluated to meet general RF exposure requirements. Users can use the device in portable exposure conditions without any restrictions. It is important to follow safety guidelines and maintain a safe distance while using the device.

Thank you for purchasing and using this product. In order to bring you a better experience, please read the manual carefully and keep it for future reference.

## Product Parameter

- Charging port: Type-C
- Operating current: <10mA
- Standby time:  $\geq 30$ days
- Connection: Bluetooth 5.2
- Charging time: <2h

## Wireless Connection

1. Install the iPad into the protective case and turn on the keyboard.
2. Toggle the switch on the right side of the keyboard to "ON" The power indicator (red light) will turn on for 1 second and then turn off, while the pairing indicator (blue light)

will flash.


3. Open the Settings app on your iPad.
4. Tap Bluetooth so that it's "ON" or green.
5. Find and tap "Wireless Keyboard" under "Other Devices" and tap "Pair" in the pop-up window. The blue light will stay on after successfully pairing.



1. If the keyboard is fully charged but the Bluetooth name of "Wireless Keyboard" cannot be searched normally by the Bluetooth of the iPad, please press and hold the key combination (Fn+ctrl+R) for 3 seconds to reset the Bluetooth settings of the keyboard, and then repeat the Bluetooth connection steps above.
2. The keyboard will enter sleep mode after 10 minutes of inactivity, and the Bluetooth will be disconnected at this time. Tapping any key on the keyboard can reconnect them automatically.
3. After pairing the keyboard with iPad for the first time, you can find the keyboard under My Devices in Settings > Bluetooth.
4. To disconnect the Keyboard or ignore it, tap the information button ⓘ next to Wireless Keyboard.
5. The most unknown causes of impaired use can be resolved by restarting the keyboard or tablet.

## Charge the keyboard

To charge the Keyboard, you can connect the USB-C cable to the USB-C port on the right side of the Keyboard. It usually takes about two hours for the keyboard to be fully charged. The charging indicator will change from red to green when the keyboard is fully charged.

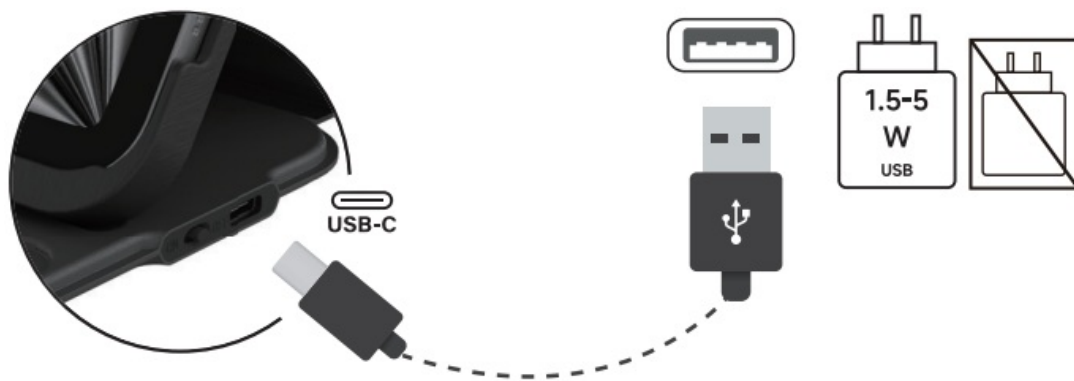





## Keyboard indicator

1. Low battery state: the red light flashes.
2. Charging: the red light is on.
3. Fully charged: the green light stays on.
4. Requesting pairing: blue light flashes.
5. When in uppercase, the white light stays on; when in lowercase, the white light is off.

## Instructions for key operation

Combination multifunctional keys are usually used in conjunction with Shift, Ctrl and In

keys. Taking the  button as an example:

- Normal press:  = 5
- Combination key:  +  = %

## Warning:

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the

user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Important:** Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

## FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

**RF Exposure Information**


The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

**FAQ**

**Q: Is there a specific distance recommended for safe usage in portable exposure conditions?**


**A:** While there is no specific distance mentioned, it is advisable to maintain a reasonable distance between the device and your body to minimize any potential risks associated with RF exposure.


**Documents / Resources**

	<p><a href="#">CREATIVE F18 Rotation Keyboard Case [pdf]</a> User Manual</p> <p>F18, F18 Rotation Keyboard Case, Rotation Keyboard Case, Keyboard Case, Case</p>
---	--

**References**

- [User Manual](#)

 Case, Creative, F18, F18 Rotation Keyboard Case, Keyboard Case, Rotation Keyboard

 Creative Case

**Leave a comment**

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.