



## crest CRFPL Smart Fingerprint Padlock User Manual

[Home](#) » [CREST](#) » crest CRFPL Smart Fingerprint Padlock User Manual 


crest CRFPL Smart Fingerprint Padlock User Manual



## Contents

- [1 Know your Lock](#)
- [2 Product Specifications](#)
- [3 Adding your Fingerprints](#)
- [4 Restore Factory Settings](#)
- [5 Charging Prompt](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

## Know your Lock

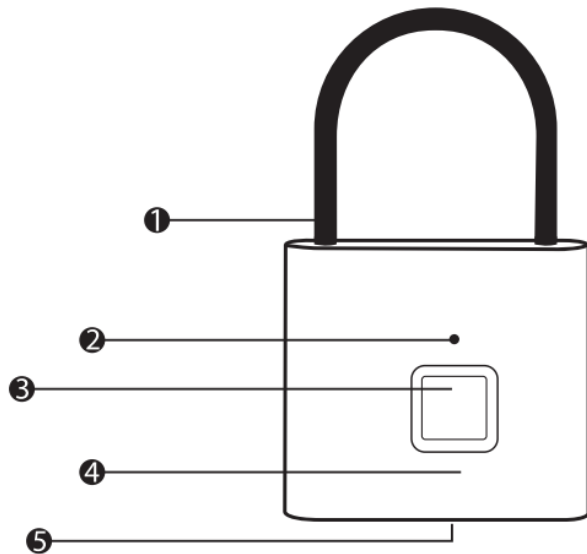

- 1. Lock Shackle
- 2. LED Indicators
- 3. Fingerprint Reader
- 4. Lock Body
- 5. Micro-USB Charging Port

## Product Specifications

Unlock Features: Fingerprint  
Fingerprint Storage: 10 Fingerprints  
Charging Type: Micro-USB  
Emergency Unlock: yes  
Battery Type: 150mAh Lithium Battery  
Voltage Input: 5V DC  
Product Size: 76 x 46 x 13mm  
IP Rating: IPX2  
Working Temperature: -10°C – 50°C

Before using for the first time, ensure the lock is fully charged

## Adding your Fingerprints

**Register Two Fingerprints for the First Time:**

(2 Fingerprint sets are to be set up on the initial scanning set up)

1. Unlock the lock with the fingerprint you want registered and hold the finger in place until the LED turns solid blue.
2. With the same finger press and release the fingerprint scanner until the LED turns green. This could take up to 15 attempts to capture a strong fingerprint scan.

#### **Register more Fingerprints:**

1. Unlock the lock and keep your finger on the scanner until the LED turns blue. With a different finger press and release the fingerprint scanner until the LED turns green. This could take up to 15 attempts to capture a strong fingerprint scan.

#### **Back-Up Unlocking Code:**

1. After setting the fingerprint, unlock the lock and don't release your finger until the LED turns white. Release your finger and the LED will turn green.
2. With the LED green, begin setting the code. Tap the scanner the amount of times you wish to have the code set for the green LED. Once completed the LED will turn blue. Now tap the scanner the amount of times you wish to have the code set for the blue LED. Once completed the LED will turn off.

This will be the reset code to reset back to the display/factory settings This can also act as an emergency unlock for people without a fingerprint that has been previously stored.

**Note:** Ensure this code is remembered for this feature to be used.

#### **Restore Factory Settings**

1. Unlock the lock and don't release your finger until the LED turns red. Once the LED is red the lock is reset to the factory/display settings.

#### **Charging Prompt**

1. When the fingerprint is unlocked the red LED flashes continuously indicating that the voltage is low and requires charging.
2. When charging, the LED will stay red. Once fully charged the LED will turn off.

#### **Warning on Water Resistance:**

Ensure the lock is not submerged in liquid. A Product with an IPX2 Rating is protected against vertically dripping water when tilted at a 15-degree angle from vertical.

Proudly brought to you by:




PO Box 5658 Brendale  
QLD Australia 4500

Customer Support  
1800 812 261  
[www.crest.com.au](http://www.crest.com.au)  
**AUSTRALIAN OWNED**



**Documents / Resources**

	<p><a href="#">crest CRFPL Smart Fingerprint Padlock</a> [pdf] User Manual CRFPL, Smart Fingerprint Padlock, CRFPL Smart Fingerprint Padlock, Smart Lock</p>
--	--