


CRESTRON FT2A-PWR-JP-1-BASIC FlipTop AC Power Outlet Module User Manual

Home » CRESTRON » CRESTRON FT2A-PWR-JP-1-BASIC FlipTop AC Power Outlet Module User Manual

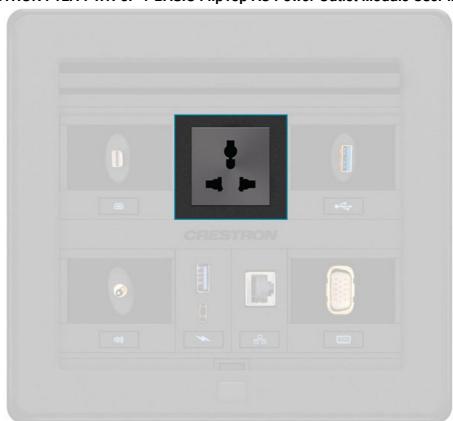

CRESTRON FT2A-PWR-JP-1-BASIC FlipTop AC Power Outlet Module User Manual

The original language version of this document is U.S. English. All other languages are a translation of the original document.

Regulatory Model: M201907002

Crestron product development software is licensed to Crestron dealers and Crestron Service Providers (CSPs) under a limited nonexclusive, nontransferable Software Development Tools License Agreement. Crestron product operating system software is licensed to Crestron dealers, CSPs, and end-users under a separate End-User

License Agreement. Both of these Agreements can be found on the Crestron website at www.crestron.com/legal/software license agreement.

The product warranty can be found at www.crestron.com/warranty.

The specific patents that cover Crestron products are listed online at www.crestron.com/legal/patents.

Certain Crestron products contain open source software. For specific information, please visit www.crestron.com/opensource.

Crestron, the Crestron logo, and FlipTop are either trademarks or registered trademarks of Crestron Electronics, Inc.in the United States and/or other countries. NEMA is either a trademark or registered trademark of the National Electrical Manufacturers Association in the United States and/or other countries. Other trademarks, registered trademarks, and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Crestron disclaims any proprietary interest in the marks and names of others. Crestron is not responsible for errors intypography or photography.

©2023 Crestron Electronics, Inc.

Contents

- 1 Overview
- 2 Specifications
- 3 Dimension Drawings
- 4 Installation
- 5 In the Box
- 6 Install the Module
- 7 Operate the Module Above the Table
- 8 Documents / Resources
 - 8.1 References

Overview

The Crestron FT2A-PWR-JP-1-BASIC series AC power outlet module is designed for use with a Crestron FT2 Series FlipTop™ cable management system. The module provides one convenient receptacle to power laptops and other AC powered devices at the table. A single 2.44 m (8 ft) power cord connects the AC power outlet module to an AC power source.

The FT2A-PWR-JP-1-BASIC AC power outlet module is rated for 10A at 125VAC, 50/60 Hz. The module is suitable for use in Japan where Type B power outlets are used. The FT2A-PWR-JP-1-BASIC occupies two consecutive module slots within the FlipTop assembly.

Features include:

- Adds oneAC power outlet to an FT2 Series FlipTop™ cable management system
- Outlet sits nearly flush at the top of the FlipTop assembly for easy access
- Suitable for use in Japan where Type B power outlets are used
- Rated 10A at 125VAC, 50/60 Hz
- Simple drop-in modular design
- Occupies two consecutive module slots within the FlipTop assembly


Specifications

Product specifications for the FT2A-PWR-JP-1-BASIC.

Product Specifications

Power Rating	10A at 125VAC, 50/60 Hz		
Receptacles and Plugs			
Outlet Above Table	(1) NEMA 5-15R grounded AC power receptacle, Commerce Dept. Type B		
Outlet Below Table	None		
Main Power Plug	(1) 2.44 m (8 ft) attached cable with NEMA 5-15P grounded AC power plug		
Environmental			
Temperature	32° to 113°F (0° to 45°C)		
Humidity	10% to 90% RH (non-condensing)		
Construction			
Composition	Precision fit plastic drop-in module, black		
Mounting	Requires two consecutive module slots within the FlipTop chassis		
Compliance			
Regulator Model: M201907002			
	:		


Dimension Drawings

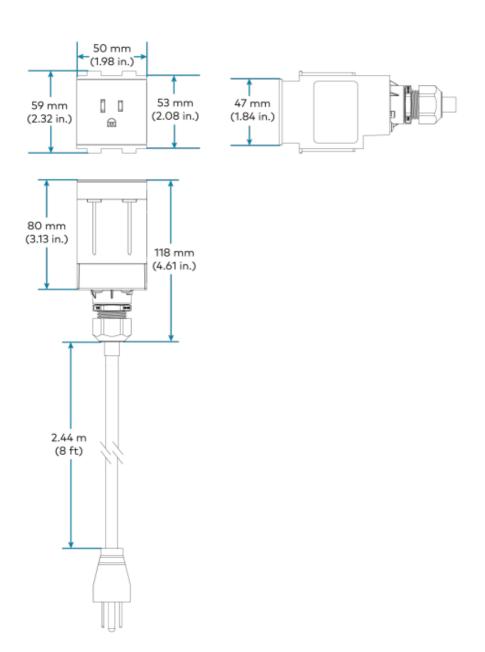

Installation

The FT2A-PWR-JP-1-BASIC is designed for installation in Crestron FT2 FlipTop™ assemblies. The power outlet module provides one NEMA AC power outlet on top of the table. An 2.44 m (8 ft) three-prong power cord is fixed to the bottom of the module. The power outlet module is PSE listed and rated for 10A (total) at 125V, 50/60 Hz.

Module Model	Module Slots Required	Outlets on Top of the T able	Outlets Beneath the Ta ble
FT2A-PWR-JP-1-BASIC	2	1	None

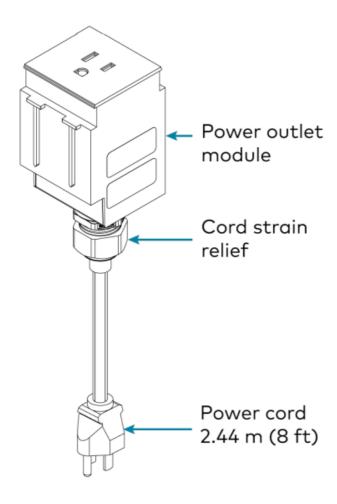

In the Box


Qty	Description
1	FT2A-PWR-JP-1-BASIC, FlipTop™ AC Power Outlet Module, Single, JP NEMA® 5, Type B

Install the Module


Install the power outlet module into the FT2 FlipTop assembly. This procedure assumes the power outlet module is being added to an FT2 FlipTop assembly with modules already installed. If the bezel and locking bars have not been installed on the FT2 FlipTop assembly, skip to step 6. To install the power outlet module:

NOTE: For ease of installation, install power outlet modules before installing any other module.

- 1. Tap the lid retraction button to retract the one-touch lid, which descends into the FT2 FlipTop assembly. If the assembly has two lids, open both.
- 2. Remove and retain the magnetic bezel from the FT2 FlipTop assembly by grasping the inside of the bezel and firmly pulling it up and away from the assembly until the magnetic hold is broken.
- 3. Using a manual torque screwdriver, unscrew and remove and retain the two locking bars on either side of the module row where the power outlet module is to be installed.

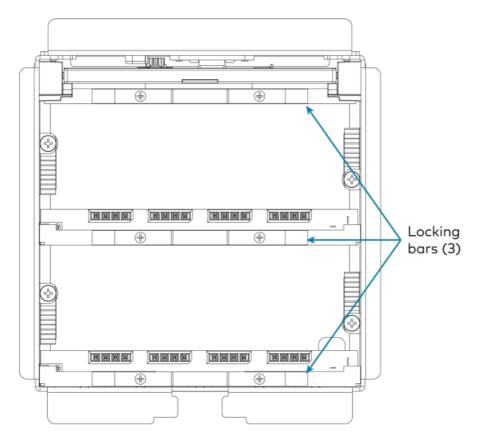


- 4. Lift and remove any module being replaced by a power outlet module.
- 5. Insert the power cable of the power outlet module through the empty module slots.
- 6. Orient the power outlet module as shown in the following illustration and slide it down into the appropriate module slots. Use the guide ribs on the front and rear of the module to help position it in the assembly.

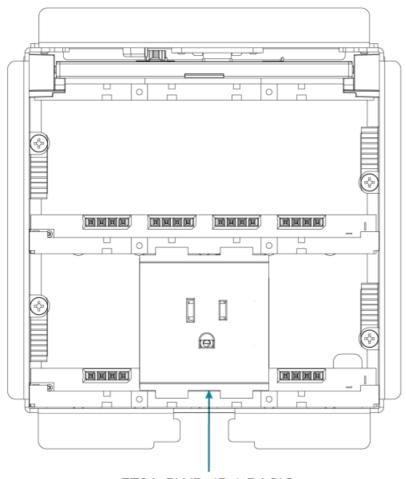

FT2A-PWR-JP-1-BASIC

- 7. Add any other modules back into the assembly and confirm that all modules are level with their surroundings.
- 8. Place the locking bars (removed in step 3) into position so that the screws on either side engage the screw holes in the assembly.
- 9. Using a manual torque screwdriver set to its lowest possible setting, hand tighten the locking bar screws until the locking bars are secured to the FT2 FlipTop assembly.
- 10. Place the bezel (removed in step 2) onto the FT2 FlipTop assembly so that the retractable lid fits inside the bezel opening. The bezel is held in place using magnets.

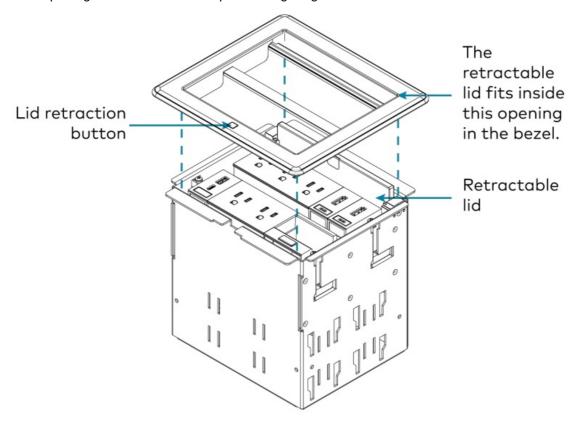

11. Below the table, plug the power outlet module's cord into a power source

Operate the Module Above the Table

To operate the power outlet module:

- 1. Tap the lid retraction button to retract the one-touch lid, which disappears into the FT2 FlipTop assembly.
- 2. Plug a device into the outlet on the power outlet module.
- 3. Confirm that the power indicator on the device shows that the device is receiving power

Costumer Support

Crestron Electronics, Inc.

15 Volvo Drive, Rockleigh, NJ 07647

Tel: 888.CRESTRON Fax: 201.767.7656 www.crestron.com

Product Manual
— Doc. 9401A
07/17/23
Specifications subject to

change without notice.

Documents / Resources



<u>CRESTRON FT2A-PWR-JP-1-BASIC FlipTop AC Power Outlet Module</u> [pdf] User Manual FT2A-PWR-JP-1-BASIC, FT2A-PWR-JP-1-BASIC FlipTop AC Power Outlet Module, FlipTop AC Power Outlet Module, AC Power Outlet Module, Outlet Module

References

- Control Systems for Home Automation, Campus & Building Control by Crestron Electronics

 [Crestron Electronics, Inc.]
- Patents [Crestron Electronics, Inc.]
- Open Source Software [Crestron Electronics, Inc.]
- Standard Terms & Conditions and Warranties [Crestron Electronics, Inc.]
- Patents [Crestron Electronics, Inc.]
- Software License Agreements (Embedded Software and Software Tools) [Crestron Electronics, Inc.]
- Open Source Software [Crestron Electronics, Inc.]
- Standard Terms & Conditions and Warranties [Crestron Electronics, Inc.]

Manuals+,