


CRESTRON Ultimate 6.5 in. 2-Way All Weather In-Ceiling Speaker User Guide

[Home](#) » [CRESTRON](#) » CRESTRON Ultimate 6.5 in. 2-Way All Weather In-Ceiling Speaker User Guide 



ULTIMATE IC6-AW-W-T-EACH

Ultimate 6.5 in. 2-Way All Weather In-Ceiling Speaker, White Textured, Single

The Crestron® Ultimate speaker ULTIMATE IC6-AW-W-T-EACH made by Origin Acoustics delivers the pinnacle of performance for demanding residential installations. Select materials, top-shelf components, and a high-end appearance underscore the design behind each model. The result is a complete line of in-ceiling speakers suitable for installation in luxury residential applications, restaurants, retail spaces, universities, and office buildings.

Contents

- [1 In the Box](#)
- [2 Installation](#)
- [3 Install the Bayonet Ring](#)
- [4 Additional Information](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)



In the Box

1 ULTIMATE IC6-AW-W-T-EACH

Additional Items

 
- 1 Bayonet Ring
- 1 Cutout Template
- 1 Grille

Prepare the Mounting Hole


Before finalizing the speaker location, check to make sure there are no fixtures, pipes, air ducts, joists, or other possible obstructions. If applicable, use a good-quality stud finder to locate lists. If there are no obstructions, use the supplied template to trace an outline of the mounting hole.

To identify obstructions, do the following:

- Use a drywall saw to cut a small hole at a 45° angle. An angle cut simplifies repair since the removed piece can be reinserted to help plug the hole.

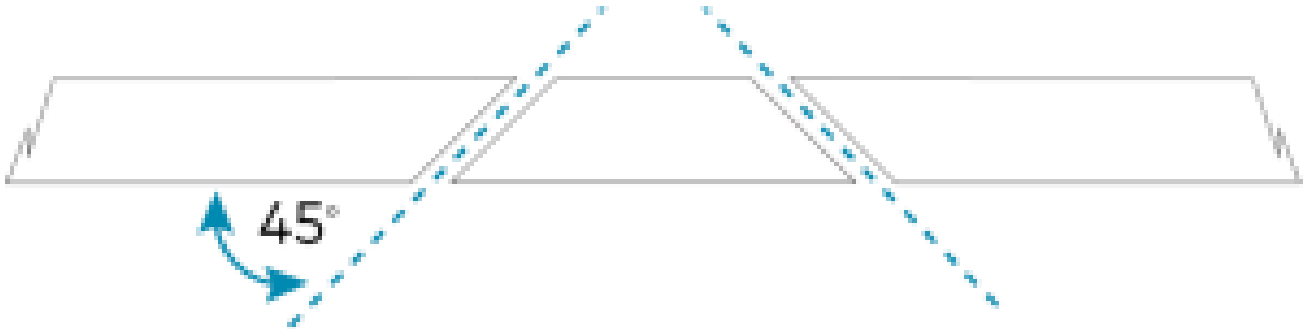

- Use a piece of stiff wire, bent into an L shape, with one end long enough to explore an area equal to the size of the speaker. Insert the wire into the hole, make sure it rotates freely in a complete circle, and that there is sufficient depth. If there are no obstructions, use the supplied template to trace outlines of the mounting hole on the ceiling. Cut the final mounting hole at a 90° angle to the ceiling.

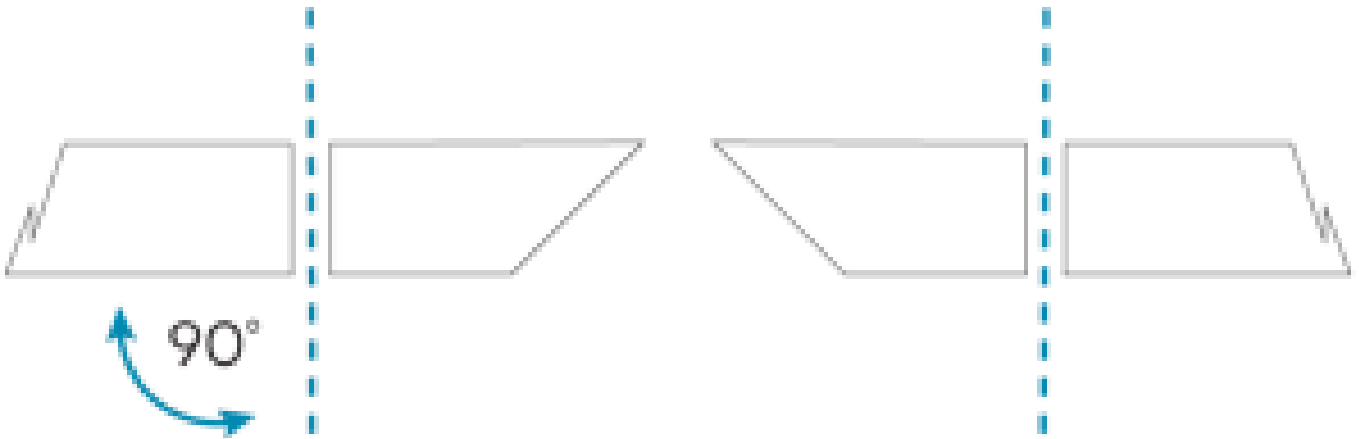 

Paint the Speaker Grille

Painting the speaker grille should be done prior to mounting.

1. Carefully remove the thin cloth on the underside of the grille, and set it aside for re-installation.
2. Lightly spray-paint the front of the grille from a distance. Be careful not to plug any of the holes.
3. Once the paint is dry, put the cloth back on the underside of the grille.

Install the Bayonet Ring

The bayonet ring features a metal lock to ensure the correct installation of the loudspeaker. Out of the box, the lock will be in its closed position.

 
1. Open the lock tab to its unlocked position to remove the speaker from the ring.
2. Push the metal release tabs on the inside of the rails and pull the clips to the top of the rails.

NOTE: Out of the box, the clips are positioned at top of the rails.

3. Insert the bayonet ring into the hole in the ceiling by gently bending the rails inward.

NOTES:

- Ensure the bayonet ring rails are properly bent and inserted into the ceiling hole to avoid damaging the bayonet ring rails.
 - The length of the bayonet ring rails can be adjusted by breaking them off to match the depth of the mounting hole. Ensure the clips are tightened before you do so.
4. Reach inside the bayonet ring and pull the clips down so that the bayonet ring is firmly in place, but not too tight. If the bayonet ring needs to be removed, reach inside and push the release tabs to reset the clips and the bayonet ring can now be taken out.

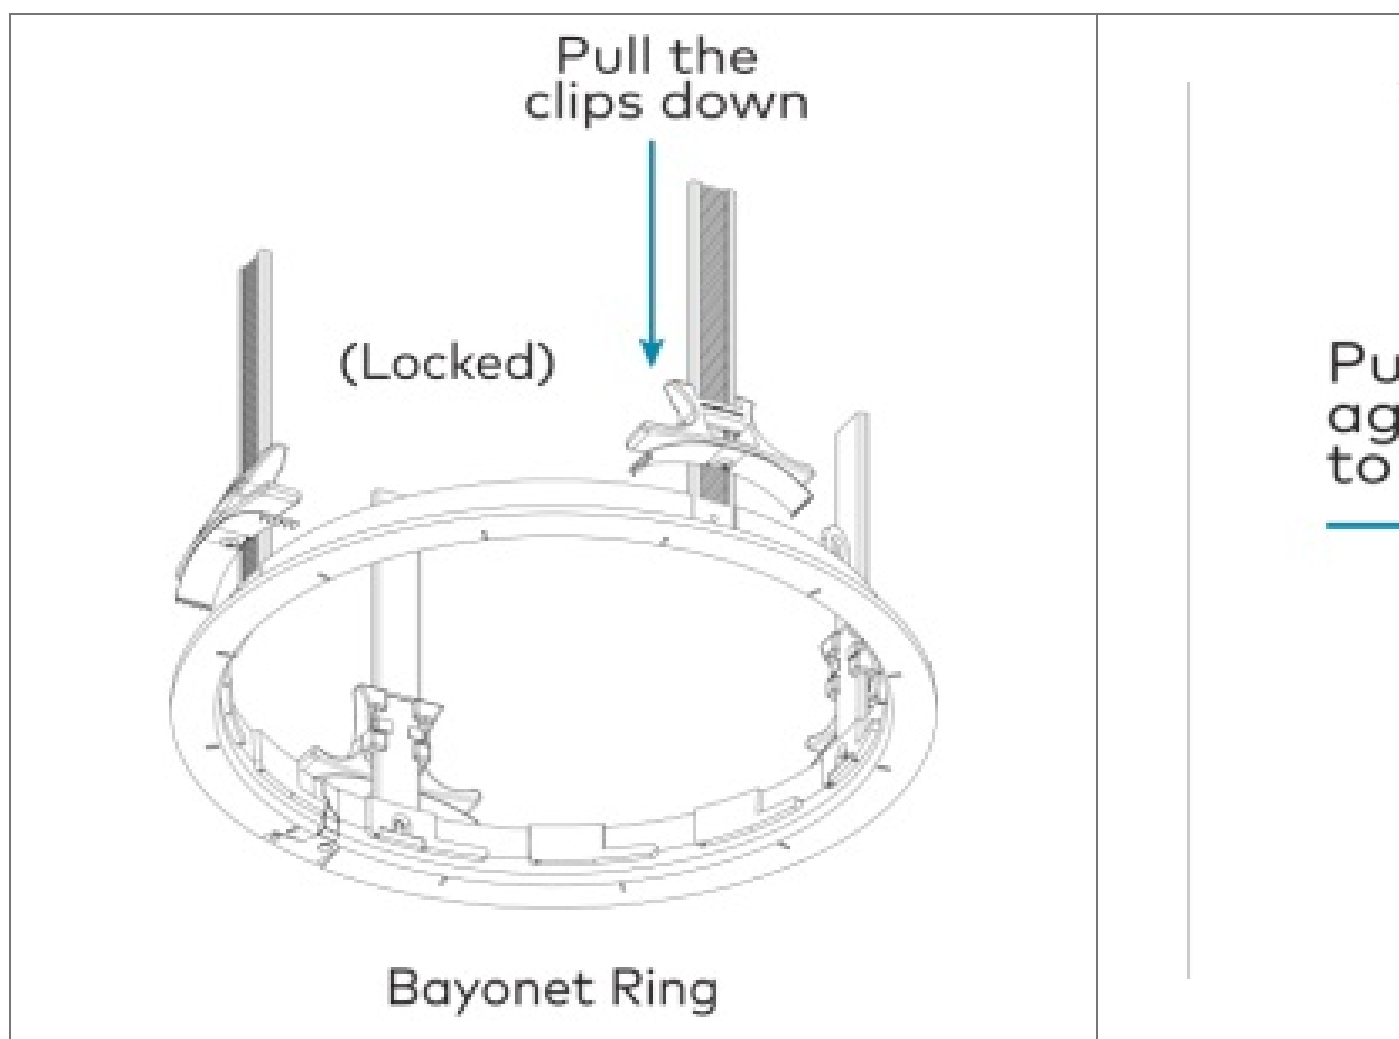

Install the Speaker Cable

Run the speaker cable (not included) from the audio source to the speaker location, observing all appropriate local codes. Strip the ends of the speaker cable approximately 0.25 in. to 0.50 in. (~6 mm to ~12 mm) and twist the strands.

 
Connect the Speaker Cable

Connect the speaker cable (not included) to the spring terminals by pressing the top of the terminals down and inserting the exposed strands into the hole. Make sure that the positive wire is attached to the red connection, and the negative wire is attached to the black connection.

Mount/Remove the Speaker


1. Fit the speaker into the bayonet ring. Then twist the speaker about 15 degrees clockwise into place. When the speaker is properly seated, the indicators on the ring and the speaker line up.

Indicators on the ring and the speaker lined up

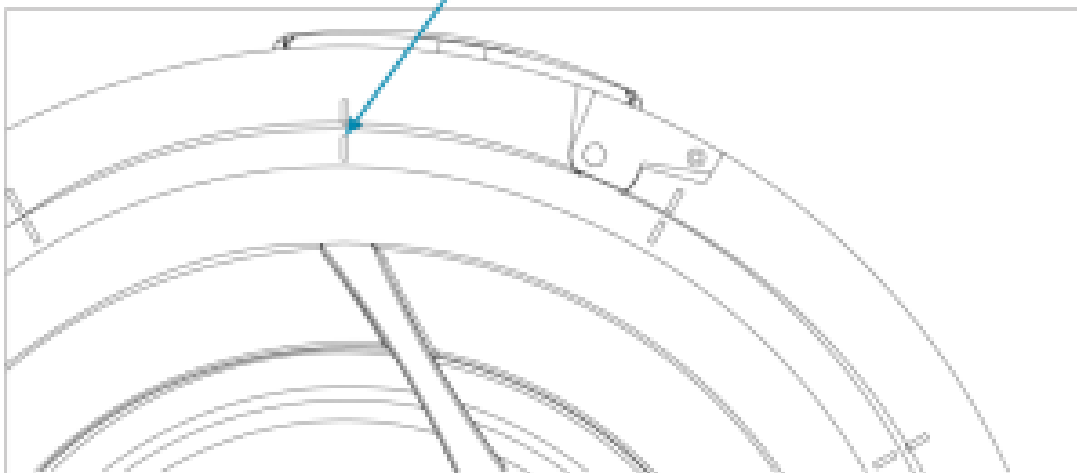


NOTE: The indicators must line up to ensure the speaker is properly seated. The speaker must be properly seated, or the metal lock tab will not lock.

 2. Push the metal lock tab to its locked (closed) position (see Figure A).

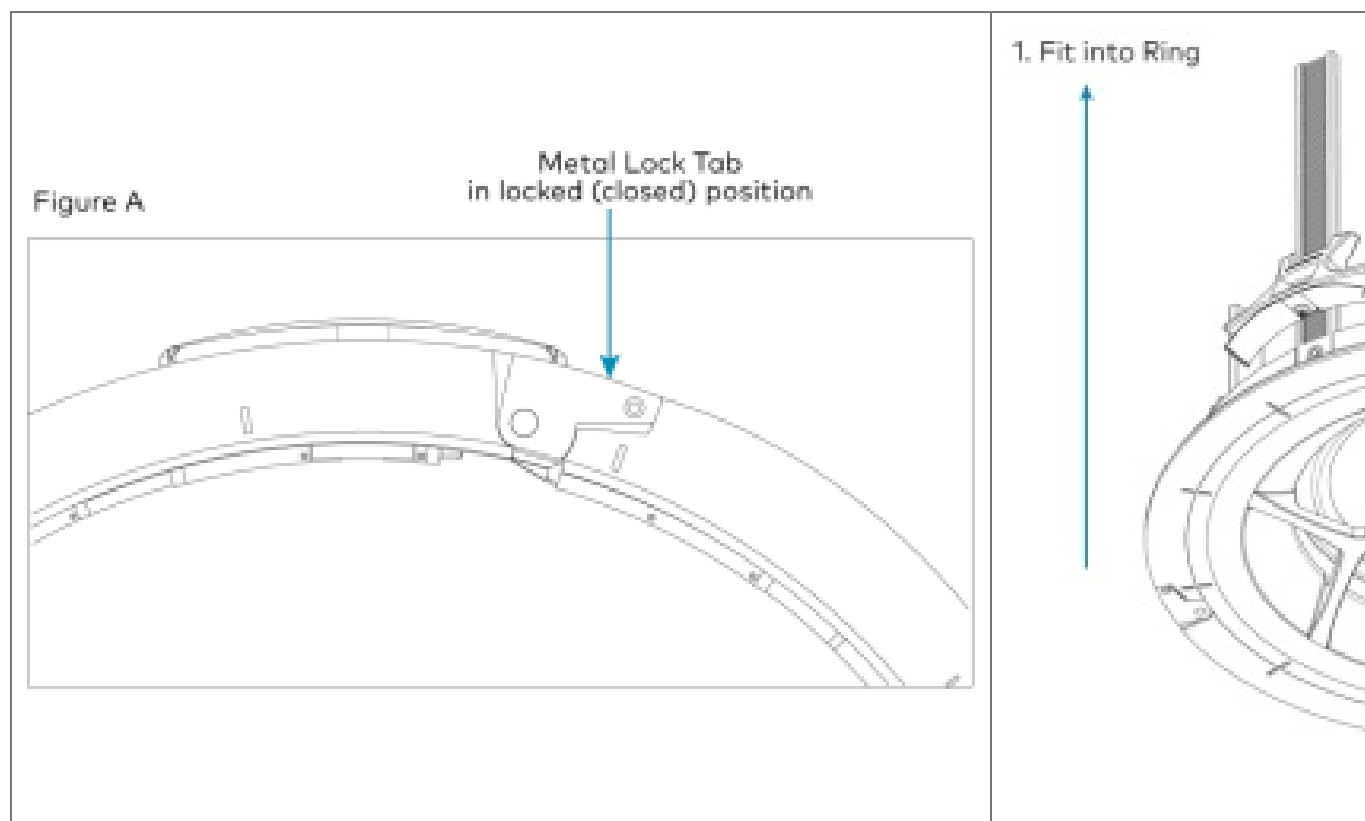

 3. To uninstall the speaker, pull the metal lock tab to its unlocked (open) position (see Figure B) and twist the speaker counterclockwise.

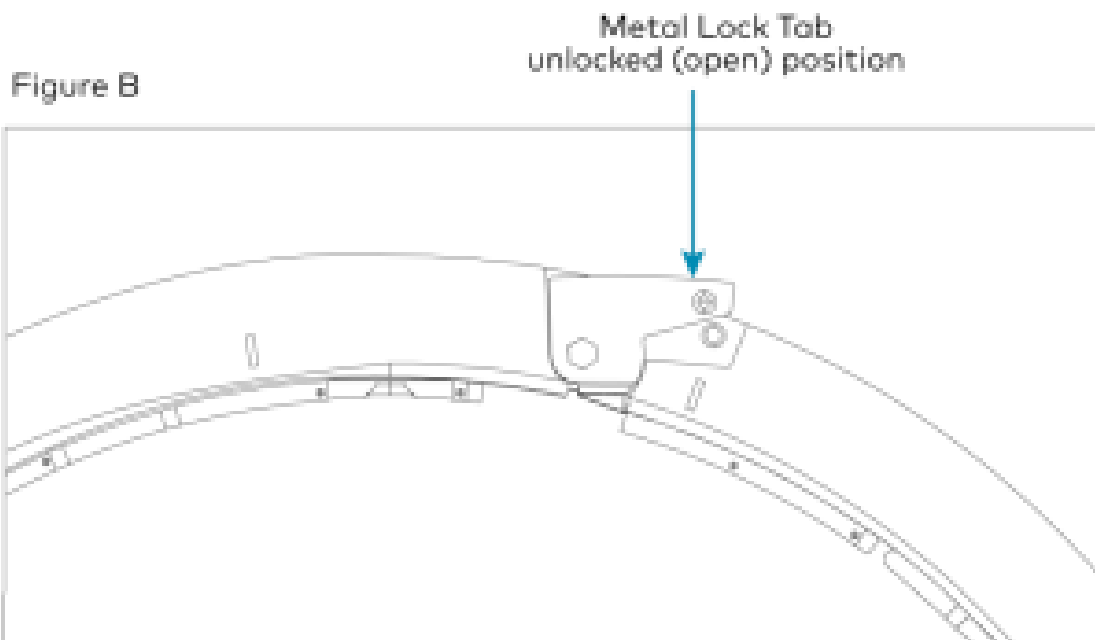

Additional Information

Original Instructions

The U.S. English version of this document is the original instructions. All other languages are a translation of the original instructions.

Regulatory Model: M202046006

Crestron product development software is licensed to Crestron dealers and Crestron Service Providers (CSPs) under a limited nonexclusive, nontransferable Software Development Tools License Agreement. Crestron product operating system software is licensed to Crestron dealers, CSPs, and end-users under a separate End-User License Agreement. Both of these Agreements can be found on the Crestron website at www.crestron.com/legal/software_license_agreement. The product warranty can be found at www.crestron.com/warranty. The specific patents that cover Crestron products are listed at www.crestron.com/legal/patents. Certain Crestron products contain open-source software. For specific information, visit www.crestron.com/opensource. Crestron and the Crestron logo are either trademarks or registered trademarks of Crestron Electronics, Inc. in the United States and/or other countries. Origin Acoustics is either a trademark or registered trademark of Origin Acoustics, Inc. in the United States and/or other countries. Other trademarks, registered trademarks, and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Crestron disclaims any proprietary interest in the marks and names of others. Crestron is not responsible for errors in typography or photography.

©2021 Crestron Electronics, Inc.

Doc. 9035A

06/30/21



Visit the Product Page


Scan the QR code to visit the product page.

ULTIMATE IC6-AW-W-T-EACH



<https://www.crestron.com/model/6511844>

Documents / Resources

| | |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>CRESTRON Ultimate 6.5 in. 2-Way All Weather In-Ceiling Speaker [pdf] User Guide</p> <p>CRESTRON, Ultimate, 6.5 in., 2-Way, All Weather, In-Ceiling, Speaker, ULTIMATE IC6-AW-W-T-EACH, White, Textured, Single</p> |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

Manuals+.