



# Cricut JCTR201C Joy Xtra Cutting Machine User Guide

[Home](#) » [Cricut](#) » Cricut JCTR201C Joy Xtra Cutting Machine User Guide 

## Contents

- [1 Cricut JCTR201C Joy Xtra Cutting Machine](#)
- [2 Important Safety Instructions](#)
- [3 Get to know your Cricut Joy Xtra™](#)
- [4 Indicator Lights](#)
- [5 Included](#)
- [6 Change tool](#)
- [7 Important safety instructions](#)
- [8 Specifications](#)
- [9 FAQ](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)
- [11 Related Posts](#)

**cricut**joyxtra™

## Cricut JCTR201C Joy Xtra Cutting Machine



## Specifications

- **Model:** JCTR201C
- **Languages:** English (EN)

### Get to know your Cricut Joy Xtra™

The Cricut Joy Xtra™ is a versatile crafting machine that allows you to create unique projects. It comes with the following features:

- **Tool Clamp:** Used to hold and secure different tools for various crafting tasks.
- **Material Guides:** Help align and position materials correctly on the machine mat.
- **Indicator Light:** Provides visual feedback on the machine's status and operations.

### Important Safety Instructions

Please read and follow these safety instructions carefully to ensure safe and proper use of the Cricut Joy Xtra™:








- The machine is intended to be operated by adults only. It is not suitable for children 12 years or younger. Always supervise children around the machine.
- Use the machine only for its intended crafting purpose.
- The machine is designed for indoor use only in dry locations. Do not use it in or near water, and do not immerse it in any liquid.
- The machine should not be used by individuals with reduced physical, sensory, or cognitive capabilities unless they are supervised by someone familiar with the safe operation of the machine.
- Always disconnect the electrical power by unplugging the machine before servicing or cleaning.
- Clean the machine using a soft cloth dampened with glass cleaner or water. Do not use flammable liquids or solvents such as acetone or nail polish remover, as they can damage the machine's surfaces.
- Always unplug the machine before replacing the blade. Blades are extremely sharp and should be handled with caution. Keep blades and other small parts away from children as they are choking hazards.
- Do not open, modify, or tamper with the machine.
- Do not operate the machine if it or the cord is damaged. Contact Cricut Member Care for service.
- Use only Cricut-approved power adapters and avoid pulling on the cord to disconnect the machine from the electrical outlet.
- Ensure that the power cord is positioned safely to prevent tripping or unintentional pulling.
- Place the machine on a strong, flat, level, and stable surface with enough space in the front and back to allow the machine mat to move freely.
- Avoid placing fingers or other objects in the machine while it is connected to electrical power, powered on, or during operations.

### Get to know your Cricut Joy Xtra™

1. Tool Clamp
2. Material Guides
3. Indicator Light



## Indicator Lights

-  Solid Ready to use
-  50% Brightness Idle
-  Slow Pulse Searching for Bluetooth® connection
-  Fast Pulse Update in progress
-  Flash See the Cricut app for directions
-  Red Error
-  Off No power source

## Included

- Cricut Joy Xtra Smart Cutting Machine
- Blade + Housing
- Cricut Joy Fine Point Pen (0.4 mm)
- Welcome Card
- Power Adapter & Cord
- Free Trial Membership to Cricut Access™ (New Subscribers Only)
- 50 Ready-To-Make Projects Online
- Materials For Practice Cut
- Bonus Materials

## How to power on




Before operating the machine, read the enclosed Important Safety Instructions.

- Connect the included power adapter to the machine
- Plug the other end only into a compatible wall outlet
- Connect the machine to a compatible device via Bluetooth®
- Activate the machine at [cricut.com/setup](https://cricut.com/setup)

Use caution, and follow instructions when replacing the blade. For instructions, see blade packaging or [help.cricut.com/blades](https://help.cricut.com/blades)



## Change tool

1. Open Tool Clamp (1), and remove the tool.
2. Firmly seat new tool.
3. Close clamp.

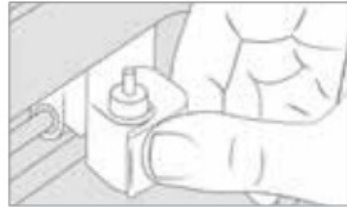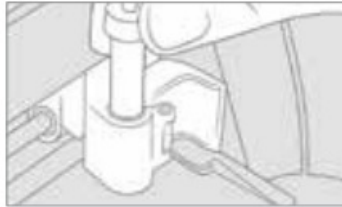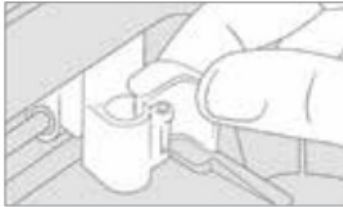

## Load machine mat with material

1. Remove protective clear cover.
2. From the top left corner, align the material onto the mat.
3. When prompted, insert mat between Material Guides (2).

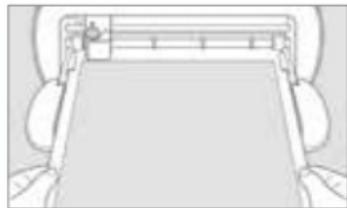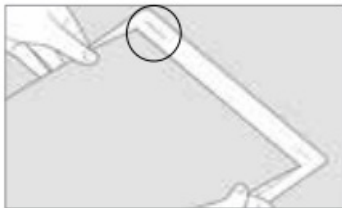

## Load Smart Materials™

- When prompted, position Smart Material between Material Guides (2).



## Important safety instructions

PLEASE READ THIS ENTIRE DOCUMENT PRIOR TO SETTING UP, OPERATING, AND SERVICING YOUR CRICUT® SMART CUTTING MACHINE. PLEASE FOLLOW THE ENCLOSED INSTRUCTIONS, ONLINE INSTRUCTIONS, AND OTHER OFFICIAL CRICUT INSTRUCTIONAL MATERIALS.

In these instructions, the term “Machine” means Cricut Joy Xtra™.

**WARNING:** Risk of Injury, Fire, and Electric Shock.

- Operating the Machine in a manner not prescribed in the enclosed instructions, online instructions, and other official Cricut materials may result in damage to the Machine, property damage, injury, or even death.
- The machine is intended to be operated by an adult only. Not intended for use by children 12 years or under. Always supervise children around the Machine.
- Use the Machine only for its intended crafting purpose.

INDOOR USE ONLY. THE MACHINE IS INTENDED FOR INDOOR USE IN DRY LOCATIONS ONLY. DO NOT USE IN OR NEAR WATER. DO NOT IMMERSE IN WATER OR ANY OTHER LIQUID.

- The machine is not intended for use by persons with reduced physical, sensory, or cognitive capabilities, or lack of experience and knowledge unless they are supervised by a person responsible for their safety and familiar with the safe operation of Machine.
- Disconnect the electrical power by unplugging the Machine before servicing or cleaning.
- Only clean the Machine with a soft cloth dampened with glass cleaner or water. Never use any kind of flammable liquid to clean the Machine. Do not use solvents such as acetone or nail polish remover to clean the Machine as these will permanently damage Machine's surfaces.
- Always unplug the Machine before replacing the blade. Blades are extremely sharp and should be handled with caution and extreme care. Prevent blade contact with hands and body to avoid injury. Do not allow children to handle blades. Blades and other small parts are choking hazards and should be kept and stored away from children.
- Do not open, modify, or otherwise tamper with the Machine.
- Do not operate if the Machine or cord is damaged. Contact Cricut Member Care for service: [cricut.com/contact](https://cricut.com/contact) or 1-877-727-4288.
- Use only Cricut-approved power adapters. Never pull on the cord to disconnect the Machine from the electrical outlet; instead, grasp the plug and pull to disconnect the Machine.
- The power cord should be positioned so that it will not drape over the countertop or tabletop where it can be tripped over, snagged, or pulled on unintentionally (especially by children).
- Place the Machine on a strong, flat, level, and stable surface. Make sure your workspace has enough space in the front and back of the Machine to allow the machine mat to move through the Machine freely.
- Do not place your fingers or other objects in the Machine while connected to electrical power, or while the Machine is powered on, or during operations.
- Keep hair, jewelry, loose clothing, fingers, other body parts, and any other items that could get caught in the moving parts away from the Machine while it is operating as the rapid movements of the carriage, mat, and material during operation may cause injury.
- Do not touch the mat or material during machine operation even if the mat or material stops moving. Do not touch the mat or material until the Machine ejects the mat or material from the Machine.
- Machines should never be left or stored outside, in unheated or unairconditioned spaces, or in environments where Machines can come in contact with water.

**Caution:** Moving the star wheels while the machine is in material loading mode can result in pinched fingers. To avoid pinching, move star wheels all the way to the right prior to choosing material type for projects that use Foil Transfer Tool and/or Card Mat.

## Specifications

## Technical specifications

- **Cricut Joy Xtra™ Models:** JCTR201C
- **Description:** The Cricut Joy Xtra is a desktop cutting and writing device for helping Do It Yourself (DIY) crafters make crafting projects. It takes images created in a software design environment (Cricut Design Space) and recreates the images in paper, vinyl, etc. using tools to cut and write on these materials.

The mechanical design is like that of a small desktop printer or plotter with an electrically driven head that moves the cutting/drawing tools laterally, and feed rollers that move the crafting materials longitudinally. The combination of these movements gives 2 axis motion to perform the desired actions (cutting, drawing, etc.) on the crafting materials in a 2-dimensional plane.

## Product specifications

- **Size** (Width x Length x Height) 12.48 in x 4.46 in x 5.87 in (31.71 cm x 11.32 cm x 14.91 cm)
- **Weight** 6.03 lbs (2.74 kg)
- **Power input (appliance inlet)** 18 Vdc, 2.5 A
- **External power supply Input:** 100-240 Vac, 50/60 Hz, 1.5 A; Output: 18 Vdc, 2.5 A.
- **Model:** TS-A045-1800251
- **Operating mode** Continuous
- **Electrical classification** Class III (Supplied by SELV)
- **Pollution degree** PD 2
- **Ingress protection** IPX0 (ordinary)

## Wireless specifications


- **Transmission type** Bluetooth
- **Frequency Band** 2.4000 -2.4835 GHz
- **Maximum Radiated Power** <= 100 mW (e.i.r.p.)

## FAQ

- **Q: Can children use the Cricut Joy Xtra™?**
  - No, the machine is intended for use by adults only. Children should always be supervised when around the machine.
- **Q: Can I use the machine outdoors?**
  - No, the machine is designed for indoor use only in dry locations. It should not be used in or near water.
- **Q: How should I clean the machine?**
  - Use a soft cloth dampened with glass cleaner or water to clean the machine. Do not use flammable liquids or solvents that can damage the surfaces of the machine.
- **Q: Can I replace the blade myself?**
  - Yes, you can replace the blade yourself. However, always make sure to unplug the machine before doing so and handle the blade with caution to avoid injury.
- **Q: What should I do if the machine or cord is damaged?**
  - If the machine or cord is damaged, do not operate the machine. Contact Cricut Member Care for service.

---

## Documents / Resources

 The image shows a white Cricut Joy Xtra Cutting Machine on a yellow background. The machine is compact and has a small screen and buttons on the front. The text "cricut joy xtra" is visible in the top left corner of the image.	<p><a href="#">Cricut JCTR201C Joy Xtra Cutting Machine</a> [pdf] User Guide</p> <p>JCTR201C, JCTR201C Joy Xtra Cutting Machine, JCTR201C Joy Xtra, Cutting Machine, Machine</p>
--	--

## References

- [Welcome to Cricut: Unleash Your Creativity with Our Cutting Machines & More](#)
- [Cricut Design Space](#)
- [Cricut Learn](#)
- [User Manual](#)