



[Home](#) » [crivit](#) » **CRIVIT HG09968 Folding Trolley Instruction Manual** 

Contents [[hide](#)]

- [1 CRIVIT HG09968 Folding Trolley](#)
- [2 Introduction](#)
- [3 Technical data](#)
- [4 General safety notes](#)
- [5 Assembly / Disassembly](#)
- [6 Maintenance](#)
- [7 Warrantaty](#)
- [8 Contact](#)
- [9 FAQ](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)



CRIVIT HG09968 Folding Trolley



Introduction



We congratulate you on the purchase of your new product. You have chosen a high-quality product. Familiarise yourself with the product before using it for the first time. In addition, please carefully refer to the operating instructions and the safety advice below. Only use the product as instructed and only for the indicated field of application. Keep these instructions in a safe place. If you pass the product on to anyone else, please ensure that you also pass on all the documentation with it.

Intended use

- This product is a trolley which is designed to transport camping equipment, etc., amounting to a weight of max. 50 kg.
- This product should not be used by children. It is only intended for private use and is not intended for commercial use. Not suitable for transporting children.

Scope of delivery

- 1 Carrier bag [1]

- 1 Removable floor [2]
- 1 Folding trolley [3]
- 1 Set of instructions

Technical data

- Dimensions: approx. 98 x 49 x 115 cm (L x W x H)
- Platform size: approx. 92 x 48 x 36 cm (L x W x H)
- Pack size: approx. 77 x 20 x 33 cm
- Max. load: 50 kg
- Product weight: 11 kg

General safety notes

PLEASE READ THESE INSTRUCTIONS FOR USE CAREFULLY. KEEP ALL SAFETY NOTES AND INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE! FAILURE TO OBSERVE THESE INSTRUCTIONS WILL POSE A HAZARD TO YOU AND YOUR CHILD.



WARNING! RISK OF DEATH AND ACCIDENTS FOR TODDLERS AND CHILDREN!

Never leave children unsupervised with the packaging material. There is a danger of suffocation.

- **WARNING!** Ensure that the product has been assembled properly before use.
- **WARNING!** Ensure that all closing mechanisms of the product have snapped into place before use.
 - Make sure that the product is only assembled by persons who know how to do so.
 - Please ensure that the product is in good working condition before each use.
- **WARNING!** Do not leave children unattended! The product is not a climbing frame or toy! Make sure that nobody climbs or leans on the product, particularly children. The product may otherwise become unbalanced and tip over. This may result in injury and/or damage.

- ? The product may only be used by an adult.



 
- Never place a load of more than 50 kg on the product.
- Do not place the product near stairs, steep ground or swimming pools.
- **WARNING!** Do not use it to transport people or animals. This may result in injury and/or damage.
 - Pull the product slowly around corners.
 - It is not permitted to use this product as a trailer for vehicles of any kind.
 - This product is not suitable for attaching to a vehicle.
 - Place objects in the centre of the product to transport them.
- **WARNING!** Do not sit on the side wall. Danger of tipping.
- **Note:** In case of discoloration/ fading of supporting synthetic components, they shall be exchanged.

Assembly / Disassembly


WARNING! Crushing and shearing points are present during assembly and disassembly.

Unfold the trolley:


1. Take out the removable floor [2] from the carrier bag [1] (see Fig. A).

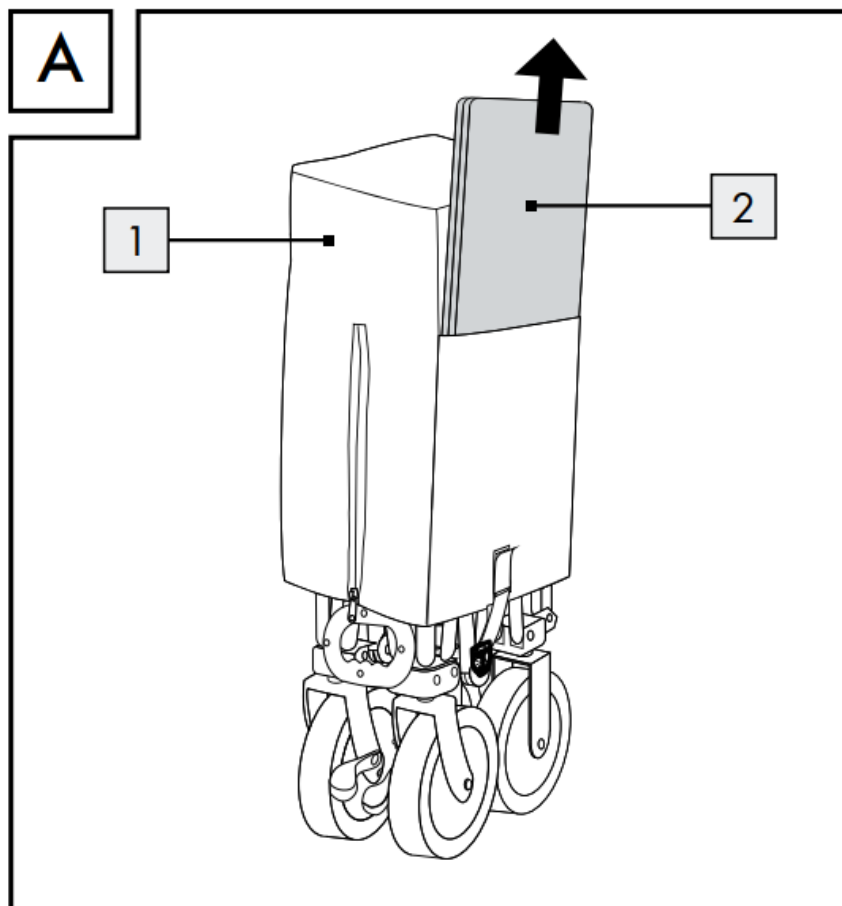

 
2. Release the velcro strap of the carrier bag and remove the carrier bag [1] from the trolley [3] (see Fig. B).

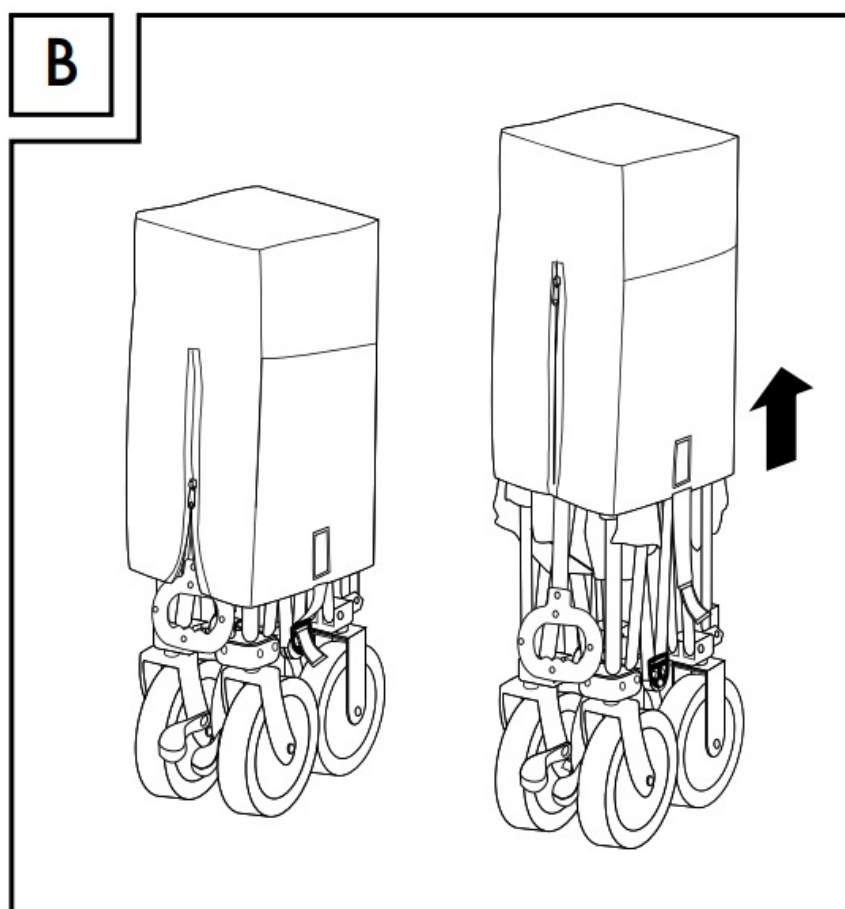

 
3. Loosen the velcro on the long strap surrounding the trolley [3] and unfold the trolley (see Fig. C).

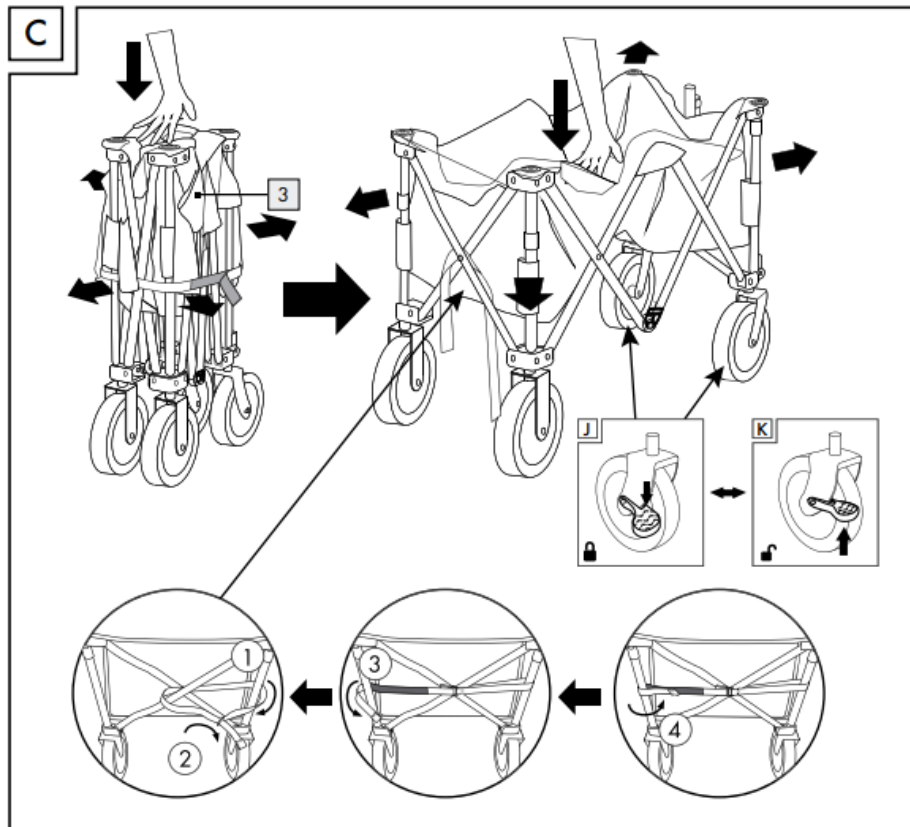




4. Tie the velcro strap according to Figure C to prevent the velcro strap from falling to the floor.
 1. First, the strap with the buckle passes through the shaft.
 2. Then insert the strap with velcro into the buckle.
 3. Strap with velcro passes through another shaft.
 4. Lastly, stick the velcro together to secure the strap on the shaft.
5. Unfold the handle in front of the trolley [3] (see Fig. D1), turn the lock cap toward the lower part of the handle shaft. Push the lock cap downward and cover the lower part of the handle shaft.
6. Insert the middle joint of the trolley frame into the cover at the left and right sides (see Fig. D). **WARNING!** When the trolley is stationary or not in use the handle must be secured with the locking clip (see Fig. D, picture 4).

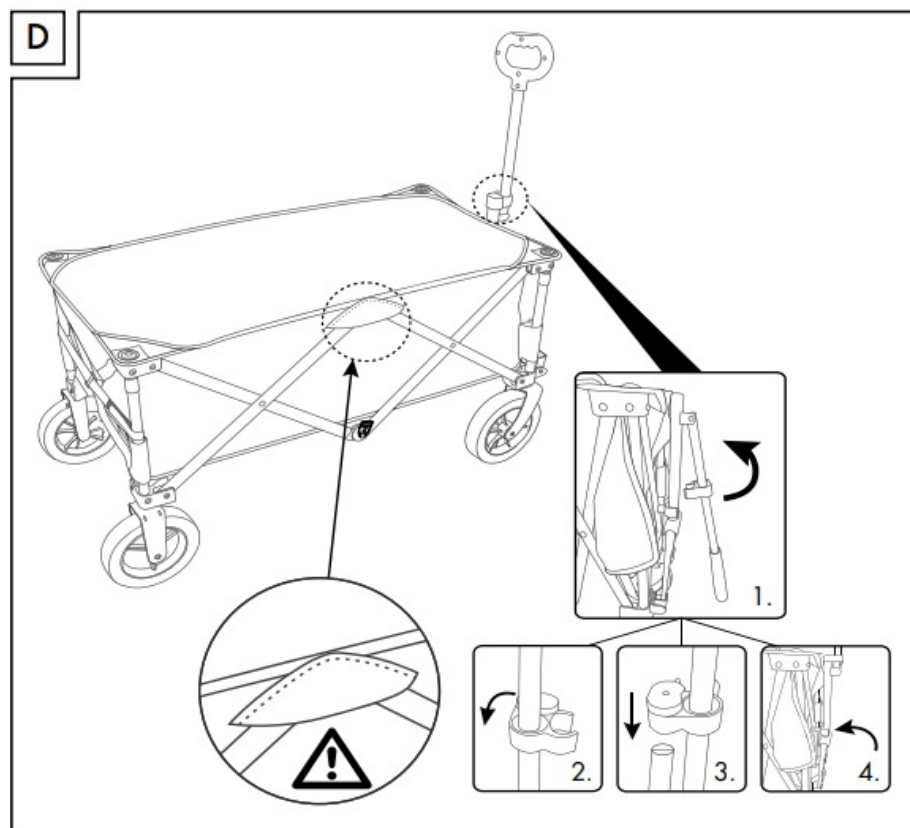 

 7. Place the removable floor [2] on the folding trolley [3] (see Fig. E). Fix the velcro strap on the folding trolley [3] to the shaft of the front and rear wheels.

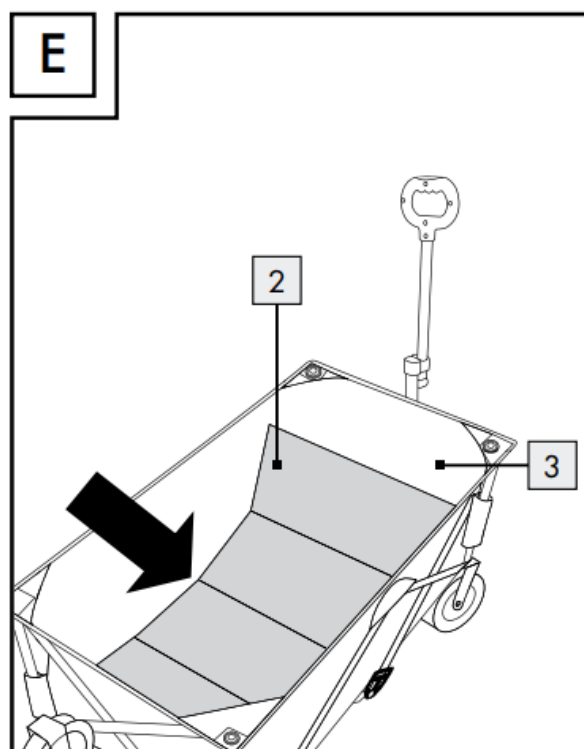

   8. Brakes are included with this product, located on the wheels below the handle (see Fig. C items J and K). The user can initiate the brake located in front wheels according to Fig. J, user can unlock the brake according to Fig. K.

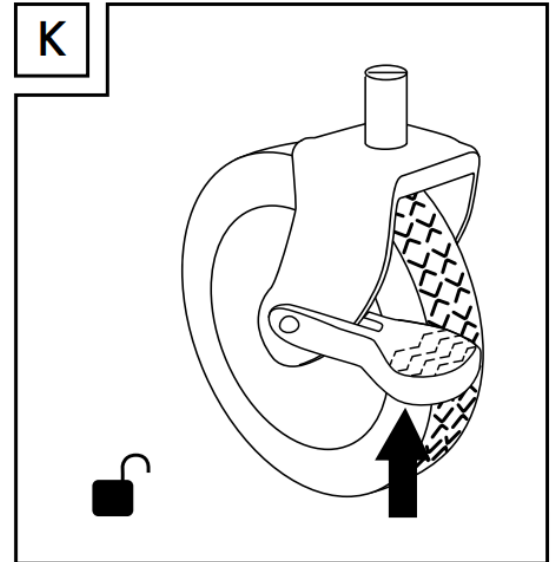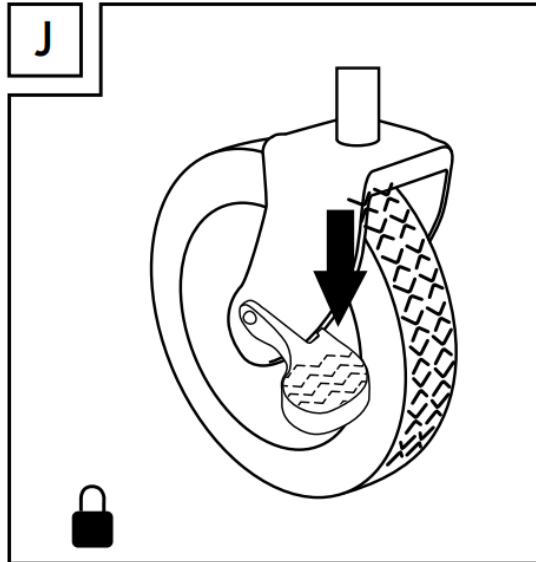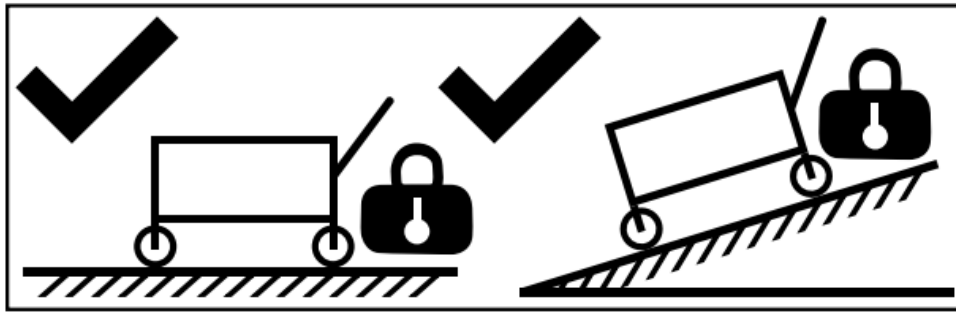


Trolley symbol:


CAUTION: Initiate the brake when the product is left in a stationary position.

Fold the trolley

 
1. Remove the removable floor [2] from the folding trolley [3].
2. Pull up the lock cap from the handle shaft (see Fig. F1), turn the locking position toward the handle shaft, and fold the upper part of the handle shaft downward.

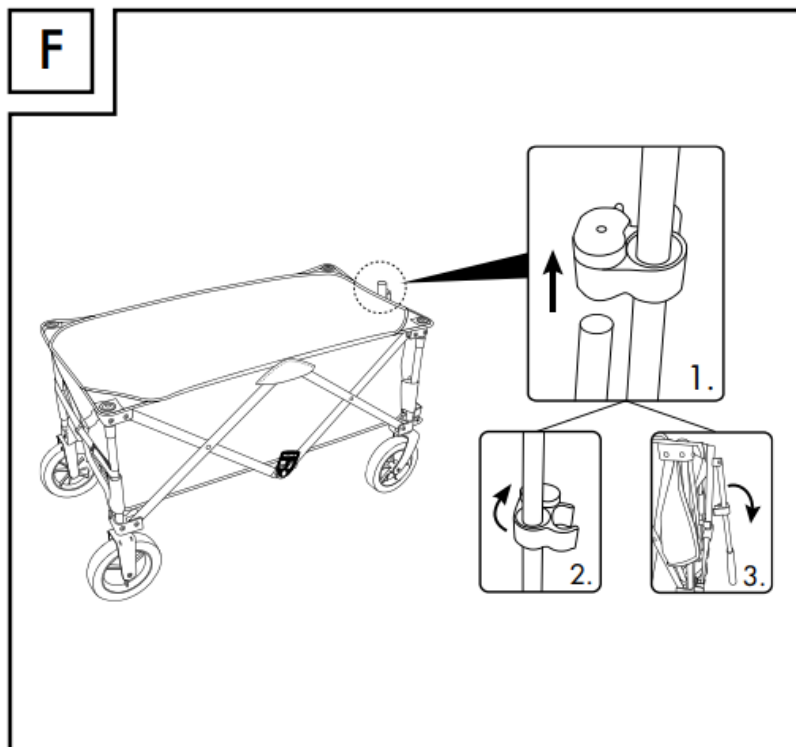

 
3. Remove the velcro strap from the front and rear wheel shafts, then pull the strap in the middle of the folding trolley (see Fig. G).

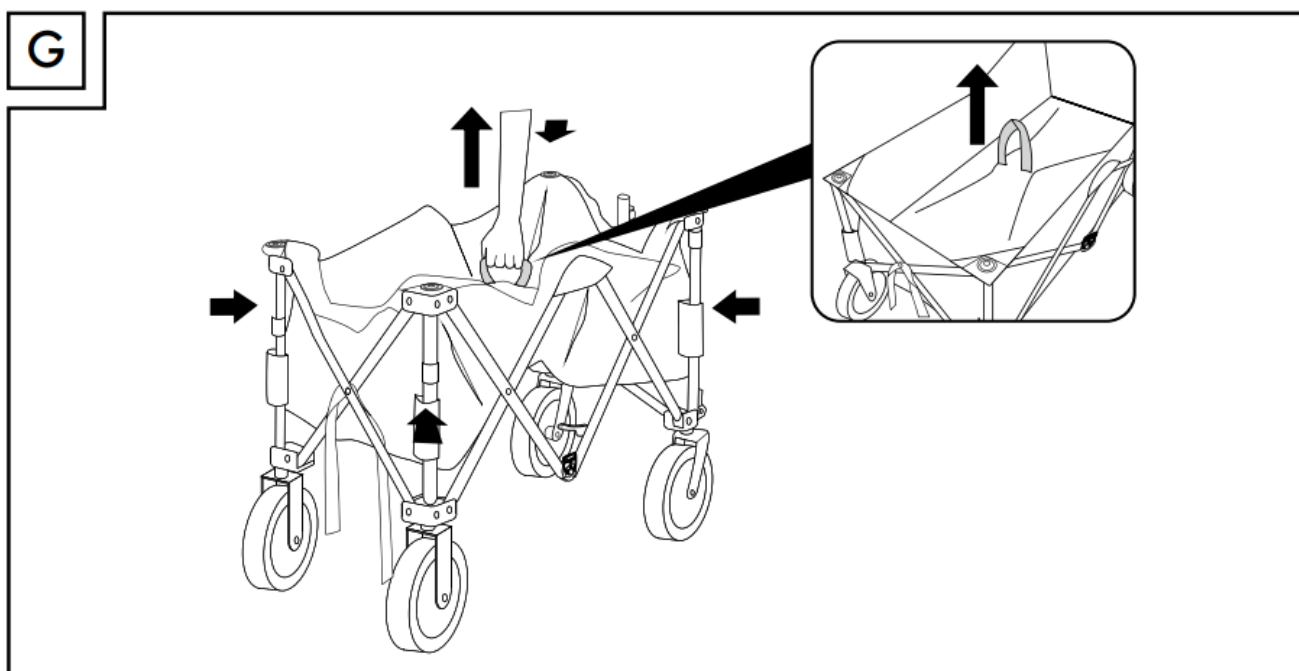

 4. Tighten the folded trolley with the velcro strap.
5. Cover the trolley with a carrier bag [1] and fix the carrier bag to the trolley by a velcro strap (see Fig. H).

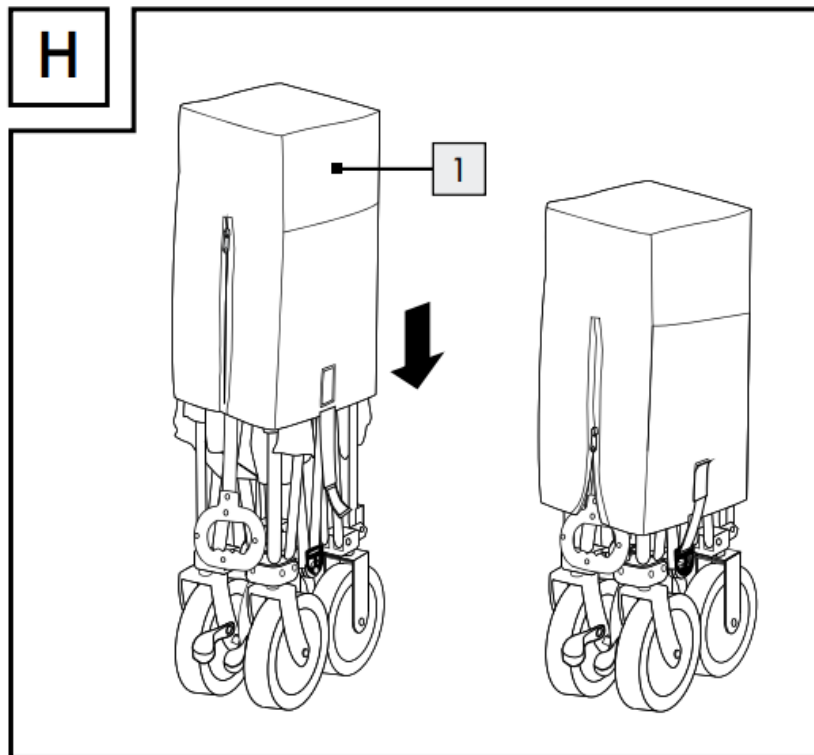

 6. Insert the removable floor [2] to the side pocket of the carrier bag [1] (see Fig. I).

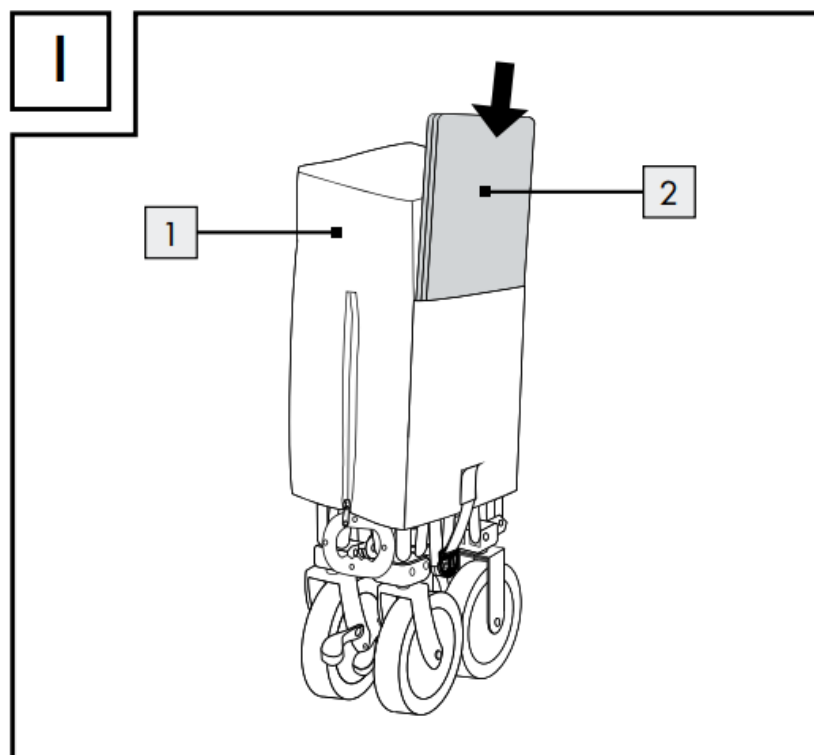

Maintenance

- Keep the product in a dry and cool place away from sunlight when not in use.
- Check regularly to ensure no damage to the product.
- Only use spare parts supplied by the manufacturer.

Cleaning and care

- Use a damp, lint-free cloth to clean the product.

Disposal

- The packaging is made entirely of recyclable materials, which you may dispose of at local recycling facilities.
- Contact your local refuse disposal authority for more details on how to dispose of your worn-out product.
- The packaging is made entirely of recyclable materials, which you may dispose of at local recycling facilities.
- Contact your local refuse disposal authority for more details on how to dispose of your worn-out product.

Warranty

- The product has been manufactured to strict quality guidelines and meticulously examined before delivery.
- In the event of material or manufacturing defects, you have legal rights against the retailer of this product.
- Your legal rights are not limited in any way by our warranty detailed below.
- The warranty for this product is 3 years from the date of purchase.
- The warranty period begins on the date of purchase. Keep the original sales receipt in a safe location, as this document is required as proof of purchase.
- Any damage or defects already present at the time of purchase must be reported without delay after unpacking the product.
- Should the product show any fault in materials or manufacture within 3 years from the date of purchase, we will repair or replace it, at our choice, free of charge to you.
- The warranty period is not extended as a result of a claim being granted.
- This also applies to replaced and repaired parts. This warranty becomes void if the product has been damaged, used, or maintained improperly.
- The warranty covers material or manufacturing defects.
- This warranty does not cover product parts subject to normal wear and tear, thus considered consumables (e.g, batteries, rechargeable batteries, tubes, cartridges), nor damage to fragile parts, e.g. switches or glass parts.

Warranty claim procedure

- To ensure quick processing of your case, please observe the following instructions:
- Please have the till receipt and the item number
- (IAN 470644_2407) available as proof of purchase.
- You will find the item number on the rating plate, an engraving, on the front page of the instructions for use (bottom left), or as a sticker on the rear or bottom of the product.
- If functional or other defects occur, please contact the service department listed either by telephone or by e-mail.
- You can return a defective product to us free of charge to the service address that will be provided to you. Ensure that you enclose the proof of purchase (till receipt) and information about what the defect is and when it occurred.

Contact

Service

Service Great Britain

- Tel.: 08000569216
- E-Mail: owim@lidl.co.uk

Service Ireland

- Tel.: 1800 200736
- E-Mail: owim@lidl.ie
- **OWIM GmbH & Co. KG Stiftsbergstraße 1**
- 74167 Neckarsulm GERMANY




- **PDF ONLINE**
www.lidl-service.com

FAQ



- Q: What is the maximum load capacity of the trolley?
- A: The trolley has a maximum load capacity of 50 kg.
- Q: Can children be transported in the trolley?
- A: No, the trolley is not suitable for transporting children.

Documents / Resources

| | |
|---|---|
|  | CRIVIT HG09968 Folding Trolley [pdf] Instruction Manual HG09968 Folding Trolley, HG09968, Folding Trolley, Trolley |
|---|---|

References

- [User Manual](#)

 crivit, Folding Trolley, HG09968, HG09968 Folding Trolley,
 crivit Trolley

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.