



CROSLEY CAW45125LW Top Loading Washing Machine User Guide

[Home](#) » [Crosley](#) » CROSLEY CAW45125LW Top Loading Washing Machine User Guide 



CAW45125LW Top Loading Washing Machine
User Guide

Contents

- [1 CAW45125LW Top Loading Washing Machine](#)
- [2 ADDING LAUNDRY PRODUCTS](#)
- [3 CONTROL PANEL AND FEATURES](#)
- [4 CHOOSING THE RIGHT CYCLE](#)
- [5 PRE-TREATING](#)
- [6 AUTO SENSING AND DEEP FILL](#)
- [7 CLEANING WITH LESS WATER](#)
- [8 ASSISTANCE OR SERVICE AND ADDITIONAL INFORMATION](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

CAW45125LW Top Loading Washing Machine



WARNING



Fire Hazard

Never place items in the washer that are dampened with gasoline or other flammable fluids.

No washer can completely remove oil.

Do not dry anything that has ever had any type of oil on it (including cooking oils).

Doing so can result in death, explosion, or fire.

WARNING: To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS, located in your appliance's Owner's Manual, before operating this appliance.

 
Step 1. Add HE detergent


NOTE: See the "Adding Laundry Products" section for more information on adding HE detergent, fabric softener, and/or bleach.

Designed to use only HE High Efficiency detergents.


**Step 2. Load clothes**

For best results, load garments in loose heaps evenly around the basket wall.

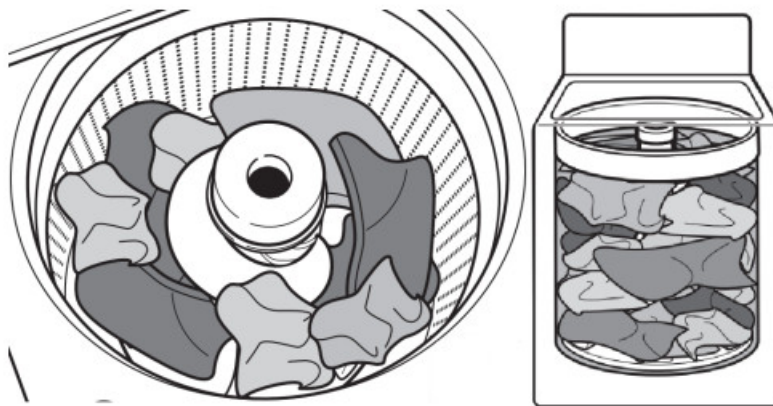
**Step 3. Press power to turn on the washer****Step 4. Select the desired cycle for your load***

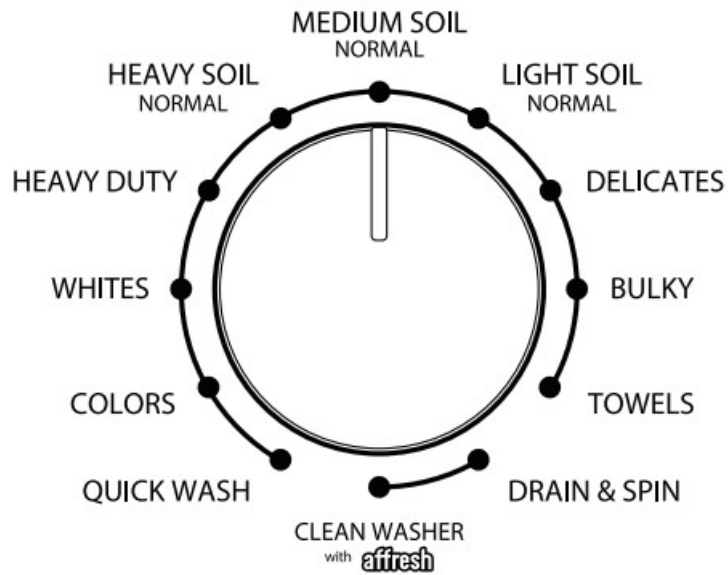 

 Step 5. Adjust cycle settings and select additional options*

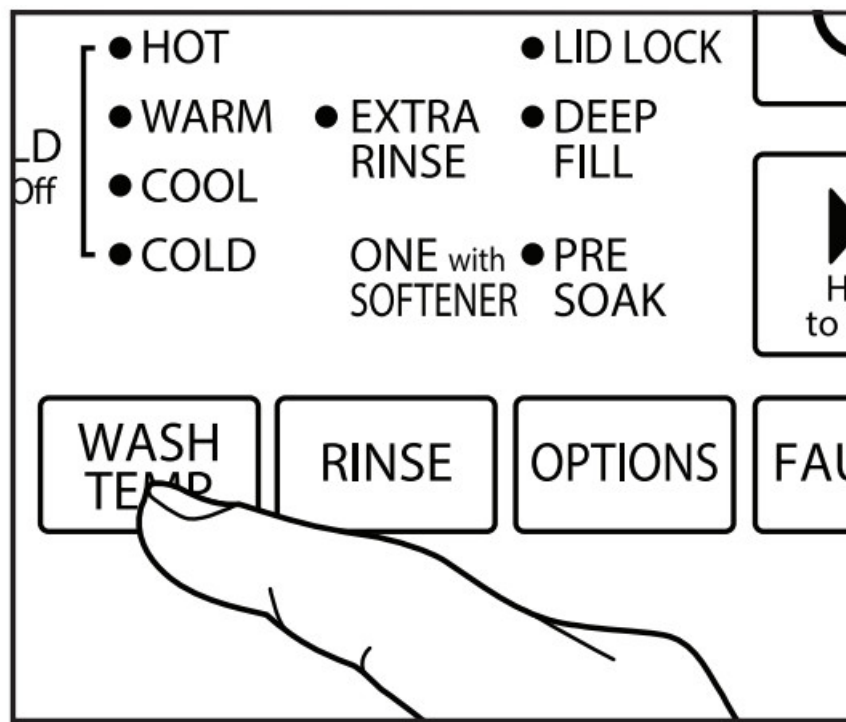

 Step 6. Press and hold start/pause to begin cycle

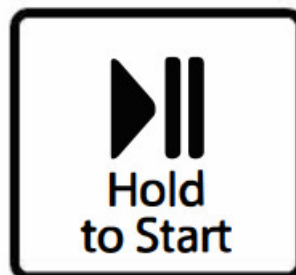

NOTE: Start button must be held for 1 second to start cycle. Once the status lights are all illuminated, release the start button.

*Not all cycles, settings or options are available with all models.

 
ADDING LAUNDRY PRODUCTS

IMPORTANT: Using non-HE detergent will likely result in longer cycle times and reduced rinsing performance. It may also result in component malfunction and, over time, buildup of mold or mildew. HE detergents should be low-sudsing and quick-dispersing to produce the right amount of suds for the best performance.

Adding HE detergent to basket:

Add a measured amount of HE detergent or single-dose laundry packets into the basket. If using Oxi-type boosters, color safe bleach, or fabric softener crystals, add to the bottom of the washer basket before adding clothes.

NOTE: Follow the manufacturer's instructions to determine the amount of laundry products to use.

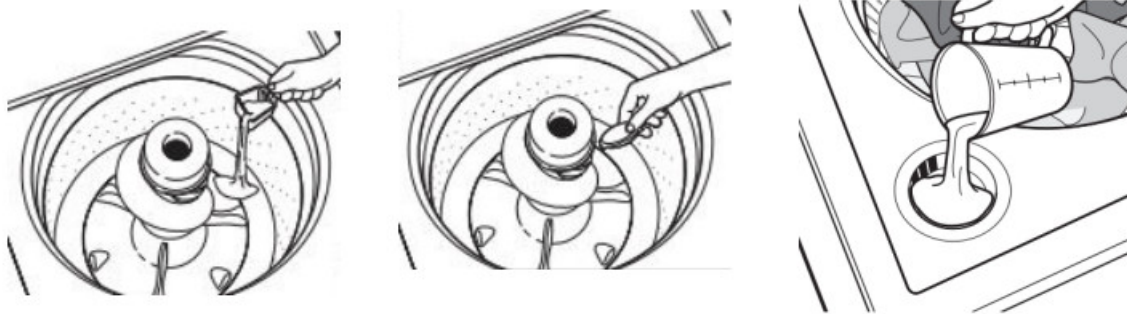


Adding liquid chlorine bleach:

Do not overfill, dilute, or use more than 1 cup (236 mL).


Do not use color-safe bleach or Oxi products in the same cycle with liquid chlorine bleach.

Adding liquid fabric softener to dispenser:

 Pour a measured amount of liquid fabric softener into dispenser; always follow manufacturer's directions for correct amount of fabric softener based on your load size. Dilute liquid fabric softener by filling the dispenser with warm water until liquid reaches the underside of the rim. See Max Fill line arrows.

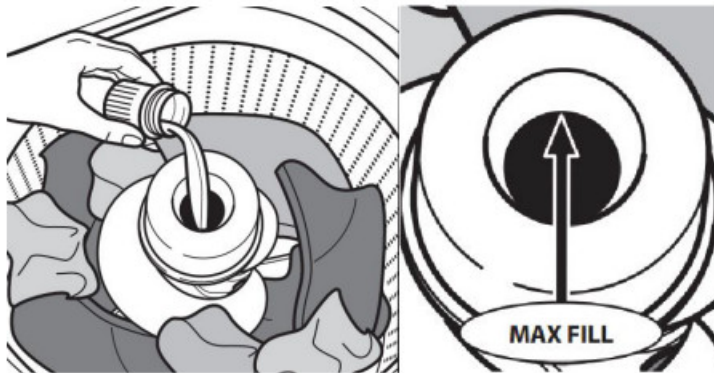


 IMPORTANT: The rinse option One with Softener must be selected to ensure proper distribution at correct time in cycle.

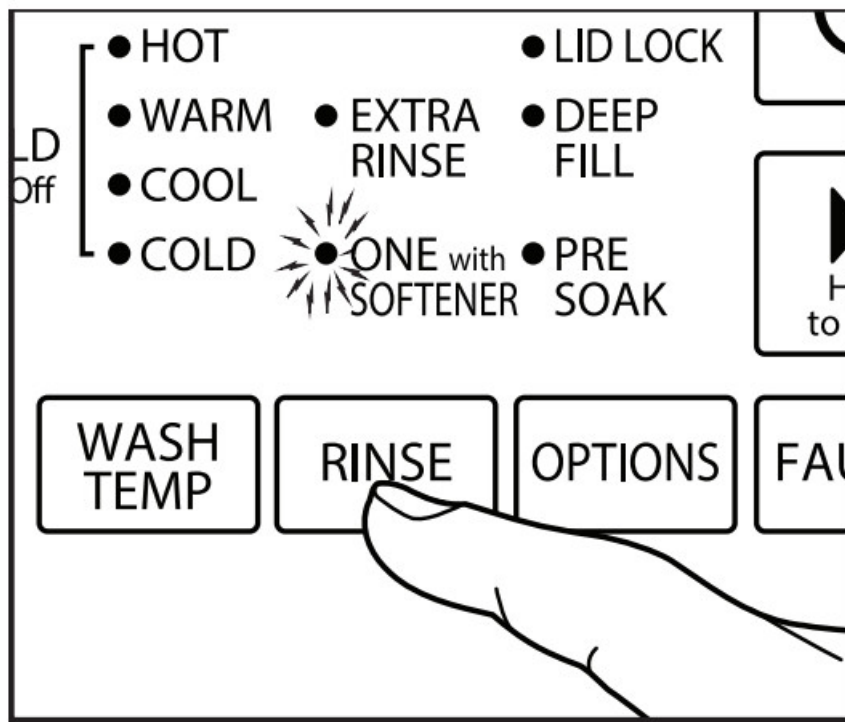

IMPORTANT: Retain this guide for future use.

 CONTROL PANEL AND FEATURES

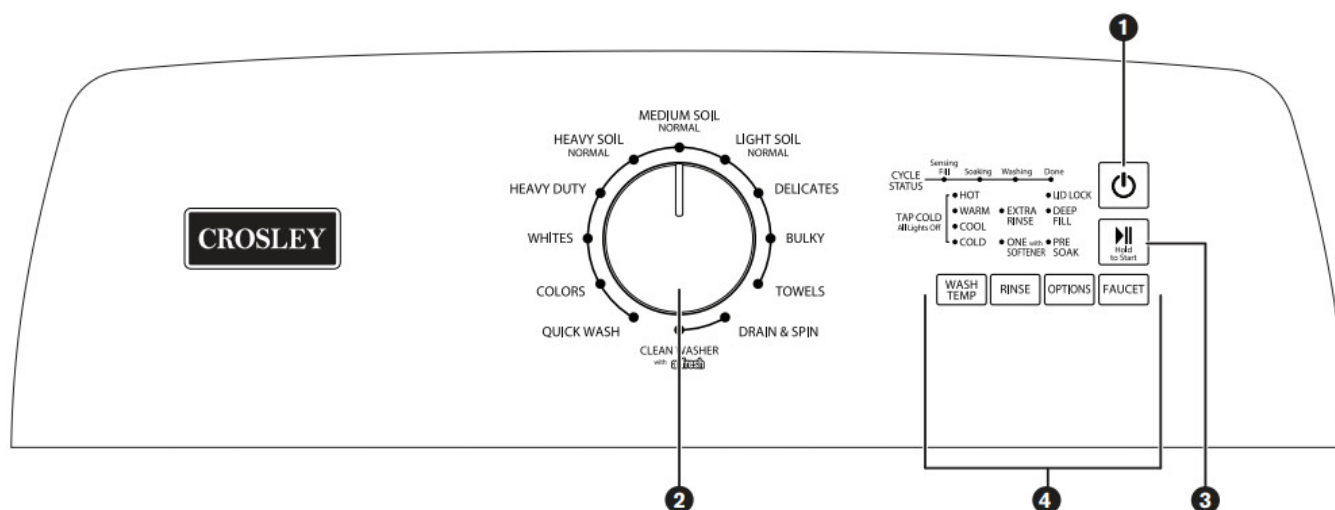

*Appearance may vary depending on model.

1. POWER

Press to turn on/off or to stop/cancel a cycle.

2. CYCLE KNOB

Turn knob to select desired cycle.

3. START/PAUSE

Press and hold the Start/Pause button to start cycle. Press during a cycle to pause cycle and unlock lid.

NOTE: If machine is spinning it may take longer to unlock lid.

4. CYCLE MODIFIERS (Not all modifiers are available on all cycles)

WASH TEMP

Press to modify the cycle's available temperatures (Tap Cold, Cold, Cool, Warm, Hot).

NOTE: Pressing the Wash Temp will toggle through available temperature options. When no lights in the temperature column are illuminated the selected temperature is Tap Cold.

RINSE

Press to modify the cycle's available rinse options. Press once for ONE with SOFTENER, twice for EXTRA RINSE and three times to activate both.

ONE with SOFTENER

Select this option to let the machine know when you have added liquid fabric softener.

EXTRA RINSE

Select this option to add a second rinse.

OPTIONS

Press to add or remove options for each cycle. Press once to add a 30 minute PRE SOAK, twice to activate DEEP FILL and three times for both.

DEEP FILL

Use this option to automatically add more water to your wash cycle. You can also use this option to reduce the likelihood of white residue on dark clothing.

PRE SOAK

Touch to add a 30 minute pre soak period to help loosen tough stains. The washer will fill, pause to soak, and then begin the selected cycle.

FAUCET

 
Press to access an instant water stream. Use this feature to pretreat clothes and other items right in the washer. You can also use this feature to manually add water to the machine as desired.

NOTE: The washer will drain at the beginning of the cycle if a large volume of water is detected to ensure the machine can correctly sense the load size.

NOTE: If the washer detects an out-of-balance condition it may pause and attempt and re-distribute the load. During this time the Sensing Fill and Washing status indicators will both briefly illuminate.


WARNING: Do not wash water-resistant or water repellant-type clothing. Failure to closely follow these instructions may result in an abnormal vibrating and out-of-balance condition that could result in physical injury, property damage, and/or appliance damage.

CHOOSING THE RIGHT CYCLE

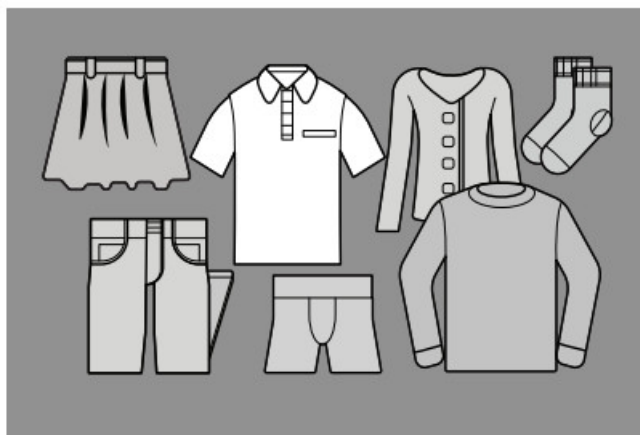


A cycle guide for your washer can be found online at www.crosley.com. The document will help identify which cycle to choose for various load types as well as the default cycle options. For example we recommend using the MEDIUM SOIL NORMAL cycle with Warm water for cottons, linens and mixed garment loads.

 PRE-TREATING

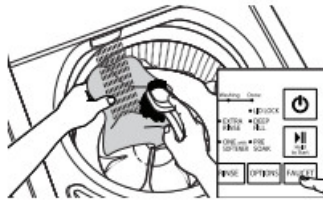

- Press the Faucet button once to turn on and press again to turn off.
- Faucet will automatically shut off after 10 minutes or when max water level is reached.
- Water will automatically drain if water level becomes too high. Water will also drain after 10 minutes if the lid is left open or 3 hours if the lid is left closed.

 AUTO SENSING AND DEEP FILL

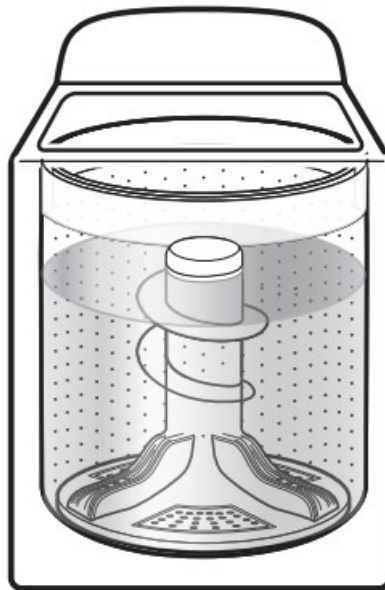

- The washer will adjust the water level to the optimal amount for a High Efficiency wash of the detected load size.
- Press DEEP FILL to automatically add more water to your wash cycle.
- It is recommended to use BULKY cycle with DEEP FILL option for loads where maximum water level is desired..
- Expect longer cycle times due to extended fill duration when using the DEEP FILL option.

CLEANING WITH LESS WATER



The washer has been designed and optimized to provide a thorough cleaning using less water to conserve energy and resources.








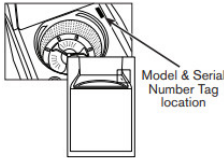 
As the washer dampens and moves the load, the level of the items will settle in the basket. This is normal, and does not indicate that more items should be added.

IMPORTANT: You will not see a full basket of water as with older, less efficient washing machines. It is normal for some of the load to be above the water line.

For detailed installation instruction and maintenance information, winter storage, and transportation tips, please see the Owner’s Manual included with your machine.

ASSISTANCE OR SERVICE AND ADDITIONAL INFORMATION


For information on any of the following items, a full cycle guide, warranty, detailed product dimensions, or for complete instructions for use and installation, please visit www.crosley.com. This may save you the cost of a service call.

Register Product	Schedule Service	How To's & FAQ	Manuals & Downloads	Add Service Plan	Parts	Accessories
						
		To speak with a customer service representative or if you have additional questions, call us toll free at 1-800-253-1301 You can write with any questions or concerns at: Customer eXperience Center 533 Benson Road Benton Harbor, MI 49022-2692 Please include a daytime phone number in your correspondence.				



©CROSLEY is a registered trademark of The Crosley Groups, Inc.
©2021 All rights reserved.

Documents / Resources

	CROSLEY CAW45125LW Top Loading Washing Machine [pdf] User Guide CAW45125LW, Top Loading Washing Machine, CAW45125LW Top Loading Washing Machine, Washing Machine
---	---

References

-  [Crosley Home Products - Home](#)