



CROSLEY CR3029A Retro Bluetooth Speaker Instruction Manual

[Home](#) » [Crosley](#) » CROSLEY CR3029A Retro Bluetooth Speaker Instruction Manual 

CROSLEY CR3029A Retro Bluetooth Speaker



Contents

- [1 Safety Instructions](#)
- [2 Items in this package](#)
- [3 Specifications](#)
- [4 Product Description](#)
- [5 Bluetooth Operation](#)
- [6 Twins Connected Mode](#)
- [7 Other Operation](#)
- [8 FCC Statements](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

Safety Instructions

Read and understand this entire manual before using this product. Keep these instructions for future reference.

1. Do not use this product near water.
2. This product should be operated only by the type of power source indicated on the marking label or in this instruction manual.
3. Do not defeat the safety purpose of the polarized plug. A polarized plug has two blades with one blade wider than the other. This plug will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet try reversing the plug. If the plug should still fail to fit, contact your electrician.
4. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.
5. Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
6. Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.
Never spill liquid of any kind on the product.
7. Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
8. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
9. Do not use attachments not recommended by the product manufacturer as they may cause hazards.
10. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
11. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating. Do not block or cover these openings.
12. Unplug the product during lightning storm or when unused for long periods of time.

Items in this package

Before throwing away any packaging materials, please check thoroughly and make sure you find the following items that come along with this package:

- Speaker
- USB-C charging cable
- Strap


Please contact Crosley customer service if there is any accessory missing from the package. Retain the original packaging materials for exchange or return purposes.

Specifications

- **Power Source** USB-C Cable, DC output 5V, 1A
- **Power consumption** 3W
- **Output Power** 3W
- **Speaker** 3Ω 3W
- **Charging Time** About 100 minutes
- **Playing Time** Up to 3 hours
- **Battery capacity** 400mAh
- **Bluetooth version** 5.1


Product Description

1. Speaker
2. Microphone

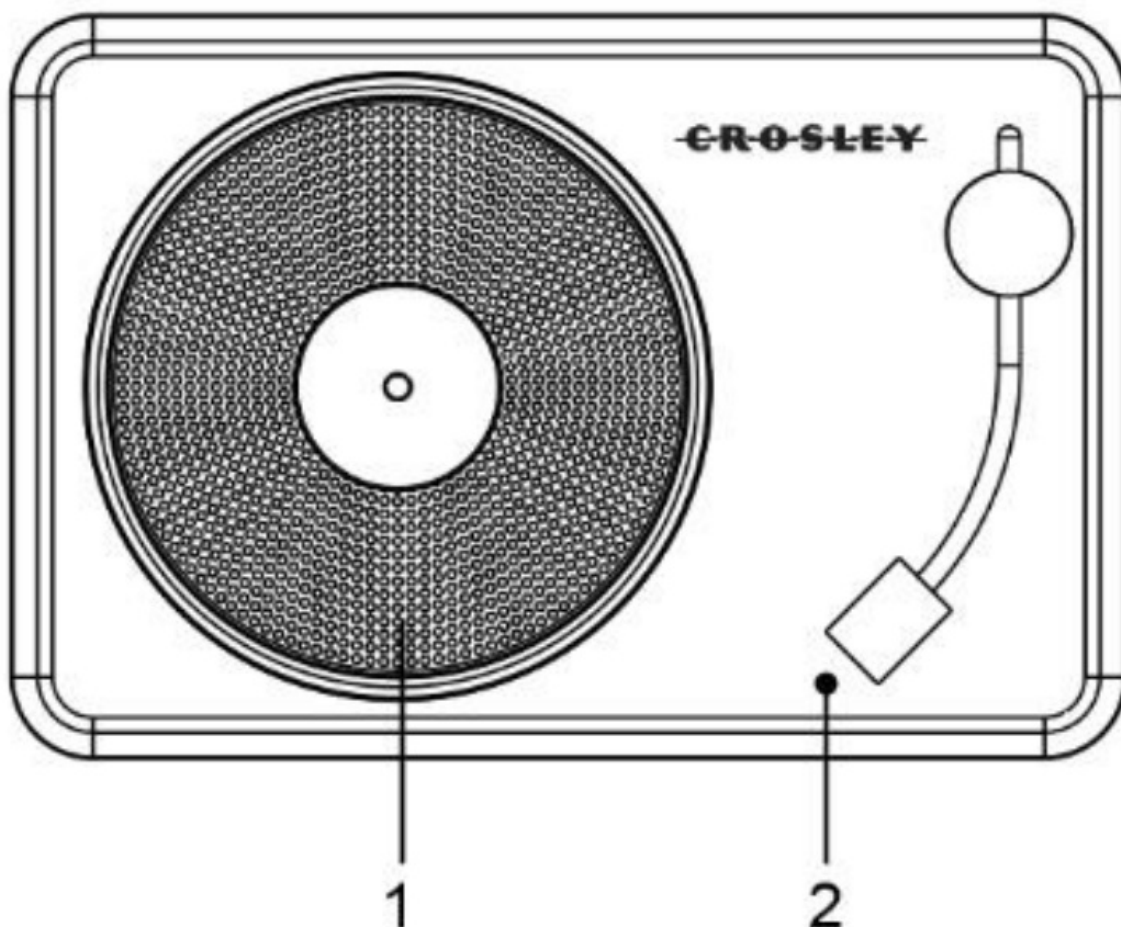

3. Hanging hole
4. Indicator LED

5. USB-C charging port
6. Power/Play/Pause button

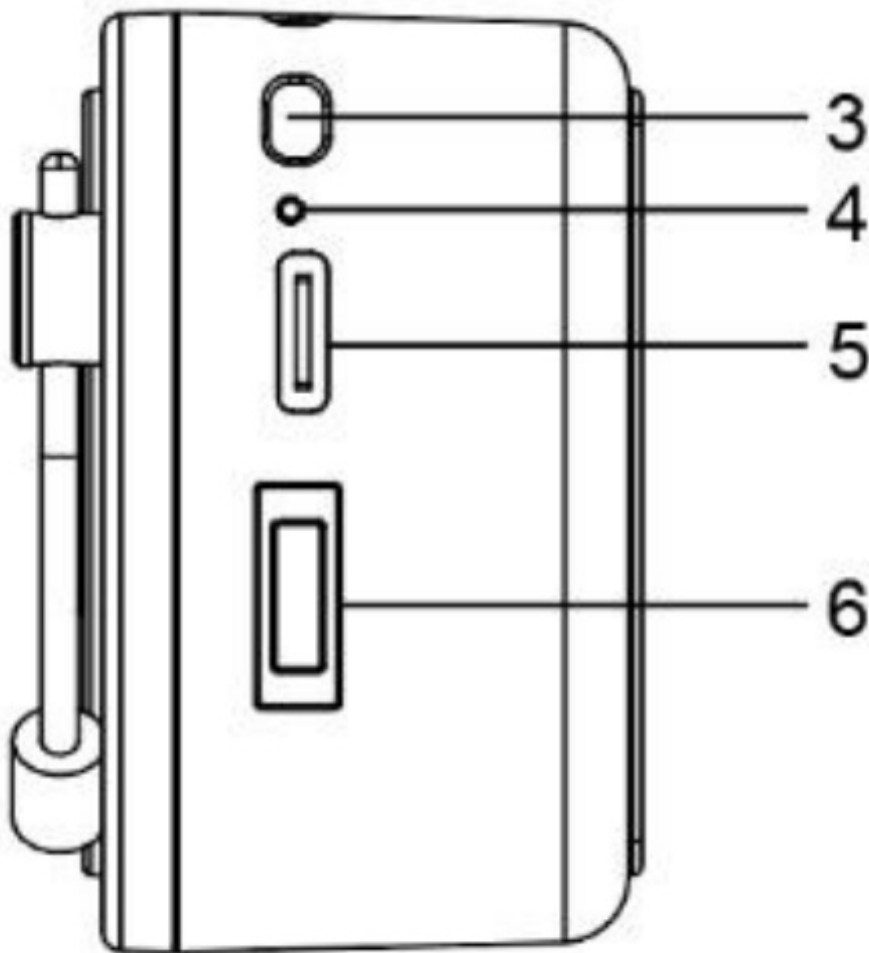

Bluetooth Operation

1. Long press the Power/Play/Pause button to turn it ON, and the indicator LED will flash blue.
2. Turn on the Bluetooth feature of your audio device, search for “CROSLEY CR3029A” and pair.
3. Once your device is successfully paired with the unit, you will hear a short confirmation sound from the unit.
4. Play and stream music from your device to the unit.

Twins Connected Mode

1. Turn on both sets of speakers by long pressing the Power/Play/Pause button.
2. Quickly double-click the Power/Play/Pause button on each speaker separately.
3. You will hear a confirmation notification showing they are paired.
4. Connect your Bluetooth.
5. There will be a confirmation notification from one speaker showing they are paired with your Bluetooth device.

Note:

This speaker will be the Primary and the other will be secondary.

The primary speaker indicator LED will flash blue

To Disconnect

To disconnect the speakers from the Twins Connected Mode, double-click the Power/Play/Pause button quickly on one of twins-connected speakers. You will hear a confirmation notification showing they are disconnected.

Other Operation

Bluetooth Calling

When your smartphone is paired with speaker, the speaker will ring when an incoming call is received. Press Power/Play/Pause button to answer the call, and speak through the microphone on the unit. Press and hold the Power/Play/Pause button to reject incoming call.

Standby Function

If not connected to Bluetooth, the unit will automatically shut down after fifteen minutes.

FCC Statements

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference, and this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



Documents / Resources

	<p>CROSLEY CR3029A Retro Bluetooth Speaker [pdf] Instruction Manual</p> <p>CR3029A Retro Bluetooth Speaker, CR3029A, Retro Bluetooth Speaker, Bluetooth Speaker, Speaker</p>
--	--

References

- crosleyradio.com
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.