

CROSLEY
CR7502A Riff
Record Player
with
Speakers



CROSLEY CR7502A Riff Record Player with Speakers Instruction Manual

[Home](#) » [Crosley](#) » CROSLEY CR7502A Riff Record Player with Speakers Instruction Manual 

Contents

- [1 CROSLEY CR7502A Riff Record Player with Speakers](#)
- [2 Product Specifications](#)
- [3 Product Description](#)
- [4 Safety Instructions](#)
- [5 Items in this package](#)
- [6 Specifications](#)
- [7 Product Description](#)
- [8 Initial Setup](#)
- [9 Auxiliary Connections](#)
- [10 Turntable Operation](#)
- [11 Platter Auto-stop](#)
- [12 Needle Replacement](#)
- [13 Bluetooth Operation](#)
- [14 Turntable Maintenance](#)
- [15 Troubleshooting](#)
- [16 FCC Statements](#)
- [17 FAQ](#)
- [18 Documents / Resources](#)
 - [18.1 References](#)
- [19 Related Posts](#)



CROSLEY CR7502A Riff Record Player with Speakers



Product Specifications

- **Power:** AC power adaptor, DC output 12V 2A
- **Power consumption:** 25 W
- **Speaker:** 2.5, 8 ohm, 10W x 2
- **Turntable speed:** 33 1/3, 45, 78 RPM
- **Replacement needle:** Crosley NP16

Product Description

- Hinge
- Turntable Platter
- Turntable Spindle
- 45 RPM Adapter
- Tonearm Lever
- Auto Stop Switch
- Speed Switch
- Tonearm
- Tonearm Clip
- Tonearm Rest
- Function Indicator
- On/Off Volume Knob
- Aux In Jack
- Speaker Jacks
- Power Jack
- Speakers

Initial Setup

1. Place the unit on a flat and level surface.
2. Install the turntable lid to the hinges.

3. Connect the Speakers to the Speaker jack on the back of the unit.
4. Remove the tie-wrap that is holding the tonearm.
5. Connect the power adaptor to the Power Jack of the unit.

Note: Do not plug the AC power adaptor to power outlet before all the assembly is completed. Before turning the power on, make sure again all the connection settings are correct. Always turn off the power when connecting or disconnecting.

Auxiliary Connections

You can connect an audio device to this unit and play your music through its speakers. To do this, connect the 3.5mm auxiliary cable (not included) between your audio device and the Aux Jack of this unit and start playing the music.

Note: The aux in connection will automatically override the turntable and Bluetooth functions. To resume using the turntable or Bluetooth functions, unplug the auxiliary cable from the aux in jack. The Function Indicator will be purple.

Turntable Operation

1. Rotate the On/Off Volume Knob to turn on the power.
2. Set the Speed Switch accordingly.
3. Place the record on the turntable. Use the 45 RPM Adapter if necessary.
4. Remove the stylus protector from the stylus assembly.

Platter Auto-stop

If the Auto-stop Switch is set to ON position, the platter will stop spinning automatically when the record plays to the end. In some rare occasion, if the turntable stops playing before the end of the record, set the switch to OFF position, and the turntable should overcome this issue.

Safety Instructions

Read and understand this entire manual before using this product. Keep these instructions for future reference.

1. Do not use this product near water.
2. This product should be operated only by the type of power source indicated on the marking label or in this instruction manual.
3. Do not defeat the safety purpose of the polarized plug. A polarized plug has two blades with one blade wider than the other. This plug will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet try reversing the plug. If the plug still fails to fit, contact your electrician.
4. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.
5. Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
6. Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
7. Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
8. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void

the user's authority to operate the equipment.

9. Do not use attachments not recommended by the product manufacturer as they may cause hazards.
10. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
11. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating. Do not block or cover these openings.
12. Unplug the product during a lightning storm or when unused for long periods.

Items in this package

Before throwing away any packaging materials, please check thoroughly and make sure you find the following items that come along with this package:

- Turntable
- Turntable Lid
- 45 RPM adapter
- Power adaptor
- Speakers x 2
- Feet x 8

Please contact Crosley customer service if there is any accessory missing from the package. Retain the original packaging materials for exchange or return purposes.

 
 
Specifications

- **Power AC power adaptor, DC output** 12V 2A
- **Power consumption** 25 W
- **Speaker** 2.5", 8Ω 10W x 2
- **Turntable speed** 33 1/3, 45, 78 RPM
- **Replacement needle Crosley** NP16

Note:

- Design and specifications are subject to change without notice.
- To help save power consumption, some models will comply with ERP energy saving standard. When there is no audio input for 20 minutes, power will automatically cut-off. To turn power back on and resume playing, you will need to turn off the power and turn it on again.

Product Description

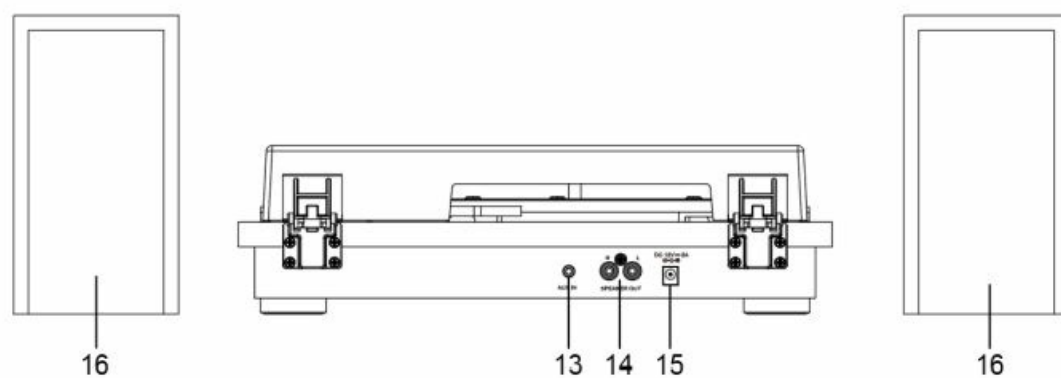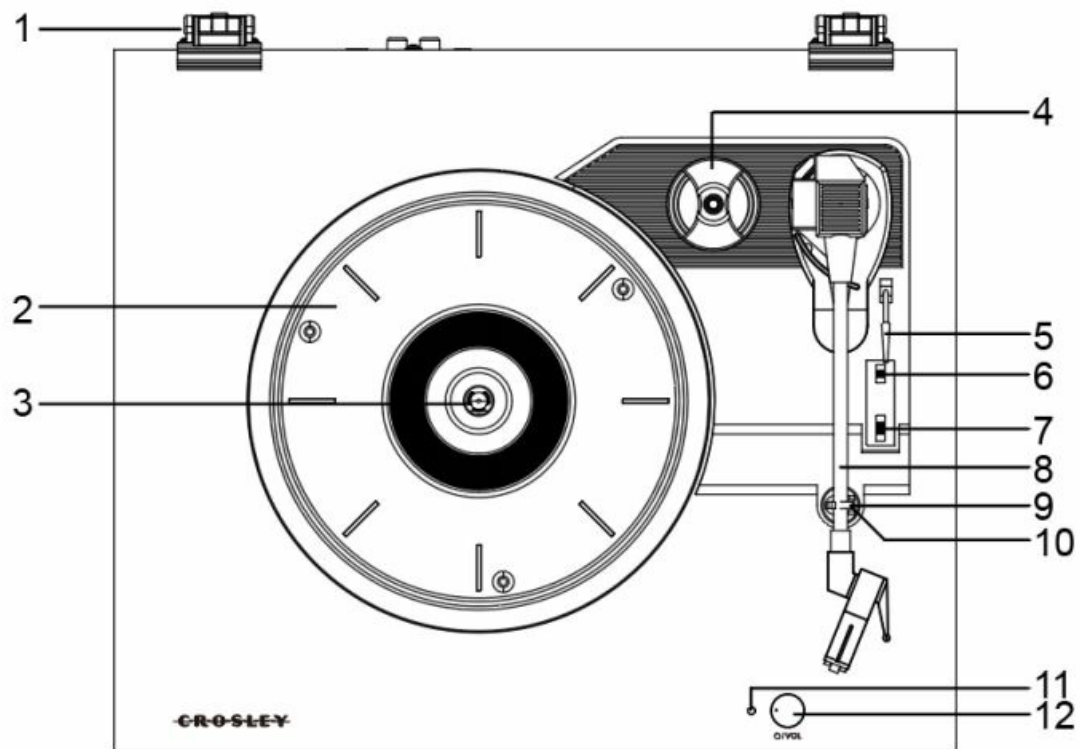

1. Hinge
2. Turntable Platter
3. Turntable Spindle
4. 45 RPM Adapter
5. Tonearm Lever
6. Auto Stop Switch
7. Speed Switch
8. Tonearm
9. Tonearm Clip
10. Tonearm Rest
11. Function Indicator
12. On/Off Volume Knob
13. Aux In Jack
14. Speaker Jacks
15. Power Jack
16. Speakers

 
Initial Setup

Essential Setup

1. Place the unit on a flat and level surface. The selected location should be stable and free from vibration.
2. Install the turntable lid to the hinges.
3. Connect the Speakers to the Speaker jack on the back of the unit.
4. Remove the tie-wrap that is holding the tonearm.
5. Connect the power adaptor to the Power Jack of the unit.

Note: Do not plug the AC power adaptor to power outlet before all the assembly is completed. Before turning the power on, make sure again all the connection settings are correct. Always turn off the power when connecting or disconnecting.

Two sets of feet are provided to protect furniture when using this unit. Placement options shown below. Please note that the feet can't be removed or readjusted once applied.

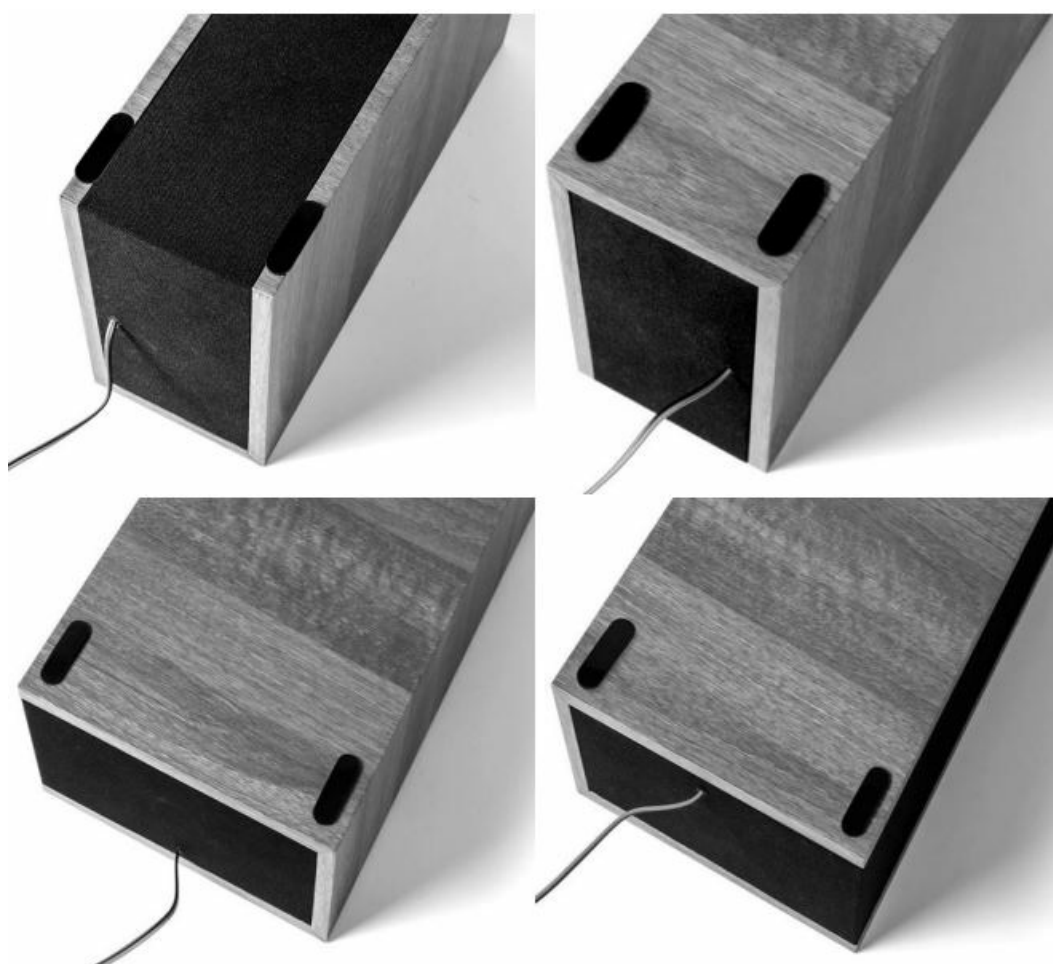

Auxiliary Connections

You can connect an audio device to this unit and play your music through its speakers. To do this, connect the 3.5mm auxiliary cable (not included) between your audio device, and the Aux In Jack of this unit and start playing the music. Note: The aux in connection will automatically override the turntable and Bluetooth functions. To resume using the turntable or Bluetooth functions, unplug the auxiliary cable from the aux in jack. The Function Indicator will be purple.

Turntable Operation

1. Rotate the On/Off Volume Knob to turn on the power.
2. Set the Speed Switch accordingly.
3. Place the record on the turntable. Use the 45 RPM Adapter if necessary.
4. Remove the stylus protector from the stylus assembly.

Note: To avoid stylus damage, make certain the included stylus guard is in place whenever the turntable is being moved or cleaned.

5. Release the tonearm Hold Down Clip.

Note: when the turntable is not in use, remember to lock it back and hold down the clip.

6. Use the Tonearm Lever to lift the tonearm.
7. Gently move the tonearm over the record where play is desired to begin and the record will start spinning. Set the Tonearm Lever back to the down position, the tonearm will descend slowly onto the record and begin to playback.

Note: The Function Indicator will be red.

8. When the record is finished playing, use the Tonearm Lever again to raise the Tonearm and then return it to the Tonearm Rest. Release the lever to let the tonearm sit back at its rest. To suspend the playback, repeat the same steps.
9. Lock the Tonearm Clip to secure the tonearm.

 
Platter Auto-stop

If the Auto-stop Switch is set to the ON position, the platter will stop spinning automatically when the record plays to the end. On some rare occasions, if the turntable stops playing before the end of the record, set the switch to the OFF position the turntable should overcome this issue.

Needle Replacement


Removing Needle

1. Gently pull down the front edge of the needle.
2. Pull the needle forward.
3. Pull out and remove.

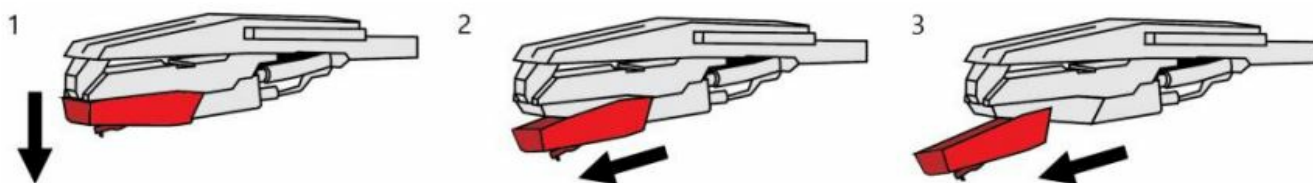

Installing Needle

 1. Position the needle with its tip facing down.
2. Line up the back of the needle with the cartridge.
3. Insert the needle with its front end at a downward angle and gently lift the front of the needle upward until it snaps into place.

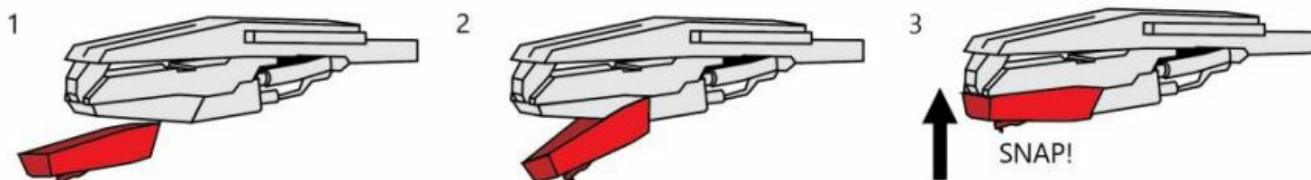

Bluetooth Operation

1. Rotate the On/Off Volume Knob to turn on the power.

Note: The function indicator will be flashing blue.

2. Turn on the Bluetooth feature of your audio device, search for “CROSLEY CR7502A-WA” and pair.
3. Once your device is successfully paired with the unit, you will hear a short confirmation sound from the unit, and the function indicator will be blue.
4. Play and stream music from your device to the unit.

Note: Bluetooth version – 5.3

If the tonearm isn't on the tonearm rest, it will not connect.

Turntable Maintenance

1. Do not touch the stylus tip with your fingers. Avoid bumping the stylus on the turntable mat or a record's edge.
2. Clean the stylus frequently with a soft brush with a back-to-front motion only.
3. Clean the records with a record cleaning brush and record cleaning solution to get rid of dust or grease.
4. Clean the turntable lid and turntable cabinet with a slightly damp microfiber cloth.

Note: Do not use a cleanser that contains alcohol, benzene, or any other harsh chemicals that can damage the paint and finish of the turntable.

** Crosley offers a product line of different cleaning accessories. Please ask your retailer or check out our website www.crosleyradio.com for more cleaning product information.

Troubleshooting

• There is no power

- The power adaptor is not connected correctly.
- No power at the power outlet.
- To help save power consumption, some models will comply with ERP energy saving standard. When there is no audio input for 20 minutes, their powers will automatically cut off. To turn power back on and resume playing, turn off the power and turn it on again.

• The turntable is spinning, but there is no sound, or the sound is not loud enough

- Stylus protector is still on.
- The tone arm is lifted by the lever.

• Bluetooth not connecting

- Forget the device then try connecting again.
- Ensure you are not too far away from the unit when connecting.
- Power cycle both devices and try steps to connect again.

FCC Statements

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, under part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirements.

To maintain compliance with FCC's RF exposure guidelines, the distance must be at least 20 cm between the radiator and your body, and fully supported by the operating and installation configurations of the transmitter and its antenna(s).

SIMPLIFIED EU DECLARATION OF CONFORMITY

Hereby, Modern Marketing Concepts Inc. dba Crosley Brands, declares that the radio equipment type complies with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following internet address: <http://crosleybrands.com/euDoC>

FAQ


- **What should I do if I encounter playback issues?**

Check if the Auto-stop Switch is set correctly and ensure proper placement of the record on the turntable. If issues persist, refer to troubleshooting section in the manual or contact customer service.


- **How do I clean the turntable platter?**

Use a soft cloth slightly dampened with water and mild detergent to gently wipe the turntable platter. Avoid using harsh chemicals or abrasive materials.

Documents / Resources

 <p>CROSLEY CR7502A-WA Riff Record Player with Speakers Instruction Manual</p>	<p>CROSLEY CR7502A Riff Record Player with Speakers [pdf] Instruction Manual CR7502A, AUSCR7502A, CR7502A-WA, CR7502A Riff Record Player with Speakers, CR7502A, Riff Record Player with Speakers, Record Player with Speakers, Player with Speakers, Speakers</p>
--	--

References

-  crosleyradio.com/
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.