



Crosley CR8005F-MT Cruiser Plus Bluetooth Record Player Instruction Manual

[Home](#) » [Support](#) » Crosley CR8005F-MT Cruiser Plus Bluetooth Record Player Instruction Manual 

Contents

- [1 Crosley CR8005F-MT Cruiser Plus Bluetooth Record Player](#)
- [2 Safety Instructions](#)
- [3 Items in this package](#)
- [4 Specifications](#)
- [5 Product Description](#)
- [6 Initial Setup](#)
- [7 Turntable Operation](#)
- [8 Needle Replacement](#)
- [9 Bluetooth Operation](#)
- [10 Turntable Maintenance](#)
- [11 Troubleshooting](#)
- [12 FCC Statements](#)
- [13 Frequently Asked Questions](#)
- [14 Video](#)



Crosley CR8005F-MT Cruiser Plus Bluetooth Record Player



Safety Instructions

Read and understand this entire manual before using this product. Keep these instructions for future reference.

1. Do not use this product near water.
2. This product should be operated only by the type of power source indicated on the marking label or in this instruction manual.
3. Do not defeat the safety purpose of the polarized plug. A polarized plug has two blades with one blade wider than the other. This plug will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet try reversing the plug. If the plug should still fail to fit, contact your electrician.
4. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.
5. Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
6. Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
7. Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
8. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
9. Do not use attachments not recommended by the product manufacturer as they may cause hazards.
10. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
11. Slots and openings in the cabinet are provided for ventilation and to ensure the reliable operation of the product and to protect it from overheating. Do not block or cover these openings.
12. Unplug the product during a lightning storm or when unused for long periods of time.

Items in this package

Before throwing away any packaging materials, please check thoroughly and make sure you find the following items that come along with this package:

- Turntable
- 45 RPM adapter
- Power adaptor

Please contact Crosley customer service if there is any accessory missing from the package. Retain the original packaging materials for exchange or return purposes.


Specifications

- Power: AC power adaptor, DC output 12V 0.5A
- Power consumption: 10W
- Speaker: 3", 4Ω, 3W x 2
- Turntable speed: 33 1/3, 45, 78 RPM
- Replacement needle: Crosley NP6

Note:

- Design and specifications are subject to change without notice.
- To help save power consumption, some models will comply with ERP energy-saving standards. When there is no audio input for 20 minutes, their powers will automatically cut-off. To turn power back on and resume playing, you will need to turn off the power and turn it on again.

Product Description

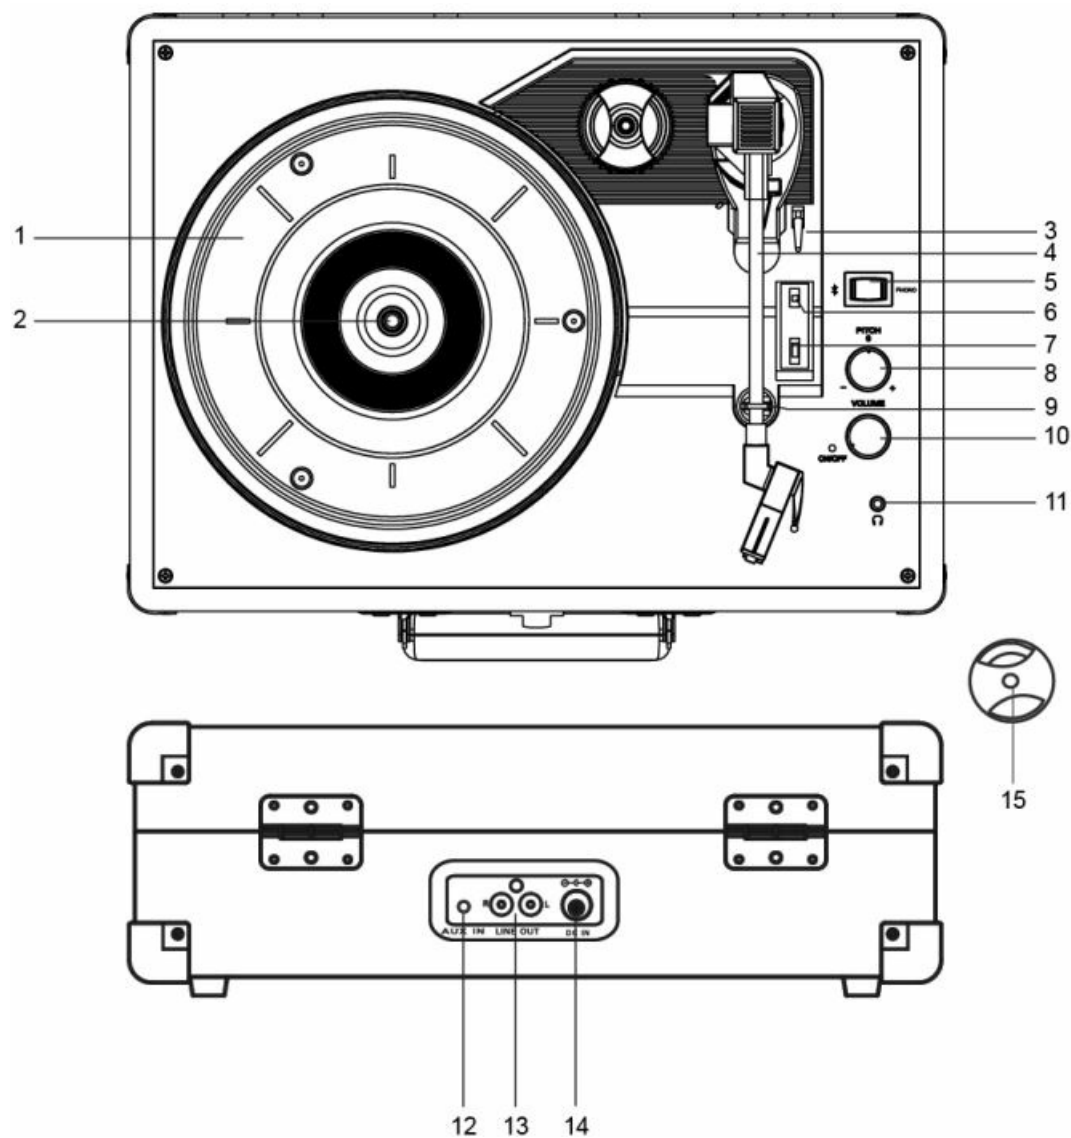

1. Turntable Platter
2. Turntable Spindle
3. Tonearm Lever
4. Tonearm
5. Function Switch
6. Auto-stop Switch
7. Speed Switch
8. Pitch Control
9. Hold Down Clip
10. On/Off-Volume Knob
11. Headphone Jack
12. Aux In Jack
13. RCA Jacks
14. Power Jack
15. 45 RPM Adapter

Initial Setup

Essential Setup

1. Place the unit on a flat and level surface. The selected location should be stable and free from vibration.
2. Remove the tie-wrap that is holding the tonearm.
3. Connect the AC adaptor to the Power Jack of the unit.

Note

Do not plug the AC power adaptor into the power outlet before all the assembly is completed. Before turning the power on, make sure again all the connection settings are correct. Always turn off the power when connecting or disconnecting.

Stereo System Connection**RCA Jacks**

- The RCA Jacks output analog line-level signals and could be connected directly with a pair of active/powered speakers or the appropriate input of your stereo system.
- The Red plug connects with the Right channel and the White plug connects with the Left channel.

Note

The RCA Jacks are not designed to be connected directly to the passive/unpowered speakers. If connected to the passive speakers, the volume level will be very low.

Aux Input Connection

You can connect an audio device to this unit and play your music through its speakers. To do this, connect the 3.5mm auxiliary cable between your audio device and the Aux In Jack of this unit and start playing the music.

Note

The aux in connection will automatically override the turntable function. To resume using the turntable function, unplug the auxiliary cable from the aux-in jack.

Turntable Operation

1. Rotate the On/Off Volume Knob to turn on the power.
2. Set the Speed Switch accordingly.
3. Place the record on the turntable. Use the 45 RPM Adapter if necessary.
4. Remove the stylus protector from the stylus assembly.
Note: To avoid stylus damage, make certain the included stylus guard is in place whenever the turntable is being moved or cleaned.
5. Release the tonearm Hold Down Clip.
Note: when the turntable is not in use, remember to lock back and hold down the clip.
6. Use the Tonearm Lever to lift up the tonearm.
7. Gently move the tonearm over the record where play is desired to begin. Set the Tonearm Lever back to the down position, the tonearm will descend slowly onto the record and begin to playback.
8. When the record is finished playing, use the Tonearm Lever again to raise the Tonearm and then return it to the Tonearm Rest. Release the lever to let the tonearm sit back at its rest. To suspend the playback, repeat the same steps.
9. Lock the Tonearm Clip to secure the tonearm.

Platter Auto-stop

If the Auto-stop Switch is set to the ON position, the platter will stop spinning automatically when the record plays to the end. On some rare occasions, if the turntable stops playing before the end of the record, set the switch to OFF position the turntable should overcome this issue.


Pitch Control

The turntable speed can be increased or decreased by approximately 10% by rotating the Pitch Control Knob. To increase the speed, turn the Pitch Control Knob clockwise. To decrease the speed, turn the knob counter-clockwise.

Needle Replacement


Removing Needle

1. Gently pull down the front edge of the needle.
2. Pull the needle forward.
3. Pull out and remove.

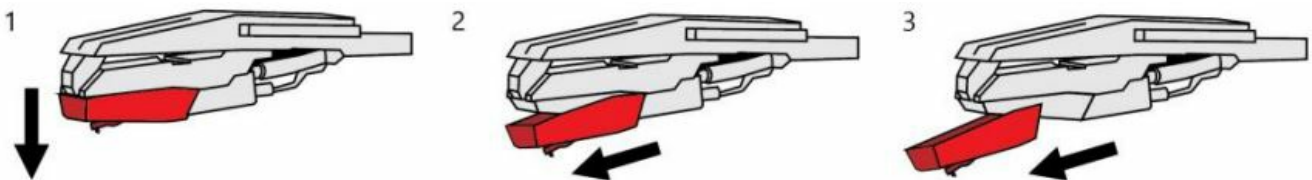

Installing Needle

1. Position the needle with its tip facing down.
2. Line up the back of the needle with the cartridge.
3. Insert the needle with its front end at a downward angle and gently lift the front of the needle upward until it snaps into place.

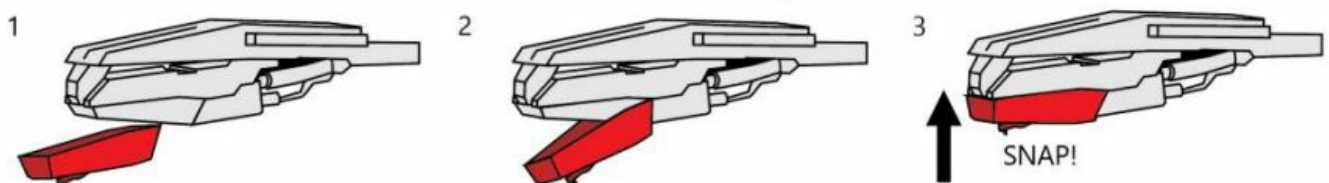

Bluetooth Operation

1. Turn the Function Switch to Bluetooth mode , you will hear an activation sound from the unit.
2. Turn on the Bluetooth feature of your audio device, search for “Crosley CR8005” and pair.
3. Once your device is successfully paired with the unit, you will hear a short confirmation sound from the unit.
4. Play and stream music from your device to the unit.

Note

Bluetooth version – 4.2

Turntable Maintenance

1. Do not touch the stylus tip with your fingers. Avoid bumping the stylus on the turntable mat or a record's edge.
2. Clean the stylus frequently with a soft brush with a back-to-front motion only.
3. Clean the records to get rid of dust or grease with a record cleaning brush and record cleaning solution.
4. Clean the turntable lid and turntable cabinet with a slightly dampened microfiber cloth.

Note:

Do not use cleanser other than that contains alcohol, benzene or any other harsh chemicals, which might damage the paint and finish of the turntable.

Crosley offers a product line of different cleaning accessories. Please ask your retailer or check out our website www.crosleyradio.com for more cleaning product information.

Troubleshooting

There is no power

- The power adaptor is not connected correctly.
- No power at the power outlet.
- To help save power consumption, some models will comply with ERP energy-saving standard. When there is no audio input for 20 minutes, their powers will automatically cut-off. To turn the power back on and resume playing, turn off the power and turn it on again.

The power is on, but the platter does not turn

- The turntable's drive belt has slipped off.
- An aux-in cable is plugged into the aux-in jack, unplug it.

The turntable is spinning, but there is no sound, or sound not loud enough

- The Stylus protector is still on.
- The tonearm is lifted up by the lever.
- The headphone is plugged in.

FCC Statements

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.

- Connect the equipment to a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Frequently Asked Questions

Does the tone arm lift and return to the starting position after playing

This item does not have an auto return tone arm. You will have to manually return it to the tone armrest.
Kindest regards,

Does this connect with an apple HomePod as well?

It would depend on the plug or plug adapters.

The turntable stops spinning when i switch to bluetooth. Isvthere a trick?

It sounds like maybe you don't have this specific model. Some of our units have only a bluetooth input option and some of them have both a bluetooth input and a bluetooth output.

Does this have an anti-skate feature?

This item does not have an anti skate feature.

Does it always need to be connected?

This item does always need to be connected to the power outlet.

How do you make the top stand up straight on its own?

I have it as a gift so I don't know how you do that ask the company who makes the product.

Does this have a cueing arm?

Yes, the cueing lever is at the rear of the tonearm.

What is the difference between the Bluetooth in vs. Bluetooth in/out?

It means you can also use the speaker in this to play music from your phone, as well as connect this device to a Bluetooth speaker to play the record player.

Yes, the model number CR8005F-MT does have bluetooth in/out. There is an option that is only bluetooth. That model number is CR8005D-BK. Both options are on the same page.

Can I use wireless headphones with this model?

Some models you can the model which I got for my niece you can it will say on the box if you can or not. Plus you want a wireless speak For the sound is ok but when you want to turn it up you are better off with a Sony or JBL wireless speaker any wireless will do but I know a JBL and Sony work with it not sure about other brands

I have lost the power cord. What exact power cord should I replace it with?

In this model, there are two different AC adapters. Here are the specifications. The output is 12V 0.5A or 5V 1A. It will specify on the back of the unit on the model information tag or in the instruction manual.

Can i use it in europe(220v/ 50 hz)?

We do not recommend taking a unit outside of the country it was made for and it can void the warranty. This unit is only meant for North American power.

Does the Bluetooth in/out version of this product connect to bluetooth speakers?

Yes, The Bluetooth out can connect to an external Bluetooth speaker and headphones.

Video



[Download this PDF Link: Orley PR605PWL / O / O B605P1s Bluetooth Record Player Instruction Manual Speed-Bluetooth-InOut-Turntablee.mp4](#)

[Manuals+.](#)