



CROSLEY CT101A Cassette Player Instruction Manual

[Home](#) » [Crosley](#) » CROSLEY CT101A Cassette Player Instruction Manual 

Contents

- [1 CROSLEY CT101A Cassette Player](#)
- [2 Safety Instructions](#)
- [3 Specifications](#)
- [4 Product Description](#)
- [5 Radio Operation](#)
- [6 Cassette Recording](#)
- [7 Bluetooth Operation](#)
- [8 FCC Statements](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

CROSLEY®

CROSLEY CT101A Cassette Player



Safety Instructions

Read and understand this entire manual before using this product. Keep these instructions for future reference.

1. Do not use this product near water.
2. This product should be operated only by the type of power source indicated on the marking label or in this instruction manual.
3. Do not defeat the safety purpose of the polarized plug. A polarized plug has two blades with one blade wider than the other. This plug will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet try reversing the plug. If the plug should still fails to fit, contact your electrician.
4. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.
5. Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
6. Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
7. Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
8. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
9. Do not use attachments not recommended by the product manufacturer as they may cause hazards.
10. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
11. Slots and openings in the cabinet are provided for ventilation to ensure the reliable operation of the product and to protect it from overheating. Do not block or cover these openings.

12. Unplug the product during a lightning storm or when unused for long periods of time.
13. This equipment is a Class II or double insulated electrical appliance.

CAUTION

- RISK OF ELECTRIC SHOCK
- DO NOT OPEN

1. This lightning flash with an arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
2. **Warning:** To reduce the risk of electric shock, do not remove the cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
3. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.
4. The mains plug is used as a disconnect device, the disconnect device shall remain readily operable.
5. replacement of a BATTERY with an incorrect type that can defeat a SAFEGUARD;
6. disposal of a BATTERY into fire or a hot oven, or mechanically crushing or cutting of a BATTERY, that can result in an EXPLOSION;
7. leaving a BATTERY in an extremely high temperature surrounding environment that can result in an EXPLOSION or the leakage of flammable liquid or gas;
8. A BATTERY subjected to extremely low air pressure may result in an EXPLOSION or the leakage of flammable liquid or gas.

Items in this package

Before throwing away any packaging materials, please check thoroughly and make sure you find the following items that come along with this package:

- Cassette Player
- Power plug

Please contact Crosley customer service if there is any accessory missing from the package. Retain the original packaging materials for exchange or return purposes.

 
Specifications

- Power AC 120V / 60Hz
- Battery Supply “C” X 4 (Not Included)
- Power Output 1.2 W
- Power consumption 5 W
- Speaker 8 Ω 2W 3”
- Frequency Range AM 540 – 1710 kHz
- FM 88 – 108 MHz Operational Temperature Range 0°C to 70°C

Note

- Design and specifications are subject to change without notice.
- To help save power consumption, some models will comply with ERP energy-saving standards.
- When there is no audio input for 20 minutes, their powers will automatically cut off. To turn the power back on and resume playing, you will need to turn off the power and turn it on again.

Product Description

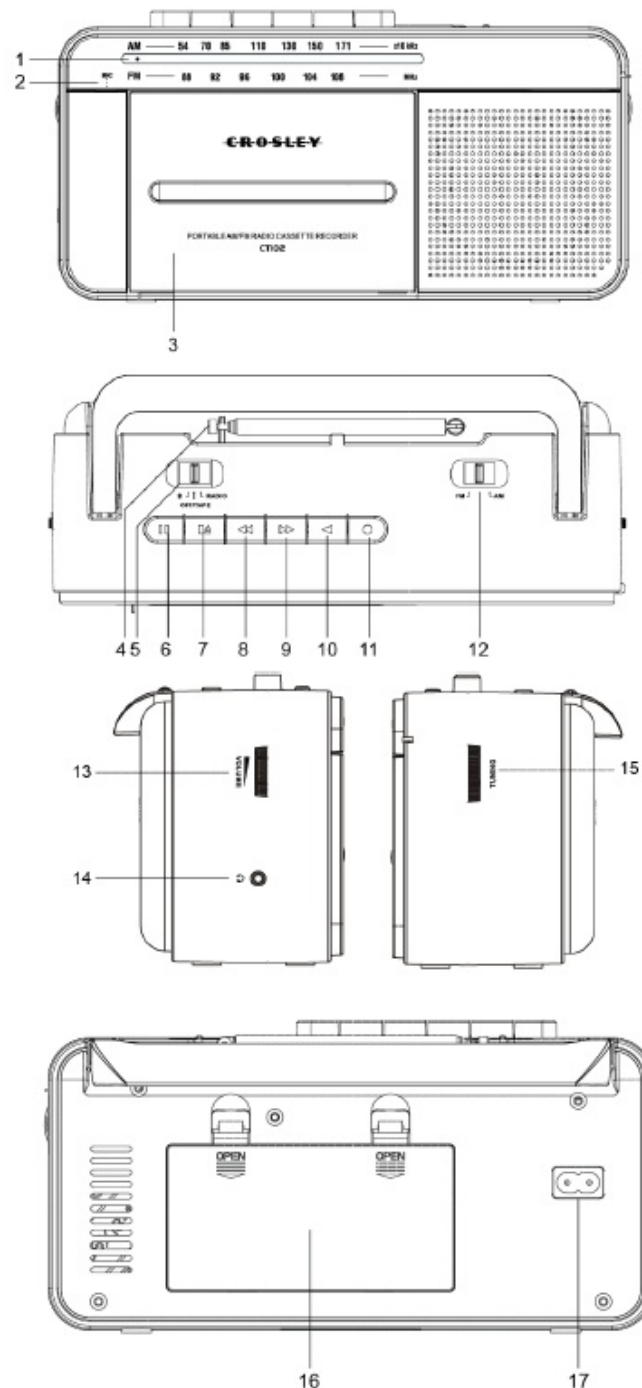

1. Dial Scale
2. Microphone
3. Cassette Tray
4. External Antenna
5. Function Switch
6. Pause Button

7. Stop/Eject Button
8. Rewind Button
9. Fast Forward Button
10. Play Button
11. Record Button
12. Band Switch
13. Volume Knob
14. Headphone Jack
15. Tuning Knob
16. Battery Compartment
17. Power Jack

Radio Operation

1. Set the Function Switch to RADIO position
2. Set the Band Switch to FM or AM position.
3. Rotate the Tuning Knob for the desired radio station.
4. To turn off the unit, set the Function Switch to the OFF/TAPE position and make sure none of the cassette buttons are pressed in.

Note: When operating the FM band radio, pull up the TELESCOPIC ANTENNA, and adjust the position to get better reception.

Cassette Operation

1. Set the Function Switch to the TAPE position.
2. Insert the prerecorded cassette into the cassette tray, and press the Play button.
3. To fast forward, press the Fast Forward button in. To stop fast forwarding and return to the playback mode, press the Play button.
4. To rewind, press the Rewind button in. To stop rewinding and return to the playback mode, press the Play button.
5. To stop the playback, press the Stop/Eject button once. To eject the cassette, press the Stop/Eject button again.
6. To turn off the unit, set the Function Switch to the OFF/TAPE position and make sure none of the cassette buttons are pressed.

 
Note: Remove the cassette from the cassette holder when it is not in use.

Cassette Recording

MICROPHONE to TAPE

1. Set the Function Switch to TAPE position
2. Insert a cassette tape, and press the RECORD button to record the sounds through the microphone.

Note: To prevent accidental recording, break off the cassette tab from side A or B.

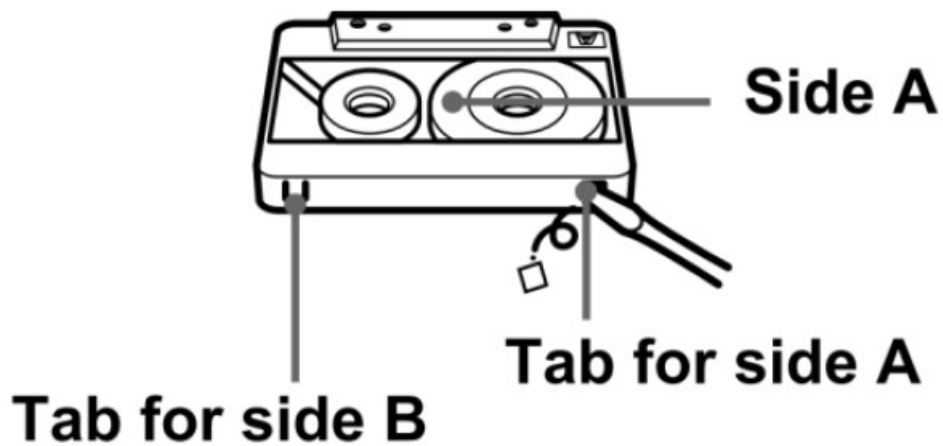


1. To pause recoding, press the Pause button.
2. To stop recording, press the Stop/Eject button.

RADIO to TAPE

1. Set the Function Switch to RADIO position
2. Insert a cassette tape, and press the RECORD button to record the sounds from the radio.

 Note: To prevent accidental recording, break off the cassette tab from side A or B.

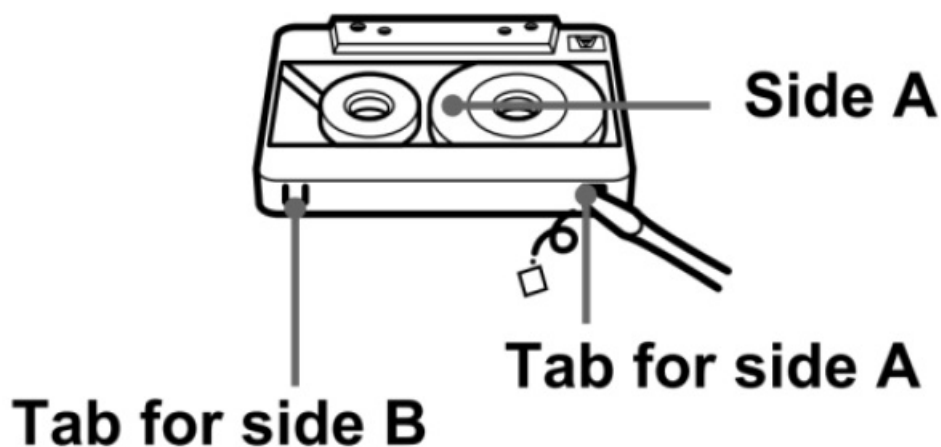


1. To record, press the Record button to start recording.
2. To pause recoding, press the Pause button.
3. To stop recording, press the Stop/Eject button.

BT to TAPE

1. Set the Function Switch to BT position
2. Insert a cassette tape, and press the RECORD button to record the sounds from USB/SD.

 Note: To prevent accidental recording, break off the cassette tab from side A or B.

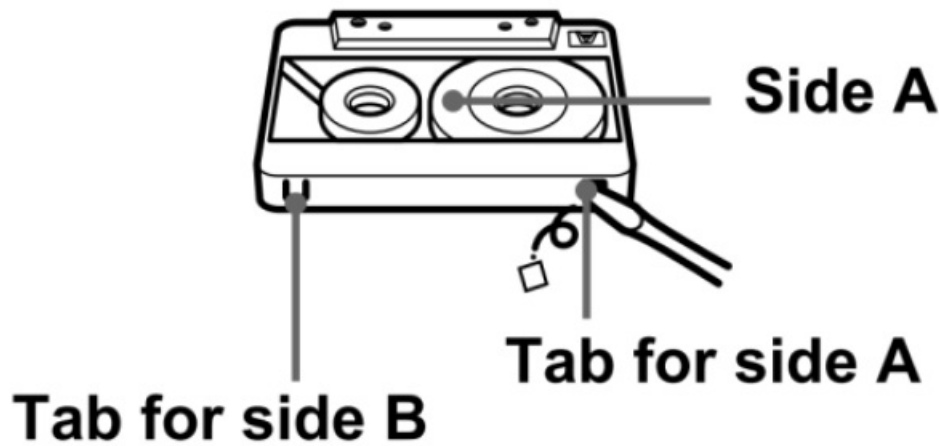

1. To pause recoding, press the Pause button.
2. To stop recording, press the Stop/Eject button.

Bluetooth Operation

1. Set the Function Switch to BT position, you will hear an activation sound from the unit.
2. Turn on the Bluetooth feature of your audio device, search for “CROSLEY CT102A” and pair.
3. Once your device is successfully paired with the unit, you will hear a short confirmation sound from the unit.
4. Play and stream music from your device to the unit.
5. To turn off the unit, set the Function Switch to the OFF/TAPE position and make sure none of the cassette buttons are pressed.

Note: Bluetooth version – 5.0

FCC Statements

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

RF warning statement

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Documents / Resources

	<p>CROSLEY CT101A Cassette Player [pdf] Instruction Manual CT101A, AUSCT101A, CT101A Cassette Player, Cassette Player, Player</p>
---	---

References

-  crosleyradio.com