



# CRUMAR Mojo Classic User Guide

[Home](#) » [CRUMAR](#) » CRUMAR Mojo Classic User Guide 



THE ULTIMATE TONEWHEEL ORGAN EXPERIENCE

**3 KNOBS**  
Used for Volume, drive, reverb.

**SHIFT BUTTON**  
Use this button in combination with rotary speed to enable/disable the internal rotary speaker simulation.  
Use this button in combination with manual button of lower section to enable/disable pedal-to-lower feature.  
Use this button in combination with notes of the upper manual to select the transposition amount.


**VIBRATO/CHORUS CONTROLS**  
Two buttons, one large knob and 6 leds for selection of vibrato and chorus effect.

**ROTARY SPEAKER SPEED BUTTON**  
Push this button to switch speeds between slow and fast. Push and hold to stop the rotation.



**UPPER MANUAL SELECTION BUTTONS**  
2 Buttons for drawbar presets.  
1 Button for manual mode.  
Hold manual for cancel mode.  
In manual mode, press the «manual» button to activate the "hold" mode.

**This LED becomes lit when a transposition is active.**

**This LED becomes lit when rotary speaker simulation is deactivated.**

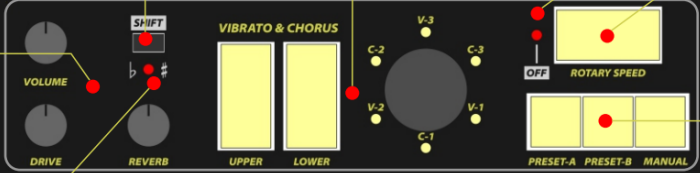

The diagram shows the control panel with the following components labeled: VOLUME, DRIVE, REVERB (knobs); SHIFT (button); VIBRATO & CHORUS (two vertical buttons); UPPER and LOWER (manual sections); C-1, C-2, C-3, V-1, V-2, V-3 (LEDs); ROTARY SPEED (button with OFF indicator); PRESET-A, PRESET-B, and MANUAL (buttons). Callout lines connect the text blocks to specific controls on the panel.

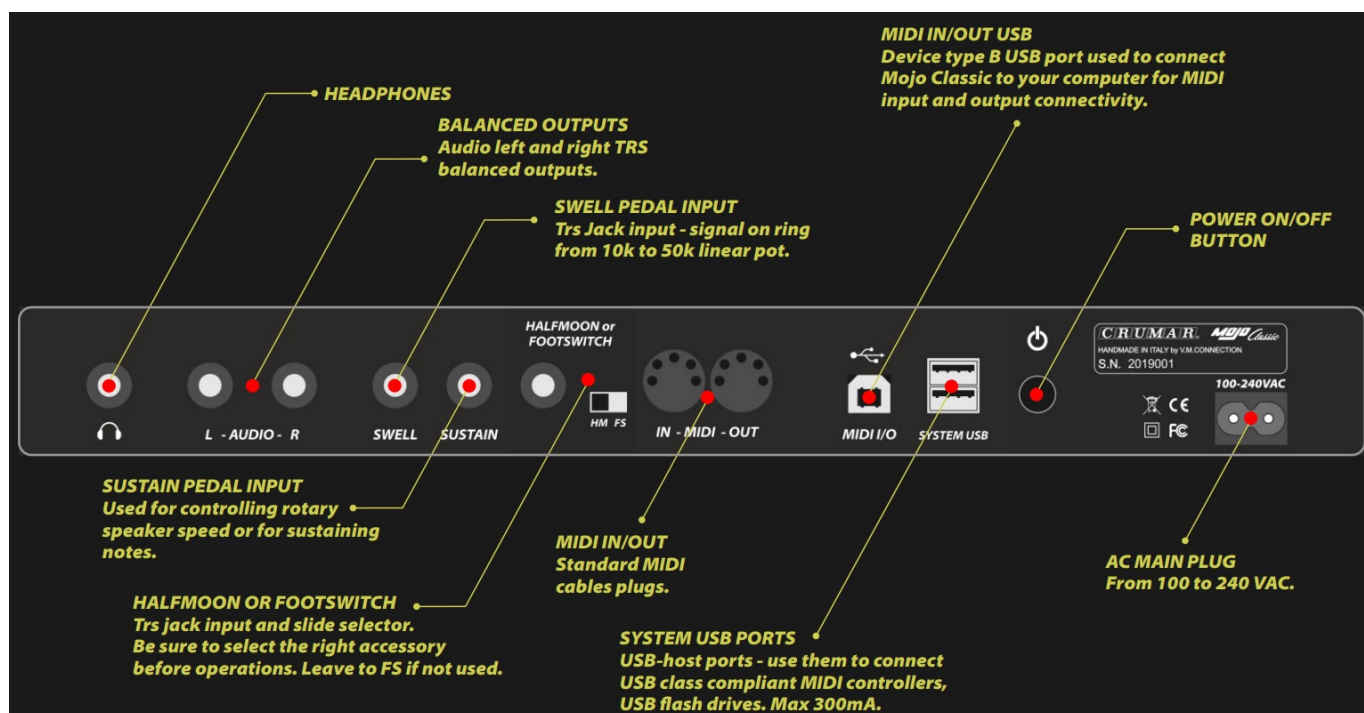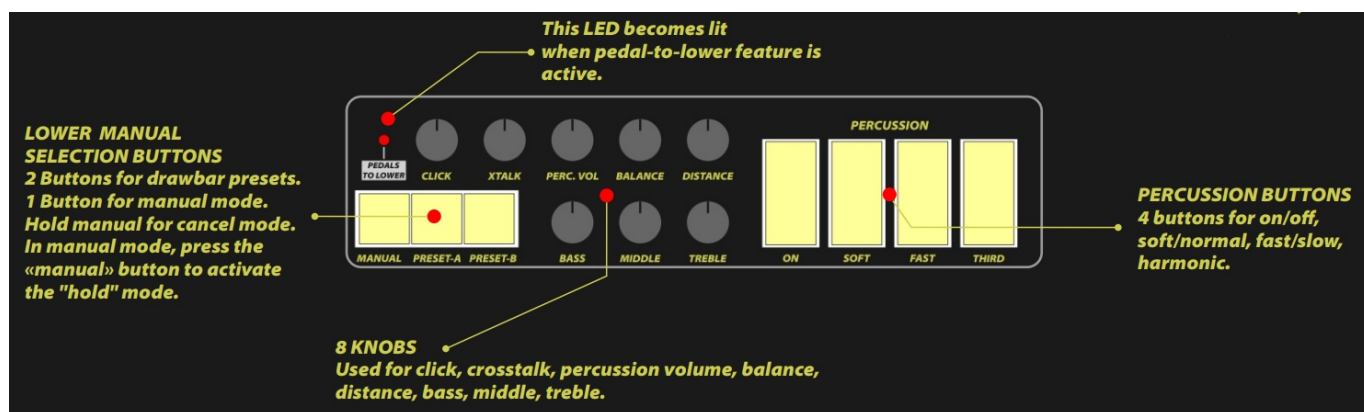 

## Getting Started

1. Connect AC cord.
2. Connect audio outs to your mixer/amp.
3. Power the Mojo Classic on.
4. Start playing.

Download the full PDF manual at [www.crumanit/support](http://www.crumanit/support)

### Contents

- 1 Documents / Resources
  - 1.1 References
  - 2 Related Posts

## Documents / Resources



## [CRUMAR Mojo Classic](#) [pdf] User Guide

CRUMAR, Mojo Classic

## References

- [C crumar.it/support](https://crumar.it/support)

Manuals+