



CSA-IOT Co002 Connecte Smart Thermostat User Manual

[Home](#) » [CSA-IOT](#) » CSA-IOT Co002 Connecte Smart Thermostat User Manual 

CSA-IOT Co002 Connecte Smart Thermostat User Manual




 
 

Contents

- [1 Description of screen indicators](#)
- [2 Functions](#)
- [3 Electrical data](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)



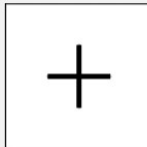
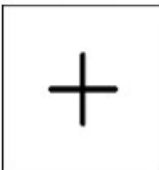

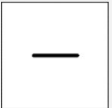

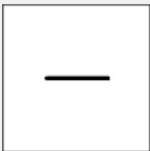
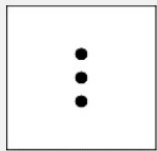
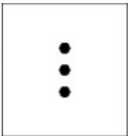
Description of screen indicators

- a. ZigBee icon. The ZigBee icon will flash when the thermostat searches for networks and lights up when connected.
- b. Day (1-7, Monday-Sunday) and time. This is set automatically after a short time when connected to the ZigBee gateway.
- c. Home and Away mode.
- d. Heating on / off indicator. If the thermostat heats the floor, the lines will move to the right. If maximum guard is used, the lines flash if the temperature limit is exceeded.

- e. Indicator flashes when open window is detected.
- f. Manual / Auto indicator
- g. Indicates that the temperature is set.
- h. Indicator for active child lock / button lock

 : On/Off button
  : Inc. temp.
  : Lower temp.
  : Mode button

 
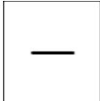
Functions





Button	Short press	Long press
	Confirm/go back	Turn ON/OFF
 + 		Change between air and floor sensor (air and floor mode)
	Temperature increase	Enter menu
 + 		Open advanced settings
	Temperature decrease	Start ZigBee pairing
 + 		Lock/Unlock
	Change between home and away mode	Display date in MM/DD format

To control the thermostat remotely it must be added to a ZigBee gateway

1. Start the process of adding new devices to your ZigBee gateway and follow the instructions.
2. To put the thermostat in pairing mode: Long press until the ZigBee icon flashes
3. Continue the process of adding new devices to the app.

Advanced settings

When the thermostat is on, press  and  hold and (5s) simultaneously to open advanced settings.

- You can change settings with  or 
- Press  to select the settings and proceed.
- To save the changes and exit advanced settings, press 

1. Sensor type

- 00: Air sensor / Internal
- 01: Floor sensor / External
- 02: Max guard / regulator on
air temperature and limiter
with floor sensor

2. Floor sensor type / External

- 0: 10 kOhm
- 1: 12 kOhm
- 2: 15 kOhm
- 3: 47 kOhm

3. Max Guarding Temperature

This must be set in the thermostat.
20-95 ° C, Standard is 27 ° C, '-' No limit.

4. Turn

1-9 ° C, Standard is 2 ° C

5. Calibration

-9 to + 9 ° C, Standard is 0 ° C

6. Highest set point

35-90 ° C, Standard is 35 ° C

7. Lowest setpoint

0-30 ° C, Standard is 5 ° C

8. Home mode setpoint

The standard is 22 ° C

9. Setpoint for away mode


The default is 15 ° C

10. Brightness in sleep mode
1-10, default is 1
11. Open window detection
0 = Disabled 1 = Active
12. Restart the system
Press + or – to change ‘-’ to ‘==’ and wait for 5s
13. Reset to factory settings
Press + or – to change ‘-’ to ‘==’ and wait for 5s

Electrical data

- Power: 230 V / 50 Hz
- Circuit breaker: Max 16 A
- Maximum load: 3600 W
- 1-pole electronic relay
- Internal power supply with galvanic isolation
- Do not use self-regulating heating cable
- Do not use for contactor control

Documents / Resources

	<p>CSA-IOT Co002 Connecte Smart Thermostat [pdf] User Manual Co002 Connecte Smart Thermostat, Co002, Connecte Smart Thermostat, Smart Thermostat, T hermostat</p>
---	---