



CTC BSS 7006 Bluetooth Soundsystem Instruction Manual

[Home](#) » [CTC](#) » CTC BSS 7006 Bluetooth Soundsystem Instruction Manual 



BSS 7006 Bluetooth Soundsystem
Instruction Manual




Contents

- 1 BSS 7006 Bluetooth Soundsystem
- 2 Safety Instructions
- 3 Overview of the Components
- 4 Charging the Integrated Battery
- 5 Use
- 6 Operation
- 7 Maintenance and Cleaning
- 8 Troubleshooting
- 9 Technical Data
- 10 Notice of Directive Conformity
- 11 Disposal
- 12 Documents / Resources
 - 12.1 References
- 13 Related Posts

BSS 7006 Bluetooth Soundsystem

Overview of the Components

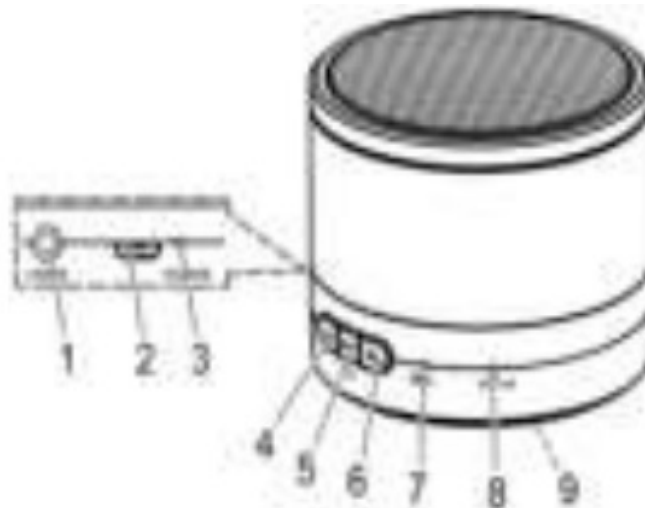

Safety Instructions

Read the operating instructions carefully before putting the device into operation and keep the instructions including the warranty, the receipt and, if possible, the box with the internal packing. If you give this device to other people, please also pass on the operating instructions.

- The device is designed exclusively for private use and or the envisaged purpose. This device is not fit for commercial use.
- Do not use the device with wet hands.
- To minimize the risk of fire or electrical shock, subject the device neither to rain nor humidity. Do not operate the device in the direct proximity of water (e.g. bathroom swimming pool).
- Keep the device away from heat, direct sunlight, and sharp edges.
- Keep the device away from naked flames.
- To avoid a static charge, do not utilize the device in an extremely dry climate.
- The device needs to be examined regularly for signs of damage or material fatigue. If damage is noticed, the device may no longer be used.

- Do not repair the unit yourself but contact an authorized specialist.
- Do not use the system in extremely hot, cold, dusty, or humid places.
- Make sure that connected cables are not a tripping hazard.
- Do not cover any ventilation openings with objects such as newspapers, tablecloths, curtains, etc.
- Avoid damage to your ears by turning the volume up too high.

Children and Frail Individuals

In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene, etc.) out of their reach.

WARNING: Do not allow small children to play with the foil. There is a danger of suffocation!

Special Safety Information Concerning the Built-in Battery

CAUTION:

- Risk of explosion in case of improper replacement of the battery. Replace only by the same or an equivalent type.
- Do not expose the built-in battery to hard impacts or pressures.

Overview of the Components

1. 3.5 mm socket (LINE IN)
2. Micro-B USB charging socket (CHARGE)
3. Charging indicator light
4. Previous track / Reduce volume (-)
5. Play / Pause / Accept call, end call, reject call, dial phone number last dialed (▶||)
6. Next track / Increase volume (+)
7. Microphone (MIC)
8. Operation mode – indicator light (STATUS)
9. POWER ON / OFF switch (On / Off)

Scope of Delivery (not shown)

- 1 Charger cable (Typ A USB auf Micro-B USB)
- 1 Audio cable (3.5 mm jack plug)

Charging the Integrated Battery

The device is operated via the integrated lithium battery. Charge the battery as follows:

1. Plug the micro B USB plug of the charging cable into the jack (2) of the device. Connect the USB plug to a powered-on computer. The indicator lamp lights up red and the battery charges.
2. When the battery is fully charged, the indicator light (3) will go out.
3. Remove the charger cable from the speaker and PC.

CAUTION: Never leave the device unattended when it is charging.

NOTE:

- The battery is only charged while the PC is switched on.

- Do not connect the player for a long period of time to a laptop computer disconnected from mains power. Otherwise, the laptop computer's battery may be discharged.
- The charging time varies according to battery use.
- When the system is not used for long periods, charge the battery at least every 6 to 12 weeks. The battery will also constantly discharge when switched off.
- When the battery is almost empty, the music playback stops at periodic intervals. Shortly afterward, humming noises are heard.

Use

You have two ways to use the device: Cordless via Bluetooth or by cable.

Cordless via Bluetooth

NOTE: When an audio cable is connected to the LINE IN jack (1), a connection cannot be established via Bluetooth.

Bluetooth involves technology for wireless radio connection of devices over a short distance. The function radius is thereby restricted device-dependant to approx. 10 meters.

In order to transfer music wirelessly to the loudspeaker, your player must support the A2DP profile (Advanced Audio Distribution Profile). To be able to operate the source by remote control, the player needs to support the AVRCP profile (**A**udio **V**ideo **R**emote **C**ontrol **P**rofile). Due to the different device manufacturers, models, and software versions, full functionality cannot be guaranteed.

Depending on the playback device used, simultaneous coupling with several devices is possible. This Bluetooth technology is called "Multipoint". Multipoint makes it possible, for example, to connect two smartphones to one headphone, whereby you play music from one smartphone and use the other one to make calls. However, it is a prerequisite, that both devices support this function.

· Logging on Devices (Pairing) Before you listen to music via the device, you must pair the devices.


1. Ensure, that the Bluetooth function is activated in your player (e. g. mobile phone). For this, refer to the operation manual of your player.

Switch the speaker on by setting the POWER switch to "ON". Two low beeps are heard. The system is now in "Automatic Connection" mode. To connect a new play- back device to the speaker, wait until you hear clear beeps. The device is now set to pairing mode.

2. Choose the Bluetooth menu in your player and register the device in your player. For this, refer to the operation manual of your player. The device "BSS 7006" will show in your player as a selection.

Once the connection is successful, acknowledgment tones can be heard from the speaker.

NOTE:

- If the Bluetooth version of your playback device is under V 2.1, you have to enter the password "0000" to connect the devices.
- Depending on the device manufacturer, you need to perform the registration (Pairing) again to connect the devices.
- Bluetooth compatibility cannot be ensured for devices (e. g. mobile phones) getting released in the future.
- To be able to transfer audio data, Bluetooth needs to stay activated in your player. ·
- If a mobile phone on which you are playing music receives a call, the music will be interrupted. Press  button (5) to accept the call. The sound is replayed by the loudspeaker. Speak into the microphone on the device or transfer the conversation to your mobile phone. To do this, observe the overlay in the display of the mobile phone. After you have ended the call, the devices are connected to each other again and playback continues.

By Cable

1. Connect a 3.5 mm stereo audio cable to an external audio source. If required, use a suitable adapter. (Adapter not included.)
2. Insert the other end of the cable into the LINE IN jack (1) on the device.
3. Switch the speaker on by setting the POWER switch to "ON". A beep is heard. The indicator light (8) lights up.
4. Start the music playback.
5. Control the volume on the external audio source.

Operation

NOTE: Not all the functions may be supported depending on the playback device.

Switching the Device On / Off (9)

- Switch the speaker on by setting the POWER switch to "ON". Two low beeps are heard. The control light (8) will start to blink.

NOTE: Automatic connection If supported by your player (e. g. mobile phone), the devices will be connected automatically. The prerequisite for this is:

- The devices were already connected with each other.
- Bluetooth is activated in your player.
- Switch the speaker off by setting the POWER switch to "OFF".

NOTE:

- To save the battery, switch off the speaker when not in use.
- After approx. 10 minutes without a Bluetooth connection, the headphones switch off automatically. In order to use the device again, set the POWER switch to "OFF" and then to "ON" again.

Button +

- Press and hold the button to increase the volume. Once the maximum volume is reached, a beep will sound.
- Press the button briefly to select the next track.

Button

- Press the button briefly to interrupt or restart playback.
- Press the button 2 x briefly to call the last dialed number.
- Press the button to answer an incoming call. Press the button again to end the call.
- Press and hold the button to reject an incoming call.

Button –

- Press and hold the button to decrease the volume.

- Press the button 1 x briefly to play back the current piece of music from the beginning.
- Press the button 2 x briefly to select the previous track.

Maintenance and Cleaning

CAUTION: Never immerse the unit in the water!

- There are no parts inside the device that can be maintained by the user.
- Clean the speaker with a slightly damp cloth without a cleaning agent.

Troubleshooting

Symptoms	Possible cause	Solution
No audio signal during playback through AUX.	The sound was muted on the loudspeaker.	Press the button to turn the sound back on.
No audio signal during Bluetooth connection.	Speaker is not paired to the audio source.	Check whether the connection exists. If necessary, pair the speaker to the audio source again.
	Volume is too low.	Increase the volume on the speaker and/or the audio source.

Symptoms	Possible cause	Solution
Cannot connect speaker.	Bluetooth is turned off on the audio source.	Turn the Bluetooth function on in the audio source.
	The Bluetooth version is not supported.	Use another playback unit.
	Audio cable is connected.	Remove the cable.

Technical Data

Model:.....BSS 7006

Audio connection:3.5 mm stereo jack

Net weight: approx. 0.26 kg

Power supply:.....DC 5 V

Battery:..... 3,7 V 400 mAh lithium-Ions

Charging time:..... approx. 2 hours

Operating time:..... approx. 5 hours

Bluetooth support:.....V3.0 + EDR

Maximum radio-frequency power transmitted: ..2.5mW

Range:.....approx. 10 meters

Transmitting frequency:2.402 – 2.480 GHz

Protocols:A2DP, AVRCP, HFP

The right to make technical and design modifications in the course of continuous product development remains reserved.

Notice of Directive Conformity

Hereby, CTC Clatronic International GmbH declares that the radio equipment type BSS 7006 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.sli24.de In the "Download" area, please enter the model name BSS 7006. Tested for operation in Great Britain.

Disposal



Battery Disposal The device has a rechargeable battery. Used batteries and accumulators do not belong in household waste. The batteries/accumulators must be removed before the product goes to waste disposal. For this, consult qualified specialized personnel.



Environmental Protection


Do not dispose of the device at the end of its service life with normal household waste. Bring it to the official collection point for recycling. By doing this, you help protect the environment.

www.ctcgermany.de Made in P.R.C.



Stand 08/2017
BSS7006_IM_A4
14.09.17

Documents / Resources

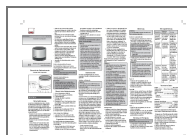

[CTC BSS 7006 Bluetooth Soundsystem](#) [pdf] Instruction Manual
BSS 7006 Bluetooth Soundsystem, BSS 7006, Bluetooth Soundsystem, Soundsystem

References

- [Clatronic Startseite](#)
- [SLI24](#)