

Cubetape C200L UPS Dimension and Weight Scanning Systems



Cubetape C200L UPS Dimension and Weight Scanning Systems User Guide

[Home](#) » [cubetape](#) » Cubetape C200L UPS Dimension and Weight Scanning Systems User Guide 

Contents

- 1 Cubetape C200L UPS Dimension and Weight Scanning Systems
- 2 Product Usage Instructions
- 3 IN THE BOX
- 4 ASSEMBLY
- 5 CHARGE BATTERY
- 6 HOW TO MEASURE
- 7 HOST CONNECTIONS
- 8 SET OUTPUTS
- 9 REFERENCES AND RESOURCES
- 10 US DEFAULTS
- 11 Documents / Resources
 - 11.1 References



Cubetape C200L UPS Dimension and Weight Scanning Systems



Specifications

- Dimensional output set to the nearest whole inch by default
- **Available Outputs:**
 - **Output** 0.25
 - **Output** 0.5
 - **Output** Nearest 1
 - **Output** Next 1
- **Available Suffixes:**
 - **Suffix** Dim CR
 - **Suffix** Dim TAB
 - **Suffix** Gen CR
 - **Suffix** Gen TAB

Product Usage Instructions

Set Outputs

To select alternative dimensional outputs, scan one of the Output codes provided with the C200L.

Set Suffix

Select the preferred suffix for use with Dimensional (DIM) and General (GEN) items by scanning the corresponding suffix code.

Assembly Guide Rails

1. The tape cassette has guide rails on both sides.
2. The C200L Pod has guide grooves on both sides.
3. The spring latch locks into the tape cassette.
4. Align the grooves and rails.

5. C200L Pod slides down into the tape cassette.
6. The latch in the C200L Pod locks into the tape cassette.

Charge Battery

- Insert the USB cable in the USB port located under the flap by the Scan button.
- Connect it to an adapter or a charging cradle for charging.
- The red LED indicates the charging status.

Power On C200L

Press the Scan button to power on the device.

How to Measure

1. Hook the tape end over the far edge of the package.
2. Align the tape exit point to the near edge of the package.
3. Press the Scan button to record and transmit the measurement.


Host Connections

- C200L can connect to a host system using RF Dongle or Bluetooth.
- The default method is RF Dongle. For Windows connection using RF Dongle, pair via USB port, indicated by a blue LED when connected.
- For other host connections, refer to the provided FAQ URL for instructions.

FAQ

For more information and troubleshooting, visit our FAQ section at the provided URL or contact support at support@cubetape.com.

IN THE BOX

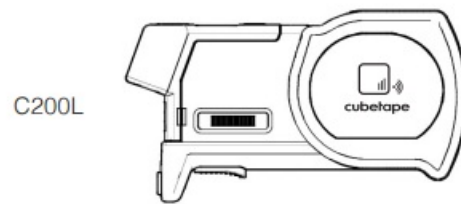


USB Cable



RF Dongle



Charge Cradle
(Optional Extra)

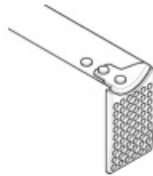

Bigfoot
Silicone Tip




Quickstart Guide



ScanStik

ASSEMBLY

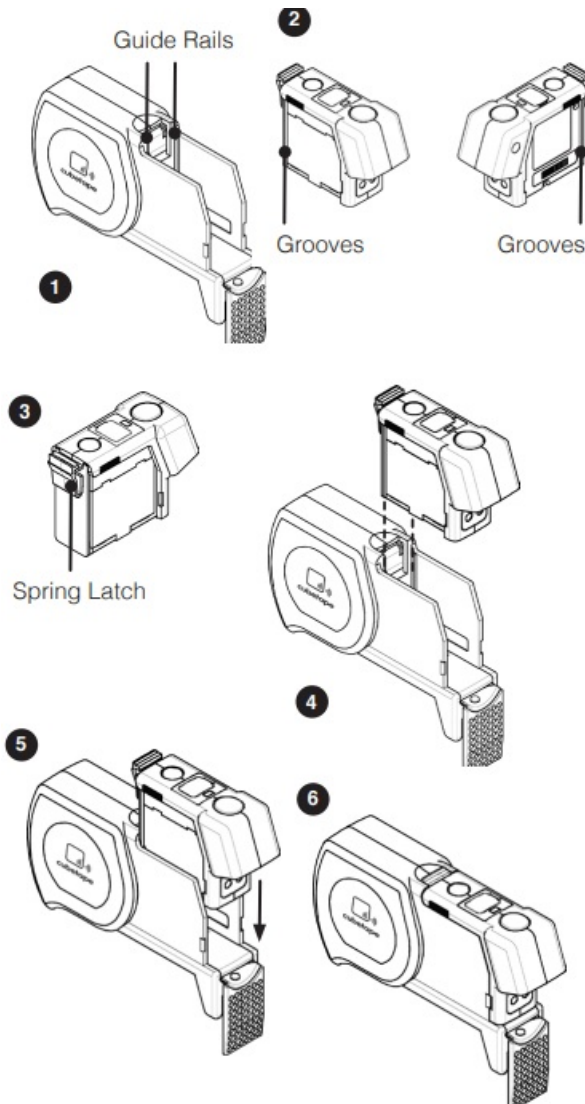

1. The tape cassette has guide rails on both sides.
2. The C200L Pod has guide grooves on both sides.
3. The spring latch locks into the tape cassette.
4. Align grooves and rails.
5. C200L Pod slides down into the tape cassette.
6. The latch in the C200L Pod locks into the tape cassette.

CHARGE BATTERY

- Insert the USB cable in the port under the flap by the Scan button and connect it to the adaptor or if using a charging cradle, connect the USB cable and insert C200L. The red LED is ON when charging.



USB Port

POWER ON C200L

- Press the Scan button to power it on.
- Scan Button




REGISTRATION



Registration URL

- Scan the Registration URL QR code with a mobile Android or iOS device or visit www.cubetape.com/register to register your device.

HOW TO MEASURE

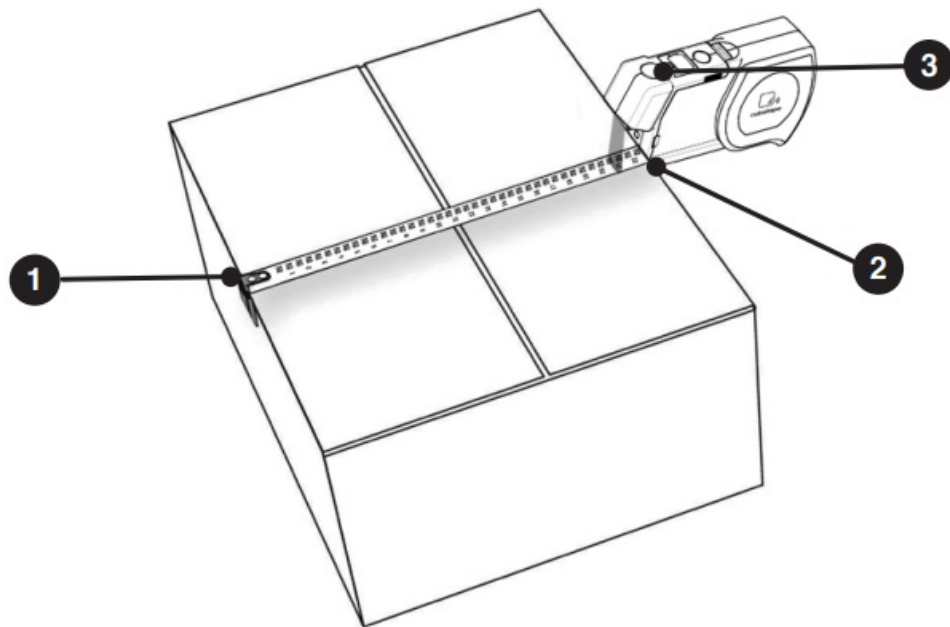

1. Hook the tape end over the far edge of the package.
2. Align the tape exit point to the near edge of the package.
3. Press the Scan button to record and transmit the measurement.

HOST CONNECTIONS

- C200L can connect to a host system using RF Dongle or Bluetooth.
- The default method is RF Dongle.

Connect to Windows using RF Dongle:



Pair

- Power on C200L.
- Scan Pair, LED will flash green.
- Insert the dongle in the spare Windows USB port, the LED will turn blue when connected.
- Dimensions and barcodes will now be sent to the active Windows app.

Other Host Connections:

- For all other host connections including CubeIQ and Bluetooth, scan the FAQ URL QR code with a mobile Android or iOS device or go to www.cubetape.com/support for instructions.



FAQ URL

SET OUTPUTS

- Dimensional output is set to the nearest whole inch by default. To select alternative outputs scan one of the Output codes below with the C200L.



Output 0.25



Output 0.5



Output Nearest 1



Output Next 1

SET SUFFIX

- Select the preferred suffix for use with Dimensional (DIM) and General (GEN) items.



Suffix Dim CR



Suffix Dim TAB



Suffix Gen CR



Suffix Gen TAB

REFERENCES AND RESOURCES



FAQ URL



Shortcuts URL



ScanStik URL

- For Scan to Pair and NFC Pairing instructions go to FAQ URL or Configuration guide.
- For the full manual go to www.cubetape.com/support For support email support@cubetape.com

US DEFAULTS

Comms	Direct (HID) by RF Dongle
Timeout	10 minutes
Suffix DIM	TAB
Suffix GEN	TAB
Units	inches
Output	Nearest inch

To return to C200L US default settings at any time scan barcodes below.




C200L US





Wireless Defaults

- Additional suffixes and prefixes available at www.cubetape.com/support
- Scan the Registration QR code or visit www.cubetape.com/register to register your device.

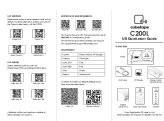Documents / Resources

	Cubetape C200L UPS Dimension and Weight Scanning Systems [pdf] User Guide C200L UPS Dimension and Weight Scanning Systems, C200L, UPS Dimension and Weight Scanning Systems, Dimension and Weight Scanning Systems, Weight Scanning Systems, Scanning Systems
---	--

References

-  [Warranty registration - Cubetape](#)
-  [Support - UPS Dimension & Weight Scanning Systems](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.