



CUCKOO CRP-LHT06 Fuzzy Series IH Pressure Jar Cooker Instruction Manual

[Home](#) » [CUCKOO](#) » CUCKOO CRP-LHT06 Fuzzy Series IH Pressure Jar Cooker Instruction Manual 

CUCKOO CRP-LHT06 Fuzzy Series IH Pressure Jar Cooker Instruction Manual



Contents

[1 IMPORTANT SAFEGUARDS](#)

[2 ADDITIONAL IMPORTANT SAFEGUARDS](#)

[3 HOW TO USE EXTENSION CORD](#)

[4 SPECIFICATION](#)

[5 HOW SERVICE IS HANDLED](#)

[6 CUCKOO ELECTRIC RICE COOKER/WARMER LIMITED WARRANTY](#)

[7 Documents / Resources](#)

[8 Related Posts](#)

IMPORTANT SAFEGUARDS

1. Read all instructions before using this appliance.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock and / or injury to persons do not immerse cord, plugs, or Pressure
4. Close supervision is necessary when this appliance is used by or near children. This appliance is not intended for use by young children without supervision.
5. Unplug from outlet when not in use and before cleaning. Allow appliance to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions, or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, and / or injury to persons.
8. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or your service agent.
9. Do not use outdoors.
10. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
11. Do not place on or near a hot gas, electric burner, or in a heated oven.
12. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
13. Do not use this appliance for other than its intended use.
14. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
15. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
16. A fire may occur if the appliance is covered or touching flammable material, including curtains, draperies, walls, etc while in operation.
17. To reduce the risk of electric shock, cook only in the provided removable container.
18. This appliance cooks under pressure. Improper use may result in scalding injury. Before operating the unit, properly secure and close the unit. See "Operating Instructions."
19. Do not cook foods such as applesauce, cranberries, cereals, macaroni, spaghetti, or other foods. These foods tend to foam, froth, and sputter, and may block the pressure releasing device.
20. Before use always check the pressure releasing device for clogging.
21. Do not open the pressure cooker until the unit has cooled and internal pressure has been reduced. See

“Operating Instructions.”

22. Do not use this pressure cooker to fry in oil.
23. Be sure that handles are assembled and fastened properly before each use. Cracked, broken or charred handles should be replaced.

SAVE THESE INSTRUCTIONS THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY

ADDITIONAL IMPORTANT SAFEGUARDS

WARNING : This appliance generates heat and releases steam during use. Use proper precaution to prevent risk of burns, fires, other injuries, or damage to property.

1. Keep hands and face away from the Pressure Release Valve when releasing pressure.
2. Take extreme caution when opening the Lid after cooking. Severe burns can result from steam inside.
3. Never open the Lid while the unit is in operation.
4. Do not use without the Inner Pot in place.
5. Do not cover the Pressure Valve with anything as an explosion may occur.
6. Do not touch the inner pot nor any heating parts, immediately after use. Allow the unit to cool down completely first.

HOW TO USE EXTENSION CORD

Note :

A. A short power-supply cord (or cord set) is provided to reduce the hazards from entanglement by a longer cord.

B. Extension cord should be used properly.

C. Extension cord usage for the rice cooker :

1. The correct rated voltage should be used for the rice cooker.
2. If the appliance is set on the ground, the extension cord should also be set on the ground.
3. The cord wires and extension cord should always be arranged to prevent hazards to children.

This appliance has a polarized plug : (one blade is wider than the other).

As a safety feature, this plug will fit in a polarized outlet only one way.

If the plug does not properly fit in the outlet, turn the plug over.

If it still does not fit, contact a qualified electrician.

Please, keep this safety feature.

SPECIFICATION

Model Name (21mg)			CRP-LifT06 Fuzzy Series
Power Supply			AC120V, 60Hz
Power Consumption			1090W
Cooking Capacity	WHITE RICE SAVORY WHITE RIS		0.18L-1.08L(1-6cups) 0.18L-0.72L(1-4cups)
	STICKY WHITE RICE HIGH HEAT STICKY RICE		
	MULTI GRAIN RICE(N), SAVORY MULTI GRAIN RICE		
	STICKY MULTI GRAIN RICE, HIGH HEAT STICKY MULTI GRAIN RISE		
	TURBO WHITE RICE(411[1121124), TURBO MULTI GRAIN RICE(WIS)		
	GABA RICE		
	NON PRESSURE WHITE RICE, VEGGIE RICE		
	SCORCHED RICE(XI)		
	PORRIDG	THICK PORRDGE	0.18L-0.27L(1-1.5cups)
		THIN PORRIDGE	0.09L-0.18L(0.5-1 cups)
Power Cord Length			1.2m
Pressure			98.0kPa(1.0kgfkat)
Weight			7.0kg
Dimension Width			26.2cm
Length			38.3cm
Height			26.0cm

Design and Color of product may be subject to change without notice.

HOW SERVICE IS HANDLED

USA The East and the Central Districts Tel. No. 718 888 9144 The West and the Central Districts Tel. No. 323 780 8808	Canada TORONTO Tel. No. 905 707 8224 / 416 878 4561 VAN COUVER Tel. No. 604 540 1004 / 604 523 1004
--	--

CUCKOO ELECTRIC RICE COOKER/WARMER LIMITED WARRANTY

KEY Company, P&K USA TRADING CORP and Cuckoo Trading Canada. will repair at its option replace, without charge, your product which proves to be defective in material or workmanship under normal use, during the warranty period listed below from the date of original purchase. This warranty is good only to the original

purchaser of the product during the warranty period. P&K USA TRADING CORP covers the east and the central districts, KEY Company covers the west and the central districts, Cuckoo Trading Canada covers the whole Canada.

MODEL#

CRP-LHT06

#LABOR

1 YEAR

PARTS

1 YEAR

WARRANTY PERIOD HOW SERVICE IS HANDLED

The East and the Central Districts

Call : 718 888 9144

Address : 129-04 14th Avenue College Point, NY 11356, USA

The West and the Central Districts.

Call : 323 780 8808 Toll Free : 877 481 9828

Address : 1137 E. 1st Street, L.A. CA 90033. USA Canada (TORONTO)

Call : 416 878 4561 / 905 707 8224

Address : #D8-7398 Yonge Street

Thornhill Ontario Canada L4J 8J2

Canada (VANCOUVER)

Call : 604 540 1004 / 604 523 1004

Address : 945 Lougheed Hwy Coquitlam BC Canada V3K 3T4

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. CUCKOO ELECTRONICS CO.,LTD. SHALL NOT BE LIABLE FOR THE LOSS, THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES. DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts : so these limitations or exclusions may apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

THE ABOVE WARRANTY DOES NOT APPLY IN THESE CASES:

- To damages problems which result from delivery or improper installation.
- To damages problems which result from misuse, abuse, accident, alteration, or incorrect electrical current or voltage.
- To serve call which do not involve defective workmanship or material and explaining the operation of the unit.

Therefore, these costs are paid by the consumer. Customer assistance numbers :

To Prove warranty Coverage :

- Retain your Sales Receipt to prove date of purchase
- Copy of your Sales Receipt must submitted at the time warranty service is provided.

To Obtain Product, Customer, or Service Assistance and Nearest Authorized service center, Parts Distributor or Sales Dealer:



The East and the Central Distric Call 718 888 9144
Address :129-0414th Avenue
College Point. NY 11356, USA

The West and the Central Districts.
Call : 323 780 8808 Toll Free : 87 481 9828
Address :1137 E 1st Street, LA CA 90033, USA

Canada (Toronto)
Call : 416 878 4561 i 905 707 8224
Address : #D8-7398 Yonge Street
Thanhil Ontario Canada L4J 8.12

Canada (Vancouver)
Call 604 415 9858E04 524 8282
Address :103-0501 North Road Burr* BC Canada V3R 4R7

Documents / Resources

	CUCKOO CRP-LHT06 Fuzzy Series IH Pressure Jar Cooker [pdf] Instruction Manual CRP-LHT06 Fuzzy Series IH Pressure Jar Cooker, CRP-LHT06, Fuzzy Series, IH Pressure Jar Cooker
	CUCKOO CRP-LHT06 Fuzzy Series IH Pressure Jar Cooker [pdf] Instruction Manual CRP-LHT06 Fuzzy Series IH Pressure Jar Cooker, CRP-LHT06, Fuzzy Series, IH Pressure Jar Cooker