



# Cuddeback 1385 Non-Cellular CuddeLink Trail Camera Instruction Manual

[Home](#) » [Cuddeback](#) » Cuddeback 1385 Non-Cellular CuddeLink Trail Camera Instruction Manual

## Contents [ [hide](#) ]

- 1 Cuddeback 1385 Non-Cellular CuddeLink Trail Camera
- 2 CuddeLink Home Model 1385
  - 2.1 Non-Cellular CuddeLink Home Quick Set-Up
  - 2.2 Supplies Needed to Begin Set-Up
  - 2.3 Getting Started
  - 2.4 Quick Set-Up – Link Menu
  - 2.5 Quick Set-Up – Settings
  - 2.6 Quick Set-Up – ARM the camera
- 3 J Series CuddeLink
  - 3.1 CuddeLink Remote Quick Set-Up
  - 3.2 Supplies Needed to Begin Set-Up
  - 3.3 Getting Started
  - 3.4 Quick Set-Up – Link Menu
- 4 G Series Cellular
  - 4.1 CuddeLink Cell Home Quick Set-Up
  - 4.2 Getting Started
  - 4.3 Quick Set-Up – Link Menu
  - 4.4 Cell Home – Recommended Settings
- 5 Documents / Resources
- 6 Related Posts





## **CuddeLink Home Model 1385**


### **Non-Cellular CuddeLink Home Quick Set-Up**

A quick guide to setting up your Non-Cellular CuddeLink Home camera. Certain menus may appear differently; this guide references set up of cameras on version 8.3 firmware. \*Any CuddeLink camera can be setup as a Home in a CuddeLink network\*

### **Supplies Needed to Begin Set-Up**

1. Required amount of batteries
2. Full-size SD card 2-32GB. We recommend the SanDisk brand

The Advanced User Interface has 3 sections: LCD Display, Keys, LEDs.

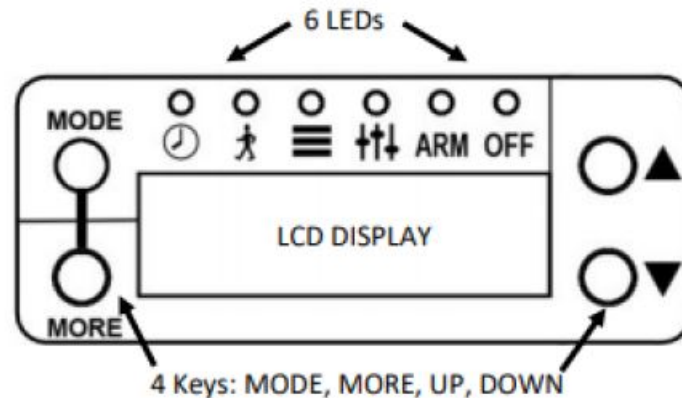

## Getting Started

1. Set the Time – Press Mode key to Clock. This should show you the clock. Use the Up/Down arrows to adjust hour setting. Press More key to go to minute setting. Use the Up/Down arrows to change the minute setting.
2. Set the Date – Press More key twice after setting time to move to the date. Press the Up arrow to get to the month. Use the Up/Down arrows to change the month. Press More key to move to the day. Use the Up/Down arrows to change the day. Press More key to move to the year. Use the Up/Down Arrows to change the year.

## Quick Set-Up – Link Menu

Press Mode key to Commands. Press More key to Link Menu and press the Up Arrow twice to get into the menu.

The screen should show Link Mode. Use your up arrow to change to Home.

Press More key to move to Link Loc. Use the Up Arrow to change to 001.

Press More key to Link chan. Press the Up Arrow to get to the first set of digits. Use the Up Arrow to choose a number 1-16. Press More key to get to the second set of digits. Use the up arrow to choose a number 1-31. \*This will be the same number for all remotes connected to this home camera... Example 08-20\*

## Quick Set-Up – Settings

Press Mode key to Settings. The LCD Display will flash between Setup and the mode the camera is in. The camera is default set to EZ Mode for quick Set-up. If you do not see EZ Mode, use your Up Arrow to get to EZ Mode.

Press More key to Delay. The camera's default Delay is set to 15 seconds and the recommended setting for quick set-up. The Delay dictates how fast the camera will re-load to take an image after it has already been triggered by heat/motion and taken an image.

## Quick Set-Up – ARM the camera

Press Mode key to ARM. The camera will begin countdown and ARM to take pictures.

## J Series CuddeLink



### CuddeLink Remote Quick Set-Up

A quick guide to setting up your CuddeLink camera(s) as a Remote or Repeater. Certain menus may appear differently; this guide references setup of cameras on version 8.3 firmware. \*User is not able to use a Cell camera as a Remote in the network

### Supplies Needed to Begin Set-Up

1. Required amount of batteries
2. Full-size SD card 2-32GB. We recommend the SanDisk brand

### Getting Started

1. Set the Time – Press Mode key to Clock. This should show you the clock. Use the Up/Down arrows to adjust hour setting. Press More key to go to minute setting. Use the Up/Down arrows to change the minute setting.
2. Set the Date – Press More key twice after setting time to move to the date. Press the Up arrow to get to the month. Use the Up/Down arrows to change the month. Press More key to move to the day. Use the Up/Down arrows to change the day. Press More key to move to the year. Use the Up/Down Arrows to change the year.

### Quick Set-Up – Link Menu

Press Mode key to Commands. Press More key to Link Menu and press the Up Arrow twice to get into the menu. The screen should show Link Mode. Use your up arrow to change to Remote.

You have the option to select Home – point for SD card image collection, Remote – camera operates in field, collects images, and send images to Home, or Repeater – camera operates in field as signal booster between other remotes; camera will not take images in this mode

Press More key to move to Link Loc. Use the Up Arrow to change to 002. Each camera must have a unique Link Loc. As you continue to add Remotes or Repeaters to your network, you will increase the Link Loc.

Press More key to Link chan. Press the Up Arrow to get to the first set of digits. Use the Up Arrow to choose a number 1-16. Press More key to get to the second set of digits. Use the up arrow to choose a number 1-31.

This NEEDS to be the same number for all cameras (Remote/Repeater) that are in the same network... Example 08-20

Press More key to Link Lvl. The LCD Display will flash between this and 4 dashes. Make sure you have your home camera armed to verify the cameras are connecting to each other. If you are not getting a connection, verify you have all cameras on the same Link Chan and Firmware Version. \*F/W Ver – Press Mode to Commands, More to F/W Ver. This should match on all cameras in a network

A quick guide to setting up your CuddeLink camera(s) as a Remote or Repeater. Certain menus may appear differently; this guide references set up of cameras on version 8.3 firmware.

### **Quick Set-Up – Settings**

Press Mode key to Settings. The LCD Display will flash between Setup and the mode the camera is in. The camera is default set to EZ Mode for quick Set-up. If you do not see EZ Mode, use your Up Arrow to get to EZ Mode.

Press More key to Delay. The camera's default Delay is set to 15 seconds and the recommended setting for quick set-up. The Delay dictates how fast the camera will reload to take an image after it has already been triggered by heat/motion and taken an image.

### **Quick Set-Up – ARM the camera**

Press Mode key to ARM. The camera will begin countdown and ARM to take pictures.

## G Series Cellular

---



### CuddeLink Cell Home Quick Set-Up

A quick guide to setting up your CuddeLink Cell Home camera. Certain menus may appear differently; this guide references set up of cameras on version 8.3 firmware.

The following instructions assume you have already created a Cell Management Account and registered your Cell Camera to your account

#### Supplies Needed to Begin Set-Up

1. Required amount of batteries
2. Full-size SD card 2-32GB. We recommend the SanDisk brand

#### Getting Started

1. Set the Time – Press Mode key to Clock. This should show you the clock. Use the Up/Down arrows to adjust hour setting. Press More key to go to minute setting. Use the Up/Down arrows to change the minute setting.
2. Set the Date – Press More key twice after setting time to move to the date. Press the Up arrow to get to the

month. Use the Up/Down arrows to change the month. Press More key to move to the day. Use the Up/Down arrows to change the day. Press More key to move to the year. Use the Up/Down Arrows to change the year.

## **Quick Set-Up – Link Menu**

Press Mode key to Commands. Press More key to Link Menu and press the Up Arrow twice to get into the menu. The screen should show Link Mode. Use your up arrow to change to Home. Press More key to move to Link Loc. Use the Up Arrow to change to 001.

Press More key to Link chan. Press the Up Arrow to get to the first set of digits. Use the Up Arrow to choose a number 1-16. Press the More button to get to the second set of digits. Use the up arrow to choose a number 1-31. \*This NEEDS to be the same number for all cameras (Remote/Repeater) that are in the same network... Example 08-20\*

## **Quick Set-Up – Link Menu**

Press Mode key to Commands. Press More key to Cell Menu and press the Up Arrow twice to get into the menu. The screen should show Cell Mode. Use your up arrow to verify this is set to ON.

Press More key to move to Cell Rate. Cell Rate dictates how often the cell camera will send images to you. 12 Hours is the recommended default for quick set-up. Use the Up/Down Arrows to change to lower rate if desired. Press More key to Cell Test. When you deploy the camera in the field, you will want to run this test. Press the Up Arrow twice to run the cell test.

A quick guide to setting up your CuddeLink Cell Home camera. Certain menus may appear differently; this guide references set up of cameras on version 8.3 firmware.

## **Cell Home – Recommended Settings**

The following explains the recommended settings for quick-set up of Cuddeback cameras.

There are a few options under Commands that you can change, but we recommend leaving them set to default. Leaving them on default is the recommended option.

Press Mode key to Settings, which should flash EZ Mode and is the recommended mode to use for quick set-up. Press More key and you will see the camera Delay, which is set to 15 seconds and the recommended setting for quick set-up. The Delay dictates how fast the camera will reload to take an image after it has already been triggered by heat/motion and taken an image.

Press More key and you will see the Video setting, which is default set to OFF. We recommend leaving it to off for quick set-up.

## **Quick Set-Up – ARM the camera**

Press Mode key to ARM. The camera will begin countdown and ARM to take pictures.

920-347-3810

[cuddeback.support@cuddeback.com](mailto:cuddeback.support@cuddeback.com)  
[www.cuddeback.com](http://www.cuddeback.com)

## **Documents / Resources**

