



cudy LT400 Access Point 4G LTE Router User Guide

[Home](#) » [cudy](#) » cudy LT400 Access Point 4G LTE Router User Guide 

Contents

- [1 cudy LT400 Access Point 4G LTE Router](#)
- [2 Quick Installation](#)
- [3 LED and Button](#)
- [4 Customize The 4G Router](#)
- [5 Need Help](#)
- [6 EU Declaration of Conformity](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)




cudy LT400 Access Point 4G LTE Router



Quick Installation

1. Insert the Nano SIM card into the slot until you hear a click.

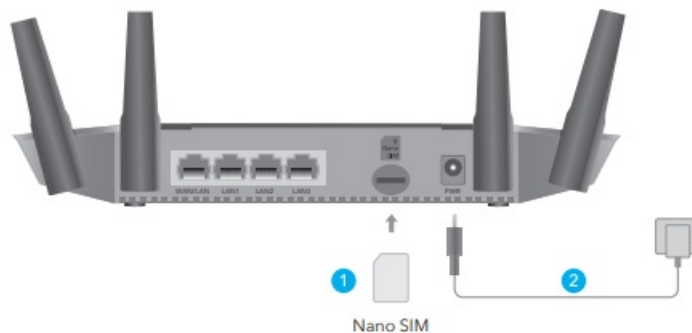

Direction: With the gold contacts facing down, gently slide the SIM card into the slot.

2. Connect power adapter and turn on the router. Waiting for 2 minutes for it to start.
3. Check the status of the system LED.



- If Internet LED is on , it means the router is connected to the cellular internet.
- If internet LED is off, please follow the instructions of Customize The 4G Router.



4G



Wi-Fi



LAN3



LAN2



LAN1



WAN/LAN



INTERNET




POWER

LED and Button


Item		Status	Explanation
LED	POWER	On/Off	Power on / Power off
	INTERNET	On	Internet is connected
		Off	Internet is not connected
	WAN / LAN	On	Connected
		Flash	Transmitting
		Off	Disconnected
	LAN 1-LAN 3	On	Connected
		Flash	Transmitting
		Off	Disconnected
	Wi-Fi	On	Wi-Fi is enable
		Flash	Transmitting
		Off	Wi-Fi is disable
	4G	On	4G module is powered
		Off	4G module is not powered
Button	RST/WPS	1 second for WPS, 5 seconds for Reset	

Customize The 4G Router

1. Connect the router via an Ethernet cable or Wi-Fi. Network name and password is printed on the bottom of the router.

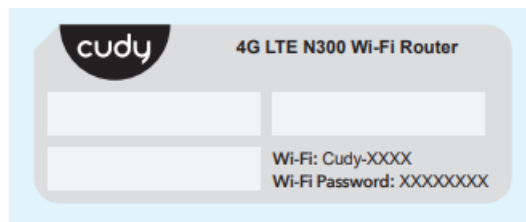

2. Launch a web browser and enter <http://cudy.net/> (or <http://192.168.10.1/>) in the address bar, use admin as password to login.

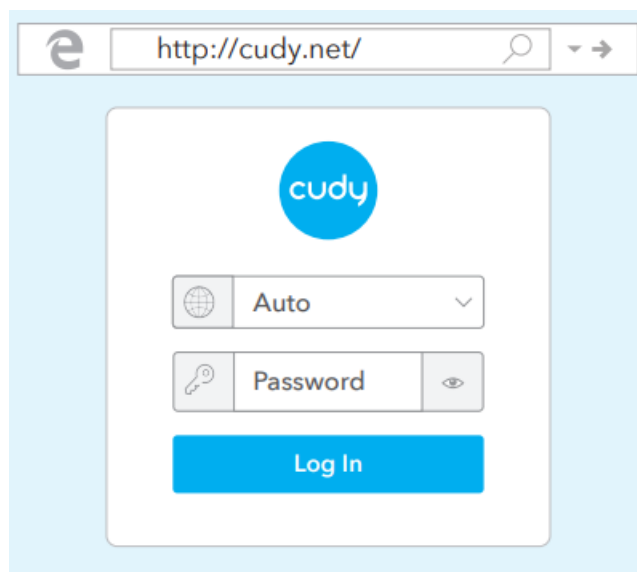

3. The page below would pop up if your SIM card needs PIN to unlock. Please enter your PIN and click Save & Apply, then wait 15 seconds to connect to the Internet.

4G Settings

i The SIM is locked, please enter the PIN code. You have 3 attempts at most for entering the PIN code.

PIN

Save & Apply

4. Then please check 4G information card of the status page. If the status is connected, it means the internet connection is successful.

4G	
Status	Connected ✓
RSSI	22
Upload / Download	770.63KB / 681.69KB
More Details	
Connected	

4G	
Status	Not connected ✗
RSSI	-
Upload / Download	0.00 B / 0.00 B
More Details	
Not connected	

5. If 4G is not connected, or you want to customize the router yourself, click “Quick Setup” and follow the step-by-step instructions to configure the router.

Status

Internet	Not connected ✗
Work Mode	4G Router
Model	XXXXXX
Quick Setup	

Need Help

Q1. What should I do if I cannot access the web management page?

- A1: Make sure the <http://cudy.net> or <http://192.168.10.1> is typing in the address bar not the search bar.
- A2: If the computer is set to a static IP address, change its settings to obtain an IP address and DNS server address automatically.
- A3: Use another web browser and try again.
- A4: Change different client devices.
- A5: Reboot or reset the router and check again.
- A6: Clear your browser's cookies.
- A7: Disable and enable the network adapter being used.


Q2. How do I restore the router to its factory default settings?

- A1: With the power on, press and hold the RST/WPS button for about 6 seconds to reset the router to its factory default settings.
- A2: Log in to the web management page of the router, and go to Advanced Settings >Reset, click Perform Reset and wait until the reset process is completed.

EU Declaration of Conformity

essential requirements and other relevant provisions of directives 2014/53/EU, 2009/125/EC and 2011/65/EU.
The original EU declaration of conformity may be found at <http://www.cudy.com/ce>.

Documents / Resources

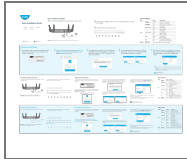

[cudy LT400 Access Point 4G LTE Router](#) [pdf] User Guide

LT400 Access Point 4G LTE Router, LT400, Access Point 4G LTE Router, Point 4G LTE Router, 4G LTE Router, Router

References

- [Cudy Official Website](#)
- [Cudy CE](#)