

Cuisinart
CPT-140 Compact
4-Slice Toaster



cuisinart CPT-140 Compact 4-Slice Toaster Instruction Manual

[Home](#) » [Cuisinart](#) » cuisinart CPT-140 Compact 4-Slice Toaster Instruction Manual 

Contents

- [1 cuisinart CPT-140 Compact 4-Slice Toaster](#)
- [2 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 IMPORTANT SAFEGUARDS](#)
- [6 SPECIAL CORD SET INSTRUCTIONS](#)
- [7 INTRODUCTION](#)
- [8 FEATURES AND BENEFITS](#)
- [9 USE AND CARE](#)
- [10 CLEANING AND MAINTENANCE](#)
- [11 CUISINART® COMPACT TOASTER LIMITED 3-YEAR WARRANTY](#)
- [12 CONTACT](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)
- [14 Related Posts](#)

Cuisinart®

cuisinart CPT-140 Compact 4-Slice Toaster



Specifications

- **Product:** CUISINART CPT-140 Compact 4-Slice Toaster
- **Model:** CPT-140 Series
- **Usage:** Household use only
- **Cord:** Special polarized plug

Product Usage Instructions

Before using the toaster, carefully read the instruction booklet. Follow these important safety precautions:

- Before cleaning, always unplug the toaster and allow it to cool.
- Use a damp cloth to clean the exterior surfaces and follow specific cleaning instructions provided in the manual.
- Refer to the warranty section in the manual for information on warranty coverage and procedures.

FAQ

- **Q:** Can I use the toaster outdoors?
- **A:** No, the toaster is designed for indoor household use only. Do not use it outdoors.

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not place any part of the toaster in water or other liquid. See instructions for cleaning.
4. Close supervision is necessary when any appliance is used by or near children.
5. Always unplug from the outlet when not in use and before cleaning. Allow to cool before cleaning or handling.

6. Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been dropped or damaged in any way, or if it is not operating properly. Return the toaster to the nearest Cuisinart Repair Center for examination, repair, mechanical or electrical adjustment.
7. The use of accessory attachments not recommended by Cuisinart may cause injury.
8. Do not use outdoors.
9. Do not let the cord hang over the edge of the table or countertop or touch hot surfaces.
10. Do not place the toaster on or near a hot gas or electric burner or in a heated oven.
11. Do not use this toaster for other than intended use.
12. Oversize foods, metal foil packages or utensils must not be inserted in the toaster, as they may involve a risk of fire or electric shock.
13. A fire may occur if the toaster is covered with or touching flammable materials, such as curtains, draperies or walls, when in operation. Do not operate under wall cabinets.
14. Do not attempt to dislodge food when the toaster is plugged into an electrical outlet.
15. To avoid the possibility of fire, do not leave the toaster unattended during use. Unplug when not in use.
16. To disconnect, push the cancel button, then remove plug from the wall.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

SPECIAL CORD SET INSTRUCTIONS

- A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- Longer extension cords are available and may be used if care is exercised in their use.
- If a long extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

NOTICE

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

INTRODUCTION

- Cuisinart has streamlined the 4-slice toaster! The Compact 4-Slice Toaster is two toasters in one, with two separate control panels to let you toast two types of breads, bagels, or muffins at the same time. LED lights next to each button let you monitor the toasting process. The 9-setting LED backlit browning dials make it easier than ever to choose the shades you want.
- Cuisinart products are famous for convenience, and this toaster is no exception. Our Extra-Lift levers let you bring small items higher up for easy removal. Cleanup and storage are simple, with a slideout crumb tray, wipe-clean housing and a clutter-free cord wrap.

FEATURES AND BENEFITS

1. Dual Control Panels

Two sets of controls toast bread on different settings.

Use the controls and carriage lever on the left for slots 1 & 2 and the controls and carriage lever on the right for slots 3 & 4.

2. Extra Lift Carriage Control Lever

Brings small items close to the top of the toaster, for easy removal.

3. 1-1/2" Toasting Slots Wide toaster slots toast a wide variety of items.

4. Browning Control

Rotary LED dial sets selected shade. 9 browning levels toast from light to dark.

5. Bagel Button

Adds extra time to the toasting cycle. LED lights when selected.

6. Defrost Button

Defrost and toast frozen bread. LED lights when selected.

7. Reheat Button

Reheats without browning or toasting. LED lights when selected.

8. Cancel Button

Interrupts the toasting process.

9. LED Indicator

A simple LED backlit dial lets you select any of 9 browning shades.


10. Slide-out Crumb Tray (not shown)

Pulls out to clean crumbs that collect in the bottom of the toaster.

11. Cord Storage (not shown)

Takes up excess cord and keeps countertop neat.

figure 1

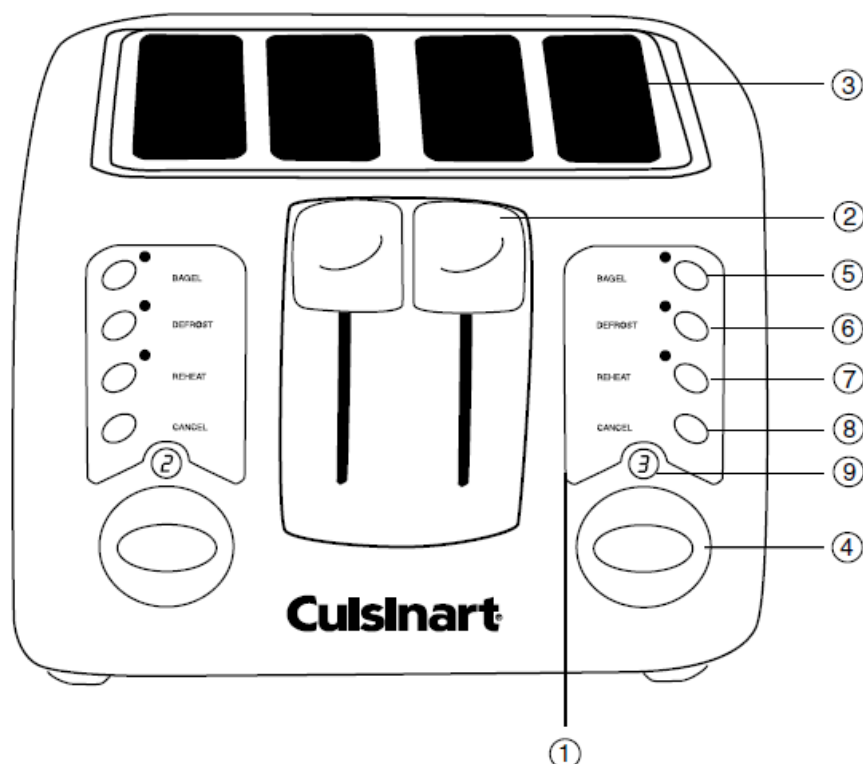

USE AND CARE

Unwind the power cord. Check that the crumb tray is in place and that there is nothing in the toaster slot. Plug the power cord into the wall outlet.

1. Insert Slice(s) of Bread.

Be sure that multiple slices do not overlap and that the carriage is in the up position.

2. Set the Browning Control.

Turn the rotary switch to the desired position:

Setting Color

1-3 light

4-6 medium

7-9 dark

Note: Use controls and carriage lever on the left to toast items in slots 1 & 2.

Use controls and carriage lever on the right to toast items in slots 3 & 4.

Some notes on browning

Toasting is a combination of cooking and drying of the bread.

Therefore, differences in moisture level from one bread to another can result in varying toasting times.

- For slightly dry bread, use a lower setting than you normally would.
- For very fresh bread or whole wheat bread, use a higher setting than normal.
- Breads with very uneven surfaces (such as English muffins) will require a higher toast setting.
- Thickly cut pieces of bread (including bagels) will take longer to toast, sometimes significantly longer since more moisture must be evaporated from the bread before toasting can occur. Very thick pieces may require two cycles.
- When toasting raisins or other fruit bread, remove any loose raisins, etc. from the surface of the bread before placing into the toaster. This will help prevent fruit pieces from falling into the toaster or sticking on the guide wires in the slot.
- Before toasting bagels, slice each bagel into two halves.

Single Slice Toasting:

If you are toasting a single slice of bread, set the heat selector to a lighter setting than you normally would. The toaster is designed to heat the whole toasting chamber for two slices. By lowering the heat for a single slice, you won't over toast.

Notes on Specialty Uses:

The following breads and pastries should be warmed using the "Defrost" button:

Frozen Waffles, Pancakes, French Toast and Frozen Bagels

Toaster pastries: Exercise caution with toaster pastries; the filling can become quite hot, long before the surface of the pastry becomes browned. Never leave toaster pastries unattended while toasting or warming.

• **To Begin Toasting**

Press the carriage lever until it locks into the down position.

• **To Stop Toasting**

When the toasting cycle is finished, the toast will be raised. If you wish to stop the cycle before it is finished, simply press the "Cancel" button.

Tips

- Never force foods into the toasting slot. Foods should fit freely between the guide wires.
- Do not place buttered breads or pastries with fillings or frostings in the toaster, as this could create a fire hazard.
- Uneven toasting is usually due to bread slices of uneven thickness.
- After use, unplug your toaster from the electrical outlet.

Defrost Button

The “Defrost” button is designed to first defrost and then toast the bread, which extends the toasting cycle slightly.

1. Insert slice(s) of bread.

Be sure that multiple slices do not overlap and the carriage is in the up position.

2. Set the Browning Control.

Setting 1-3:

For refrigerated breads and thinner frozen items such as frozen pancakes.

Setting 4-6:

For toaster pastries, frozen waffles and (thin) French toast, and refrigerated bagels.

Setting 7-9:

For thicker frozen items such as bagels, hand-cut bread and thick French toast.

3. Press the Carriage control lever until it locks into position.

4. Press the “Defrost” button.

Red LED indicates the feature is activated.

To stop cycle

When the defrost cycle is complete, the toaster will raise the bread. If you wish to stop the cycle before it is finished, simply press the “Cancel” button to interrupt. After use, unplug the toaster from the electrical outlet.

Reheat Button

The reheat feature allows you to reheat bread without browning or toasting.

1. Insert slice(s) of bread.

Be sure that multiple slices do not overlap and the carriage is in the up position.

2. Press the carriage control lever until it locks into position.

3. Press the “Reheat” button.

Red LED indicates the feature is activated.

To stop cycle

When the reheat cycle is complete, the toaster will raise the bread. If you wish to stop the cycle before it is finished, simply press the cancel button to interrupt.

After use, unplug the toaster from the electrical outlet.

Bagel Button

The bagel feature adds extra time to the toasting cycle to allow for thicker breads.

1. Insert slice(s) of bread.

Be sure that multiple slices do not overlap and the carriage is in the up position.

2. Press the carriage control lever until it locks into position.

3. Press the “Bagel” button. Red LED indicates the feature is activated.
4. When the Bagel cycle is complete, the toaster will raise the bread. If you wish to stop the cycle before it is finished, simply press the “Cancel” button to interrupt.

CLEANING AND MAINTENANCE

Always allow the toaster to cool completely before cleaning.

1. Always unplug the toaster from the electrical outlet.
2. Do not use abrasive cleansers. Simply wipe the exterior with a clean damp cloth and dry thoroughly. Apply any cleansing agent to a cloth, not to the toaster, before cleaning.
3. To remove crumbs, slide out the crumb tray and discard the crumbs. Wipe clean and replace. Never operate the toaster without the crumb tray in place.
4. To remove any pieces of bread remaining in the toaster, turn the toaster upside down and gently shake. Never insert any hard or sharp instruments into the slot, as this could damage the toaster and cause a safety hazard.
5. Never wrap the cord around the outside of the toaster. Use the cord storage cleats on the underside of the toaster.

CUISINART® COMPACT TOASTER LIMITED 3-YEAR WARRANTY

This limited warranty is available to consumers only. You are a consumer if you own a Cuisinart® Toaster which was purchased at retail for personal, family or household use. Except as otherwise required under applicable state law, this warranty is not available to retailers or other commercial purchasers or owners.

We warrant that your Cuisinart® Toaster will be free of defects in materials and workmanship under normal home use for three years from the original date of purchase.

We suggest you complete and return the enclosed product registration card promptly to facilitate verification of the date of the original purchase. However, the return of the product registration card does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. If you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture. If your toaster should prove to be defective within the warranty period, we will repair or replace it at our option, without charge to you. To obtain warranty service, simply send the defective product to:

- Cuisinart, 150 Milford Rd.,
- E. Windsor, NJ 08520, or call our Consumer Service Center toll-free at 1-[800-726-0190](tel:800-726-0190).

To facilitate the speed and accuracy of your return, please also enclose \$7.00 for shipping and handling of the product. CA residents need only provide proof of purchase and should call 1-[800-726-0190](tel:800-726-0190) for shipping instructions. Please be sure to include a return address, description of the product defect, product serial number and any other information pertinent to the product's return. Please pay by check or money order.

Your Cuisinart® Toaster has been manufactured to the strictest specifications and has been designed for use with authorized Cuisinart® accessories and replacement parts. THIS WARRANTY EXPRESSLY EXCLUDES ANY DEFECTS OR DAMAGES CAUSED BY ACCESSORIES, REPLACEMENT PARTS OR REPAIR SERVICES OTHER THAN THOSE THAT HAVE BEEN AUTHORIZED BY CUISINART. THIS LIMITED WARRANTY DOES NOT COVER ANY DAMAGE CAUSED BY ACCIDENT, MISUSE, SHIPMENT OR OTHER THAN ORDINARY HOUSEHOLD USE.

THIS WARRANTY EXCLUDES ALL INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of these damages, so these exclusions may not apply to you. ALL APPLICABLE IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, GIVEN TO YOU BY LAW, ARE HEREBY LIMITED IN DURATION TO THIS WARRANTY.

This warranty gives you specific legal rights and you may have other rights which vary from state to state.

If you have any questions about the safety features of your Cuisinart® Toaster, please call us, toll-free, at 1-[800-726-0190](tel:800-726-0190).

BEFORE RETURNING YOUR CUISINART PRODUCT

- If you are experiencing problems with your Cuisinart product, we suggest that you call our Consumer Service Center at 1-[800-726-0190](tel:800-726-0190) before returning the product for servicing. Often, our Consumer Service Representatives can help solve the problem without having the product serviced. If servicing is needed, a representative can confirm whether the product is under warranty and direct you to the nearest service location.
- **Important:** If the nonconforming product is to be serviced by someone other than Cuisinart's Authorized Service Center, please remind the Servicer to call our Consumer Service Center at 1-[800-726-0190](tel:800-726-0190) to ensure that the problem is properly diagnosed, the product is serviced with the correct parts, and the product is still under warranty.

CALIFORNIA RESIDENTS ONLY

California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (A) to the store where it was purchased or (B) to another retail store that sells Cuisinart products of the same type. The retail store shall then decide to either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If either of the above two options does not result in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility if service or repair can be economically accomplished. Cuisinart and not the consumer will be responsible for the reasonable cost of such service, repair, replacement, or refund for nonconforming products under warranty. California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair or, if necessary, replacement, by calling our Consumer Service Center toll-free at [800-726-0190](tel:800-726-0190). Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling of such nonconforming products under the Warranty.

Cuisinart offers an extensive assortment of top-quality products to make life in the kitchen easier than ever. Try some of our other countertop appliances and cookware, and Savor the Good Life®. www.cuisinart.com



Starlite Electronic Pre-Press System

Version No.: CPT-140 SERIES IB-5797
Size: 216mm(W)X178mm(H)(Old as IB-4623)
Material: Cover:157GSM MATT ARTPAPER ;
Inside:120GSM GLOSS ARTPAPER
Coating:
Color: COVER:4C+1C ; INSIDE: 1C+1C
Date: 2004-11-11

Client: G0028
Starlite No: 82646IBB
Proof: 1ST
Handled By: P000258

Cyan

Magenta

Yellow

Black

| | | | | | | | | | | |
|---|----|----|----|----|----|----|----|----|----|-----|
| 5 | 10 | 20 | 30 | 40 | 50 | 60 | 70 | 80 | 90 | 100 |
| 5 | 10 | 20 | 30 | 40 | 50 | 60 | 70 | 80 | 90 | 100 |
| 5 | 10 | 20 | 30 | 40 | 50 | 60 | 70 | 80 | 90 | 100 |
| 5 | 10 | 20 | 30 | 40 | 50 | 60 | 70 | 80 | 90 | 100 |

CONTACT

- © 2005 Cuisinart
- Cuisinart® is a registered trademark of Cuisinart
- 150 Milford Road
- East Windsor, NJ 08520
- Printed in China
- www.cuisinart.com

Documents / Resources

| | |
|---|---|
|  | cuisinart CPT-140 Compact 4-Slice Toaster [pdf] Instruction Manual CPT-140, CPT-140 Compact 4-Slice Toaster, Compact 4-Slice Toaster, 4-Slice Toaster, Toaster |
|---|---|

References

- [The domain name bread.be is for sale](#)
- [✂ Repair Your Grill: Shop Replacement Parts for 24,880 Models](#)

-  [Cuisinart Small Appliance Parts - Select From 213 Models](#)
- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.