



# Cuisinart CPT720 2 Slice Digital Toaster with Memory Set Feature Instruction Manual

[Home](#) » [Cuisinart](#) » Cuisinart CPT720 2 Slice Digital Toaster with Memory Set Feature Instruction Manual 

## Contents

- 1 Cuisinart CPT720 2 Slice Digital Toaster with Memory Set Feature
- 2 Product Information
- 3 Product Usage Instructions
- 4 IMPORTANT SAFEGUARDS
- 5 SPECIAL CORD SET INSTRUCTIONS
- 6 FEATURES AND BENEFITS
- 7 BEFORE FIRST USE
- 8 GENERAL OPERATION
- 9 MEMORYSET FEATURE
- 10 FUNCTIONS
- 11 TIPS AND HINTS
- 12 CLEANING AND MAINTENANCE
- 13 WARRANTY
- 14 CALIFORNIA RESIDENTS ONLY
- 15 Documents / Resources
  - 15.1 References

# Cuisinart®

**Cuisinart CPT720 2 Slice Digital Toaster with Memory Set Feature**



## Product Information

### 2-Slice Digital Toaster with MemorySet

The 2-Slice Digital Toaster with MemorySet, model CPT-720, is a versatile and convenient kitchen appliance designed for toasting bread. It comes with various features and benefits to enhance your toasting experience.

## Features and Benefits

- **Dual Toasting Slots:** The wide slots can accommodate a variety of bread types.
- **High-Lift Lever:** This lever brings the toast close to the top of the toaster, making it easy to remove even the smallest items.
- **Cancel Button:** The cancel button allows you to stop the toasting process and automatically lifts the bread.
- **LCD Display:** The black backlit LCD screen displays the selected shade setting and bread setting, as well as the memory function. It also provides a countdown so you know when your toast is ready.
- **Slide-Out Crumb Tray:** Located on the back of the toaster, this removable tray collects crumbs for easy cleaning.

## Important Safeguards

When using this appliance, it is important to follow these safety precautions:

1. Read all instructions in the instruction booklet.
2. Always unplug the toaster from the outlet when not in use and before cleaning. Allow it to cool before handling.
3. Use handles or lever to avoid touching hot surfaces.
4. Do not immerse the cord, plug, or any part of the toaster in water or other liquids. Refer to the cleaning instructions.
5. Ensure close supervision when the toaster is being used by or near children or individuals with certain

disabilities.

6. Do not use the toaster if the cord or plug is damaged, if the appliance has malfunctioned, or if it has been dropped in water or damaged in any way. Return it to the store or retailer for examination, repair, or adjustment.
7. Avoid using accessory attachments not recommended by Cuisinart.
8. Use the toaster indoors and avoid using it outdoors.
9. Prevent the cord from hanging over the edge of the table or countertop, and avoid letting it touch hot surfaces.
10. Avoid placing the toaster on or near a hot gas or electric burner or in a heated oven.
11. Use the toaster only for its intended purpose and do not insert oversized foods, metal foil packages, or utensils into it.
12. Do not cover the toaster or allow it to touch flammable materials when in operation. Operate it away from wall cabinets.
13. Do not attempt to dislodge food while the toaster is plugged into an electrical outlet.
14. Never leave the toaster unattended during use to avoid the possibility of fire.
15. To disconnect, push the cancel button and remove the plug from the wall. Always unplug it when not in use and before cleaning.
16. Avoid operating the toaster in an appliance garage or under a wall cabinet. If storing it in an appliance garage, remember to unplug it to prevent fire hazards.
17. Read and save these instructions for household use only.

## **Product Usage Instructions**

1. Place the toaster on a stable and heat-resistant surface.
2. Plug the toaster into a suitable electrical outlet.
3. Select the desired shade setting on the LCD display.
4. Place the bread slices into the dual toasting slots.
5. Press the lever down to start the toasting process.
6. Observe the countdown on the LCD display to know when your toast will be ready.
7. If you wish to cancel the toasting process, press the cancel button.
8. Once the toast is ready, use the high-lift lever to safely remove it from the toaster.
9. After use, unplug the toaster from the electrical outlet and allow it to cool before cleaning.
10. To clean the toaster, slide out the crumb tray located on the back and dispose of the collected crumbs. Wipe the exterior with a damp cloth if needed.

Following these instructions will ensure safe and optimal usage of your 2-Slice Digital Toaster with MemorySet.

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

## **IMPORTANT SAFEGUARDS**

When using an electrical appliance, especially when children are present, basic safety precautions should always be taken, including the following:

1. Read all instructions.
2. Always unplug from outlet when not in use and before cleaning. Allow to cool before cleaning or handling.

3. Do not touch hot surfaces. Use handles or lever.
4. To protect against electric shock, do not immerse cord, plug or place any part of the toaster in water or other liquids. See instructions for cleaning.
5. This appliance should not be used by or near children, or individuals with certain disabilities. Close supervision is necessary when any appliance is used by or near children.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been dropped, dropped in water or damaged in any way, or if it is not operating properly. Return the toaster to the store or retailer where purchased for examination, repair or adjustment.
7. The use of accessory attachments not recommended by Cuisinart may cause injury.
8. Do not use outdoors.
9. Do not let cord hang over the edge of the table or countertop or touch hot surfaces.
10. Do not place toaster on or near a hot gas or electric burner or in a heated oven.
11. Do not use this toaster for anything other than its intended use.
12. Oversized foods, metal foil packages or utensils must not be inserted in the toaster, as they may involve a risk of fire or electric shock.
13. A fire may occur if the toaster is covered or touching flammable materials, such as curtains, draperies or walls, when in operation. Do not operate under wall cabinets.
14. Do not attempt to dislodge food when the toaster is plugged into an electrical outlet.
15. To avoid possibility of fire, do not leave toaster unattended during use.
16. To disconnect, push the Cancel button, then remove plug from wall. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
17. Do not operate your appliance in an appliance garage or under a wall cabinet. When storing in an appliance garage, always unplug the unit from the electrical outlet. Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.

**SAVE THESE INSTRUCTIONS  
FOR HOUSEHOLD USE ONLY**

## **SPECIAL CORD SET INSTRUCTIONS**

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. Longer extension cords are available and may be used if care is exercised in their use.

If a long extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

**NOTICE:** This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

## **FEATURES AND BENEFITS**

### **1. Dual Toasting Slots**

Wide slots accommodate a variety of bread types.

### **2. High-Lift Lever**

Brings the toast close to the top of the toaster, making it easy to remove the smallest items.

### **3. LCD Display**

Black backlit LCD screen displays the selected shade setting and bread setting, the memory function, and

provides a countdown so you know when your toast is ready.

#### 4. **Memory Button**

MemorySet feature to program up to 4 of your favorite settings. See page 5 for more details.

#### 5. **Bread-Type Button**

Use to select your desired bread function (WHITE, GRAIN, BAGEL, SWEET, WAFFLE, ENG. MUFFIN or GLUTEN-FREE). Selected bread will be shown on the screen and will be marked by an arrow (e.g., when bagel is selected, **> BAGEL** will be displayed).

#### 6. **Single-Slice Button**

Evenly toasts, side to side. LED ring around button will illuminate when selected.


#### 7. **Defrost Button**

Defrosts then toasts frozen bread. LED ring around button will illuminate when selected.

#### 8. **Cancel Button**

Stops the toasting process and automatically lifts the bread.

#### 9. **Browning Shade Selector Buttons**

Use the “+” and “-” buttons to increase/decrease desired shade level (1–7). Currently selected shade setting will be shown on the LCD display under the  icon.

#### 10. **Slide-Out Crumb Tray (not shown)**

A removable tray located on back of toaster that collects crumbs and slides out for easy cleaning.

#### 11. **Cord Storage (not shown)**

Wraps the excess cord to keep countertop neat.



## **BEFORE FIRST USE**

Unwind the power cord. Check that the crumb tray is in place and that there is nothing in the toaster slots. Plug power cord into the wall outlet.

## **GENERAL OPERATION**

### 1. Insert slice(s) of bread

Be sure that the lever is in the up position.

### 2. Select desired bread options and/or functions

Choose among WHITE, GRAIN, BAGEL, SWEET, WAFFLE, ENG. MUFFIN, GLUTEN-FREE for your bread type, and select DEFROST if desired. Alternatively, use the MEMORY button to retrieve one of your 4 saved settings. Press the MEMORY button until your desired memory setting is displayed (if this option is chosen, skip to step 4).

### 3. Set the browning level

Use the “+” and “-” shade buttons to select your desired shade setting. The shade number will be displayed in the top left corner of the LCD display. Shade range is as follows:

#### SETTING

1–2

3–5

6–7

#### COLOR

light

medium

dark

### 4. To begin toasting

Press the carriage lever until it locks in the down position and toasting will begin. Remaining time for the toast cycle will begin to count down on the LCD display.

### 5. To stop cycle

When the toasting cycle is finished, the toast will be raised. If you wish to stop the cycle before it is finished, simply touch the CANCEL button.



### 6. After use, unplug the toaster from the electrical outlet.

**NOTE:** After 5 minutes of no operation, toaster will go into idle mode, LCD will turn off. Press any button or push down the start lever, and the LCD will turn on

## MEMORYSET FEATURE

The MemorySet feature is designed to easily save up to 4 of your preferred toast settings.

To program a memory setting:

1. Press the red MEMORY button to activate memory functions. Numbers 1-4 will show on the display.
2. Press the MEMORY button until your desired memory setting number is selected. Example: Press MEMORY button 3 times for memory setting 3.
3. Press and hold MEMORY button until flashing.
4. Select desired bread type by pressing the BREAD TYPE button until the desired setting is indicated by the  .
5. Select desired toast shade by using the +/- SHADE buttons until the desired shade setting displays under the  icon.
6. Confirm by pressing and holding the MEMORY button until selected bread type and toast shade stop flashing.

Or, if nothing is pressed for 5 seconds, flashing will stop automatically.


**NOTE:** Any memory function setting can be revised by repeating the steps above and overriding the current setting.

**NOTE:** Memory settings will remain saved even when toaster is unplugged.

### **To easily erase all memory settings:**

1. Unplug the toaster.
2. Press and hold the SINGLE and DEFROST buttons together.
3. Plug toaster into the power outlet and all memory settings should have reverted to default (White, shade 4).

## **FUNCTIONS**

- Bread functions are designed to toast, or defrost (in conjunction with the DEFROST setting) various types of bread based on their unique properties. Some breads require more or less time due to density, sugar content, and other factors.
- The WHITE function is designed for soft, white sandwich breads. These breads are made mostly of unrefined white flour, more commonly known as the sliced, packaged varieties found in the supermarket bread aisle, labeled as country or farmhouse white.
- The BAGEL function is designed to toast bagels to perfection by reducing heat on one side of the toasting slot. This toasts the cut side of the bagel slightly more than the other side.
-  A directional icon located on the top of the toaster shows you the correct way to insert your bagel. (The cut side should always face away from center of the pair of toasting slots.)
- The GRAIN function is designed for unrefined, nutrient-dense breads made from 100%, or mostly whole grains, with varieties such as whole wheat, sprouted whole grains, rye, oat, flax, etc.
- The ENGLISH MUFFIN function adds extra time to the toasting cycle to allow for a more dense bread type.
- The WAFFLE function is designed for waffles. The default setting is paired with the DEFROST function to defrost and then toast frozen waffles.
- The SWEET function is designed for breads with a higher sugar content (naturally occurring or added), such as raisin-cinnamon bread, fruit and nut bread, potato bread, some enriched breads (e.g., brioche, challah), etc.
- The GLUTEN-FREE function is designed for most types of gluten-free bread.
- NOTE: The GLUTEN-FREE function does not remove the gluten from your bread.

### **Defrost**

The DEFROST function is a longer cycle designed to first defrost and then toast the bread to the desired browning shade. LED ring around button will illuminate when selected.

### **Single Slice**

The SINGLE SLICE Function evenly toasts one slice of bread, side to side. LED ring around button will illuminate when selected.

### **Cancel**

The CANCEL function will stop the toasting process and automatically lift the bread.

## **TIPS AND HINTS**

## Notes on Browning

Toasting is a combination of cooking and drying of the bread. Therefore, differences in moisture level from one item to another can result in varying toasting times.

- For lighter, airier, or slightly dry breads, use a lower setting than normal.
- For very fresh bread, use the Grain setting.
- For breads with uneven surfaces, similar to English muffins or crumpets, use the English Muffin setting.
- For thicker, denser, or very fresh breads, use a higher browning setting than normal. Very thick slices may require a second cycle.
- When toasting raisin or other fruit breads, remove any loose raisins, etc., from the surface of the bread before placing into the toaster. This will help prevent fruit pieces from falling into the toaster or sticking on the guide wires in the slots.
- Before toasting bagels, slice into two equal halves.  
Frozen Bread, Waffles, Pancakes, French Toast and Bagels Use the Defrost function to defrost, and then toast these items.

Simply insert the frozen item, select desired function, select Defrost, select desired browning setting (1–7) and then press down the lever to start.

## Toaster Pastries

Exercise caution with toaster pastries; the filling can become quite hot, long before the surface of the pastry becomes browned. Start by using the lightest setting. Never leave toaster pastries unattended while toasting or warming.

## For Best Results

- Never force foods into the toasting slots. Foods should fit freely between the guide wires.
- Do not place buttered breads in the toaster, as this could create a fire hazard.
- Uneven toasting is usually due to inserting slices of uneven thickness.

## CLEANING AND MAINTENANCE

Always allow the toaster to cool completely before cleaning.

1. Always unplug the toaster from the electrical outlet before cleaning.
2. Do not use abrasive cleaners. Simply wipe the exterior with a clean, damp cloth and dry thoroughly.
3. To remove crumbs, slide out the crumb tray and discard crumbs. Wipe clean and replace. Never operate the toaster without the crumb tray in place.
4. To remove any pieces of bread remaining in the toaster, unplug the toaster, turn it upside down and gently shake. Never insert any hard or sharp instruments into the slots, as this could damage the toaster and cause a safety hazard.
5. Never wrap the cord around the outside of the toaster. Use the cord storage cleats on the underside of the toaster.
6. Any other servicing should be performed by an authorized service representative.

## WARRANTY



### **Limited Three-Year Warranty**

This warranty is available to U.S. consumers only. You are a consumer if you own a Cuisinart® 2-Slice Digital Toaster that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners. We warrant that your Cuisinart® 2-Slice Digital Toaster will be free of defects in materials and workmanship under normal home use for 3 years from the date of original purchase.

We recommend that you visit our website, [www.cuisinart.com](http://www.cuisinart.com) for a fast, efficient way to complete your product registration. However, product registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

### **CALIFORNIA RESIDENTS ONLY**

California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (A) to the store where it was purchased or (B) to another retail store that sells Cuisinart products of the same type. The retail store shall then, according to its preference, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If neither of the above two options results in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility, if service or repair can be economically accomplished. Cuisinart and not the consumer will be responsible for the reasonable cost of such service, repair, replacement, or refund for nonconforming products under warranty. California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair or, if necessary, replacement by calling our Consumer Service Center toll-free at 800-726-0190. Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling for such nonconforming products under warranty.


### **HASSLE-FREE REPLACEMENT WARRANTY**

Your ultimate satisfaction in Cuisinart products is our goal, so if your Cuisinart® 2-Slice Digital Toaster should fail within the generous warranty period, we will repair it or, if necessary, replace it at no cost to you. To obtain a return shipping label, email us at <https://www.cuisinart.com/customer-care/product-return>. Or call our toll-free customer service department at 1-800-726-0190 to speak with a representative. Your Cuisinart® 2-Slice Digital Toaster has been manufactured to the strictest specifications and has been designed for use only in 120-volt outlets and only with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by attempted use of this unit with a converter, as well as use with accessories, replacement parts or repair service other than those authorized by Cuisinart. This warranty does not cover any damage caused by accident, misuse, shipment or other than ordinary household use. This warranty excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of these damages, so these exclusions may not apply to you. You may also have other rights, which vary from state to state.




**Important:** If the nonconforming product is to be serviced by someone other than Cuisinart's Authorized Service Center, please remind the servicer to call our Consumer Service Center at 1-800-726-0190 to ensure that the problem is properly diagnosed, the product is serviced with the correct parts, and to ensure that the product is still under warranty.

©2020 Cuisinart  
East Windsor, NJ 08520  
Printed in China  
20CE070886  
IB-16675-ESP

### **Documents / Resources**

	<p><b><a href="#">Cuisinart CPT720 2 Slice Digital Toaster with Memory Set Feature</a></b> [pdf] Instruction Manual CPT720 2 Slice Digital Toaster with Memory Set Feature, CPT720 2, Slice Digital Toaster with Memory Set Feature, Memory Set Feature, Set Feature</p>
--	--

References

-  [Cuisinart's Kitchen Appliances for Professional and Home Chefs](#)
-  [Cuisinart's Kitchen Appliances for Professional and Home Chefs](#)
-  [Cuisinart's Kitchen Appliances for Professional and Home Chefs](#)